Air Cylinder/Direct Mount, Non-rotating Rod Type


CG1KR Series ©20, ©25, ©32 ©40, ©50, ©63



Construction

Non-rotating rod, bottom mounting

The production of this series has been discontinued Check the following before ordering. • New series CG1KR-Z ⇒ p. 32 • Checking whether the cylinder is a new or a previous model ⇒ p. 769, 770

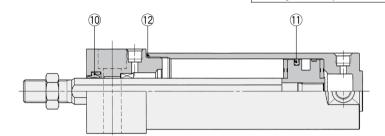

* The numbers correspond with those in the "Construction" of the CG1KR series in the Web Catalog.

Seal Kit List

No.	Description	Material	Note
10	Rod seal		
11)	Piston seal	NBR	
12	Tube gasket		

Disassembly/Replacement

⚠ Caution

1. Do not replace the bushings.

The bushings are press-fit. To replace them, they must be replaced together with the cover assembly.

2. To replace a seal, apply grease to the new seal before installing it.

If the cylinder is put into operation without applying grease to the seal, it could cause the seal to wear significantly, leading to premature air leakage.

3. Cylinders with ø50 or larger bore sizes cannot be disassembled.

When disassembling cylinders with bore sizes ø20 through ø40, grip the double flat part of either the head cover or the rod cover with a vise and loosen the other side with a wrench or a monkey wrench, etc., and then remove the cover. When re-tightening, tighten approximately 2 degrees more than the original position.

(Cylinders with ø50 or larger bore sizes are tightened with a large tightening torque and cannot be disassembled. If disassembly is required, please contact SMC.)

Replacement Parts: Seal Kit

riopiacomoni i artor ocarriti					
Bore size (mm)	Part no.	Contents			
With rubber bumper					
20	CG1KN20-PS				
25	CG1KN25-PS	Set of nos.			
32	CG1KN32-PS	10, 11, 12			
40	CG1KN40-PS				

Note) Order with a part number for each type and bore size.

* The seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)