
## RZQ Series Ø32, Ø40, Ø50, Ø63



## Construction

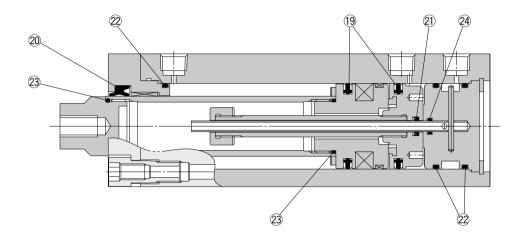

\* The numbers correspond with those in the "Construction" of the RZQ series in the Web Catalog.

## **Seal Kit List**

No.	Description	Material	Note
19	Piston seal	NBR	23 is a non-replaceable part, so it is not included in the seal kit.
20	Rod seal A		
21)	Rod seal B		
22	Gasket A		
23	Gasket B		
24	Gasket C		

Renlacement Parts: Seal Kit

riepiacement i arts. Sear Kit						
	Bore size (mm)	Part no.	Contents			
_	32	RZQ32-PS				
	40	RZQ40-PS	Set of nos.			
	50	RZQ50-PS	19, 20, 21, 22, 24			
_	63	RZQ63-PS				

- \* Seal kits are sets consisting of items (19, 20, 21, 22) and (24) and can be ordered using the seal kit number for each cylinder bore size.
- \* Since the seal kit does not include a grease pack, it should be ordered

Grease pack part no. GR-L-010 (10 g)

Actuators