

Pressure Gauge Guide Specific Product Precautions

Be sure to read this before handling the products. Refer to page 11 for safety instructions.

Selection

- 1. Do not apply high load voltage (current) or surge current as this can cause the switch to malfunction.
- 2. Make sure that no direct impact or vibrations are applied to the body.
- 3. If operating under pressure pulsations or in high frequency operations, please contact SMC.

Mounting

- 1. During transport and installation, do not apply shock to the product, such as by dropping doing so will affect its precision.
- Regarding the installation posture, place it perpendicular to the ground, with the zero point on the reading of a pressure gauge facing down.
- 3. Do not install it in an area that is exposed to high temperature or humidity, because doing so will lead to improper operation.
- To screw in the pressure gauge, make sure to turn the gauge by placing a wrench over the square wrench flats.

If the pressure gauge is screwed in by holding it on some other area, air leakage or damage may result.

