
 
**Air Cylinder/Low Friction Type** 

## MB Q Series ©32, ©40, Ø50 Ø63, Ø80, Ø100



## Construction

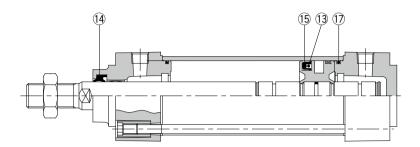



\* The numbers correspond with those in the "Construction" of the MB□Q series in the Web Catalog

## **Seal Kit List**

No.	Description	Material	Note
13	Back-up O-ring		
14)	Rod seal	16 is a non-replaceable NBR part, so it is not included	
15	Piston seal		
16	Cushion valve seal		in the seal kit.
17	Cylinder tube gasket		

Replacement Parts: Seal Kit

riepiacement i arts. Cear Kit					
	Bore size (mm)	Part no.	Contents		
	32	MBQ32-PS			
	40	MBQ40-PS			
	50	MBQ50-PS	Set of nos.		
	63	MBQ63-PS	13, 14, 15, 17		
	80	MBQ80-PS			
	100	MBQ100-PS			

- \* Seal kits consist of items (13, (14), (15) and (17), and can be ordered by using the seal kit number corresponding to each bore size.
- \* The trunnion type should not be disassembled.
- \* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-L-005 (5 g), GR-L-010 (10 g), GR-L-150 (150 g)