Rotary	/ Actua	tors
Air Gr	ippers	

1 Maintenance			·· p. 257
2 Troubleshooting			·· p. 258
3 Construction/Rep	placement Parts		
<rotary actuators=""></rotary>		Replacement Parts	Replacement Procedure
CRA1	Rotary Actuator/Rack & Pinion Type	p. 260	p. 513
CRQ2	Compact Rotary Actuator/Rack & Pinion Type	p. 262	p. 516
CRQ2X	Low-Speed Compact Rotary Actuator/Rack & Pinion Type	p. 263	p. 516
MSQ	Rotary Table/Rack & Pinion Type	p. 264	p. 521
MSQX	Low-Speed Rotary Table/Rack & Pinion Type	p. 265	_
MRQ	Rotary Cylinder	p. 266	_
<air grippers=""></air>		Replacement Parts	Replacement Procedure
JMHZ2	Compact Type Parallel Style Air Gripper	p. 267	p. 525
MHZ2	Parallel Type Air Gripper/Standard Type	p. 268	p. 527
MHZL2	Parallel Type Air Gripper/Long Stroke Type	p. 270	p. 527
MHZJ2	Parallel Type Air Gripper with Dust Cover	p. 271	p. 527
MHF2	Low Profile Air Gripper	p. 272	p. 532
MHF2-□F	Low Profile Air Gripper/With One Finger Fixed	p. 274	_
MHL2-Z	Wide Type Parallel Style Air Gripper	p. 275	p. 534
MHL2	Parallel Type Air Gripper/Wide Type	p. 276	p. 534
MHR3/MDHR3	Rotary Actuated Air Gripper/3-Finger Type	p. 277	p. 535
MHK2	Wedge Cam Operation Slide Guide Air Gripper/2-Finger Type	p. 278	p. 536
MHS2	Parallel Type Air Gripper/2-Finger Type	p. 279	p. 537
MHS3	Parallel Type Air Gripper/3-Finger Type	p. 280	p. 537
MHSJ3	Parallel Type Air Gripper/3-Finger Type with Dust Cover	p. 281	p. 539
MHSH3	Parallel Type Air Gripper/3-Finger Type: Through-hole Type	p. 282	p. 541
MHSH3-A	Parallel Type Air Gripper/3-Finger Type: Through-hole Type (Center pusher)	p. 283	p. 543
MHSL3	Parallel Type Air Gripper/3-Finger Type: Long Stroke	p. 284	p. 545
MHS4	Parallel Type Air Gripper/4-Finger Type	p. 285	p. 537
MHC2	Angular Type Air Gripper/Standard Type	p. 286	p. 547
MHT2	Toggle Type Air Gripper	p. 287	_
MHY2	180° Angular Type Air Gripper/Cam Type	p. 288	p. 549
MHW2	180° Angular Type Air Gripper/Rack & Pinion Type	p. 289	_



Rotary Actuators Air Grippers

Maintenance

The following describes the general contents of the rotary actuator and air gripper inspection items.

Actually, add inspection items suitable for the customer's specifications and perform the inspection work.

[Rotary Actuator]

■ Periodic inspection

Check followings for periodic inspection.

- 1) If the rotary actuator set screw become loose
- 2) Operating state
- 3) Leakage to outside
- 4) Is not the backlash of the rack-and-pinion abnormally large?

If any items are found by the inspection that require repairing, tighten any loose parts or disassemble the product to repair.

Precautions

- 1) Disassembling the product will void SMC's warranty. If disassembly is really necessary it is recommended to fully understand the internal construction before disassembling the products.
- 2) Do not damage the seals when reassembling the product.
- 3) If locking adhesive is applied to the bolts or screws, apply locking adhesive again during reassembly.

[Air Gripper]

Precautions

- Perform maintenance and inspection according to the procedures indicated in the operation manual.
 If handled improperly, human injury and/or malfunction or damage of machinery and equipment may occur.
- 2) If handled improperly, compressed air can be dangerous. Assembly, handling, repair, and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.
- 3) Remove drainage from air filters regularly.
- 4) Before air grippers are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.
 - When machinery is restarted, proceed with caution after confirming that appropriate measures are in place to prevent sudden movement.
- Do not allow people to enter or place objects in the carrying path of the air gripper.
 - This may cause human injury and/or an accident.
- 6) Do not put hands, etc., in between the air gripper fingers or attachments.
 - This may cause human injury and/or an accident.
- 7) When removing the air gripper, first confirm that no workpieces are being held and then release the compressed air before removing the air gripper.
 - If a workpiece is still being held, there is a danger of it being dropped.





2 Troubleshooting

The following describes the general contents of the troubleshooting.

[Rotary Actuator]

Trouble (Symptom)	Cause	Corrective action	
Actuator does not operate.	Stable speed adjusting range is not satisfied.	Use the product within the specified speed adjusting range.	
Adjust speed controller and check that rotation speed of actuator is within the specified	Increase in internal leakage due to internal seal damage caused by foreign matter and/or oil.	Replace the piston seal and gasket. (In general, the product requires replacement.)	
speed adjusting range.	Sealing failure of internal seal or increase in internal resistance due to the use out of the specified operating temperature range (including freezing).	Use the product within the specified operating temperature range. (In some cases of sealing failure, the piston seal and gasket require replacement.)	
a. Failure of peripheral components b. Improper adjusting of speed controllers c. Malfunction of solenoid valves d. Air supply shortage due to cloquing of		Use special products. (including measures against problems of pneumatic circuit).	
Shaft/Pinion breakage	Large load energy: a. Large load mass b. Fast operating speed c. Long rotation radius	Replace the shaft or pinion. a. Use the product with the allowable energy range. b. Install cushioning device and external stopper to absorb impact energy	
	External force other than load energy is applied.	Replace the shaft or pinion. Avoid excessive external force.	
	Offset load due to de-centering	Replace the shaft: Correct de-centering.	
Rotation angle failure	Breakage of the connection part of the rotation axis or internal stopper	Replace the connection part or product.	
Bearing breakage	Overload (Loads in radial and thrust directions are too heavy.)	Replace the bearing: Make radial and thrust loads be within the allowable range.	
	Offset load due to de-centering	Replace the bearing: Correct de-centering.	
	Large vibration	Replace the bearing: Absorb vibration.	
External leakage Sealing failure of O-ring due to be damage and/or shaft bending		Replace the bearing and/or shaft. Relieve external force.	
	Seal damage due to foreign matter and/or oil	Replace the seals. Prevent foreign matter and oil entrance.	
	Sealing failure due to the use out of the specified operating temperature range	Replace the piston seal and gasket. (The product requires replacement especially for the use at high temperature.) Use the product within the specified operating temperature range.	

Notice on Trouble and Troubleshooting

- Life is excluded from the causes.
- 2. Consult SMC for any causes other than those in the table above (except life) since the product may require disassembling check.

Rotary Actuators Air Grippers

2 Troubleshooting

The following describes the general contents of the troubleshooting.

[Air Gripper/MHZ]

Trouble (Symptom)		Cause	Check method	Corrective action
Air leakage (Air external leakage) Piston seal leakage (Air internal leakage)		Wear or damage of rod seals	Check if the intrusion of liquid or the adhesion of foreign matter is occurring on the sliding part of the piston rod.	Α
		Wear or damage of piston seals	Check if grease is remaining in the cylinder, or if intrusion of foreign matter is occurring.	В
		Wear or damage of rod seals	Check if the intrusion of liquid or the adhesion of foreign matter is occurring on the sliding part of the piston rod.	A
Noncon-	Sticking Operates slowly	Wear or damage of piston seals	Check if grease is remaining in the cylinder, or if intrusion of foreign matter is occurring.	В
operation	Tormance Does not operate	Increase of operating resistance in cylinder	Check if grease is remaining in the cylinder, or if intrusion of foreign matter is occurring.	В
		Increase of guide operating resistance	Check the lubrication condition of the guide, or adhesion of foreign matter.	С
Poor	Increase in amount	Wear of U groove transfer surface and steel balls of guide	Check if wear occurred on the U groove transfer surface and steel balls of the guide.	D
accuracy	of finger sway	An impression occurred on the U groove transfer surface of the guide	Check if an impression occurred on the U groove transfer surface of the guide.	E
	Finger breakage	Overload	Check if an impression occurred on the U groove transfer surface of the guide.	E
Damage	Guide damage Roller stopper damage	Poor rolling of the steel balls due to the occurrence of an impression	Check if an impression occurred on the U groove transfer surface of the guide.	E
		Poor rolling of the steel balls due to intrusion of foreign matter	Check if any foreign matter is caught in the U groove transfer surface of the guide.	F
Appearance defect	Occurrence of rust	Operating environment where water splashes, etc.	Check if the operating environment tends to generate rust caused by high humidity and water splashing, etc.	G

	★				
	Corrective action				
A	The rod seals may have worn and been damaged due to insufficient lubrication on the sliding part of the piston rod. 1. Check if there is any intrusion of liquid which will cause outflow of the grease. 2. Check if there is any intrusion of foreign matter which will accelerate the wear of the rod seals. In either case, consider use of the MHZJ series with dust cover. When the product is used in an environment where a large amount of liquid splashes, consider using a special product equipped with a fixed dust cover.				
В	■ This trouble may have been caused by the outflow of grease due to the intrusion of liquid, including condensation, drainage, coolant, etc., or intrusion of external foreign matter 1. Check if there is any intrusion of condensation or drainage, and consider taking actions against condensation, such as installing a quick exhaust valve, use of a moisture control tube, and reducing the tubing capacity. 2. Check if there is any intrusion of foreign matter in the cylinder.				
С	Insufficient lubrication and adhesion of foreign matter on the U groove transfer surface of the guide can be considered as the cause. 1. Check if there is any possibility of grease outflowing from the guide caused by the adhesion of liquid splashing in the surroundings. 2. Check if there is any possibility of the adhesion of foreign matter which will cause deterioration of the lubrication condition of the guide. In either case, consider use of the MHZJ series with dust cover. When the product is used in an environment where a large amount of liquid splashes, consider using a special product equipped with a fixed dust cover.				
D	The trouble may have been caused by an increase in the clearance between parts, due to wear of the U groove transfer surface and steel balls, caused by the worsening of the lubrication conditions of the guide. Check if there is any adhesion of foreign matter on the guide, and consider the use of a product with a dust cover (MHZJ series).				
E	■ The trouble may have been caused by interaction of an excessive moment on the fingers. 1. Check if there has been any interaction of an external force, such as contact with other equipment, etc. 2. Check if there has been any impact applied at the end of the opening/closing, caused by heavy attachment, the open/close speed being too fast, or the gripping point distance is too long, etc.				
F	The steel balls may have collided with the roller stopper with each operation, because normal rolling of the steel balls was obstructed due to the foreign matter caught on the U groove transfer surface of the guide. Check if there is any adhesion of foreign matter on the guide, and consider the use of a product with a dust cover (MHZJ series).				
G	Rust may occur depending on the operating environment. Consider the use of a product with a dust cover (MHZJ series) to prevent the adhesion of liquid.				

CRA1 Series Size: 30


The р. 513


Replacement Procedure is on

Construction


Size 30


Without air cushion

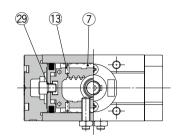

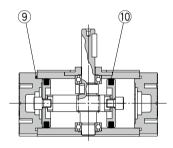

With air cushion

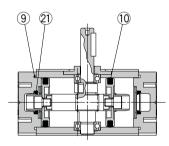

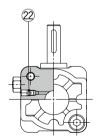

* The numbers correspond with those in the "Construction" of the CRA1 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
7	Slider	Resin	
9	Tube gasket	NBR	22 and 29 are
10	Piston seal	NBR	non-replaceable
13	Spring pin	Steel	parts, so they
21)	Cushion seal	Urethane	are not included
22	O-ring	NBR	in the seal kit.
29	O-ring	NBR	

Replacement Parts

Size		Part no.			
Size		Without air cushion	With air cushion		
30Note 2) 90°		P694010-20	P694010-22		
180°	180°	P694010-21	P694010-23		
Corresponding		7, 9, 10, 13 are included	7, 9, 10, 13, 21 are		
parts		as a set.	included as a set.		

Note 1) When ordering replacement parts, write "1" for one set of the parts per actuator.

Note 2) Replacement parts for different rotation angles are set.

A grease pack (10 g) is included.

Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)



Rotary Actuator/Rack & Pinion Type


CRA1 Series Size: 50 to 100




Construction


Sizes 50 to 100


Without air cushion

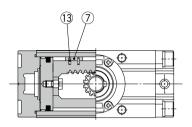

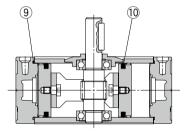

With air cushion

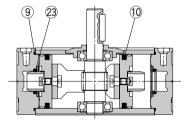

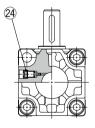

* The numbers correspond with those in the "Construction" of the CRA1 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
7	Slider	Resin	
9	Tube gasket	NBR	24 is a non-
10	Piston seal	NBR	replaceable part, so it is
13	Spring pin	Steel	not included in
23	Cushion seal	Urethane	the seal kit.
24	O-ring	NBR	ano ooan aa

Replacement Parts

Size	Part no.				
Size	Without air cushion With air cushion		Air-hydro		
50	P694020-20	P694020-21	P694020-23		
63	P694030-20	P694030-21	P694030-23		
80	P694040-20	P694040-21	P694040-23		
100	P694050-20	P694050-21	P694050-23		
Corresponding	7, 9, 10, 13 are	7, 9, 10, 13, 23 are	7, 9, 10, 13 are		
parts	included as a set.	included as a set.	included as a set.		

Note) When ordering replacement parts, write "1" for one set of the parts per actuator.

A grease pack (10 g) is included.

Order with the following part number when only the grease pack is

Grease pack part no.: GR-S-010 (10 g)




CRQ2 Series Size: 10, 15, 20 30, 40




Construction


Sizes 10, 15

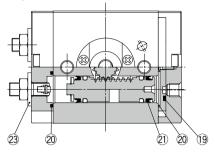


With auto switch Sizes 10, 15

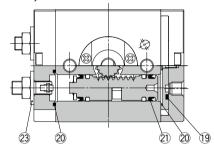


With cushion Sizes 20, 30, 40

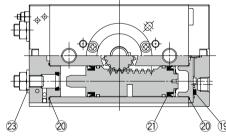


Sizes 20, 30, 40

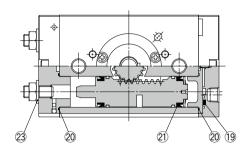

With auto switch Sizes 20, 30, 40

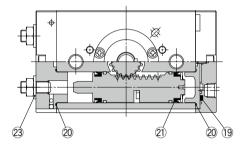

With auto switch and cushion Sizes 20, 30, 40

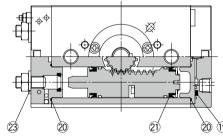

* The numbers correspond with those in the "Construction" of the CRQ2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
19	Seal	NBR	
20	Gasket	NBR	
21)	Piston seal	NBR	
23	Seal washer	NBR	

Replacement Parts

Description	Size				
Description	10	15	20	30	40
Seal kit part no.	P473010-1	P473020-1	P473030-1	P473040-1	P473050-1

A grease pack (10 g) is included. Order with the following part number when only the grease pack is required.

Grease pack part no.: GR-S-010 (10 g)

Contents

	No.	Description		Note
	19	Seal	1	
	Gasket for cover	2	Ciao, 10, 15	
	20	Gasket for end cover	1	Size: 10, 15
parts		Gasket	4	Size: 20, 30, 40
	21	Piston seal	4	
	23	Seal washer	2	

* A set includes all parts above.

Air Preparation Equipment

^{*} Individual part cannot be shipped.


Low-Speed Compact Rotary Actuator/Rack & Pinion Type

CRQ2X Series Size: 10, 15, 20 30, 40




Construction


Sizes 10, 15

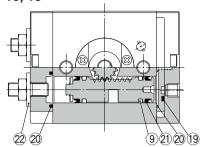


Sizes 20, 30, 40

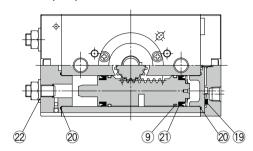

With auto switch Sizes 10, 15

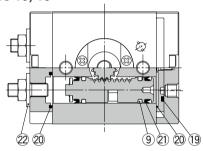

With auto switch Sizes 20, 30, 40

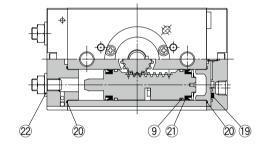

Component Parts

No.	Description	Material	Note
9	Wear ring	Resin	
19	Seal	NBR	
20	Gasket	NBR	
21)	Piston seal	NBR	
22	Seal washer	NBR	

Replacement Parts

Description			Size			Contents
Description	10	15	20	30	40	Contents
Seal kit part no.	P473010-23	P473020-23	P473030-23	P473040-23	P473050-23	Set of nos. 9, 19, 20, 21, 22

Contente

CUI	Contents										
No.	Description	Qty.	Note								
9	Wear ring	4									
19	Seal	1									
	Gasket for cover	2	Size: 10, 15								
20	Gasket for end cover	1	Size. 10, 15								
	Gasket	4	Size: 20, 30, 40								
21	Piston seal	4									
22	Seal washer	2									

^{*} A set includes all parts above.

Replacement parts/Grease pack part no.: P523010-21 (10 g)




^{*} The numbers correspond with those in the "Construction" of the CRQ2X series in the Web Catalog.


A grease pack (10 g) is included. Order with the following part number when only the grease pack is required.

MSQ Series Size: 10, 20, 30, 50, 70, 100, 200

The Replacement Procedure is on p. 521

Construction

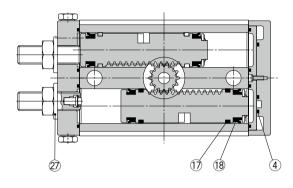

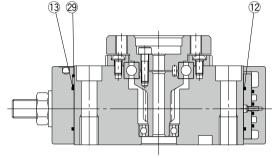

Component Parts

No.	Descrip	otion	Material	Note			
4	Seal	NBR					
12	Gasket	NBR					
13	Gasket	NBR					
17	Wear ring	Resin					
18	Piston seal	Piston seal					
27)	Seal washer	NBR					
29	O-ring	Size: 70 to 200 only	NBR				

* The numbers correspond with those in the "Construction" of the MSQ series in the **Web Catalog**.

Replacement Parts: Basic Type

replace	ment i arts. basic Type																				
Description		Size																			
Description		10			20			30			50			70			100			200	
Seal kit part no.		P523010-5			P523020-5			P523030-5			P523040-5			P391050-5			P391060-5		П	P391070-5	
	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
	4	Seal	1	4	Seal	1	4	Seal	1	4	Seal	1	4	Seal	1	4	Seal	1	4	Seal	1
Parts included	12	Gasket	1	12	Gasket	1	12	Gasket	1	12	Gasket	1	12	Gasket	4	12	Gasket	4	12	Gasket	4
in seal kit	13	Gasket	1	13	Gasket	1	13	Gasket	1	13	Gasket	1	17	Wear ring	4	17	Wear ring	4	17	Wear ring	4
in seai kii	17	Wear ring	4	17	Wear ring	4	17	Wear ring	4	17	Wear ring	4	18	Piston seal	4	18	Piston seal	4	18	Piston seal	4
	18	Piston seal	4	18	Piston seal	4	18	Piston seal	4	18	Piston seal	4	27	Seal washer	2	27	Seal washer	2	27	Seal washer	2
	27	Seal washer	2	27	Seal washer	2	27	Seal washer	2	27	Seal washer	2	29	O-ring	4	29	O-ring	4	29	O-ring	4

^{*} A set includes all parts above.

A grease pack (10 g) is included. Order with the following part number when

only the grease pack is required.

Replacement parts/Grease pack part no.: GR-S-010 (10 g)

Replacement Parts: With External Shock Absorber


Description		Si	ze		Note			
	10	20	30	50	Note			
Seal kit part no.	part no. P523010-6 P523020-6 P523030-6 P523040-6				The seal washer ${\mathfrak D}$ is excluded from the kit contents of the basic type.			


Actuators

Low-Speed Rotary Table/Rack & Pinion Type

MSQX Series Size: 10, 20, 30, 50

Construction

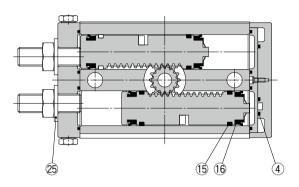

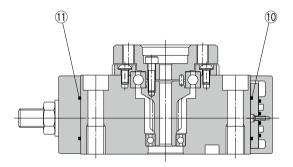

Component Parts

No.	Description	Material	Note
4	Seal	NBR	
10	Gasket	NBR	
11)	Gasket	NBR	
15	Wear ring	Resin	
16	Piston seal	NBR	
25	Seal washer	NBR	

* The numbers correspond with those in the "Construction" of the MSQX series in the Web Catalog.

Replacement Parts

Description		Size											
Description	10				20			30		50			
Seal kit part no.		P523010-20		P523020-20			P523030-20			P523040-20			
	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.	
	4	Seal	1	4	Seal	1	4	Seal	1	4	Seal	1	
Parts included	10	Gasket	1	10	Gasket	1	10	Gasket	1	10	Gasket	1	
in seal kit	11	Gasket	1	11	Gasket	1	11	Gasket	1	11	Gasket	1	
	15	Wear ring	4	15	Wear ring	4	15	Wear ring	4	15	Wear ring	4	
	16	Piston seal	4	16	Piston seal	4	16	Piston seal	4	16	Piston seal	4	
	25	Seal washer	2	25	Seal washer	2	25	Seal washer	2	25	Seal washer	2	

^{*} A set includes all parts above.


Replacement parts/Grease pack part no.: P523010-21 (10 g)



A grease pack (10 g) is included. Order with the following part number when only the grease pack is required.

MRQ Series

Construction

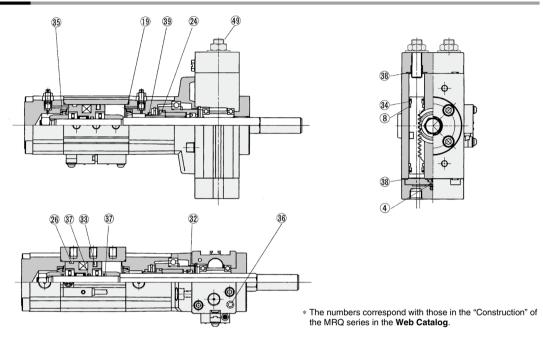

Component Parts

COIII	ponent i arts		
No.	Description	Material	Note
4	Seal	NBR	
8	Wear ring	Resin	
19	Tube gasket	NBR	
24	O-ring	NBR	
26	Wear ring	Resin	24, 35, 37, and
32	Rod seal	NBR	38 are
33	Piston seal	NBR	non-replaceable
34)	Piston seal	NBR	parts, so they
35	Cushion seal	NBR	are not
36	O-ring	NBR	included in the
37	O-ring	NBR	seal kit.
38	O-ring	NBR	
39	O-ring	NBR	
49	Seal washer	Steel wire	

Replacement Parts

Description	Size							
Description		40						
Spare parts assembly part no.		P31702-1						
	No.	Descr	iption	Qty.				
	4	Seal		1				
	8	8 Wear ring						
	19	Tube gasket		2				
	26	Wear ring		1				
Parts included	32	Rod seal		1				
in the spare parts	33	Piston seal		1				
	34	Piston seal		4				
	36	O-ring		4				
	38	O-ring		4				
	39	O-ring	-	1				
	49	Seal washer		2				

only the grease pack is required.

Replacement parts/Grease pack part no.: GR-S-010 (10 g)


^{*} Individual part cannot be shipped.

JMHZ2 Series 08, 012, 016, 020




Construction


Double acting, With fingers open

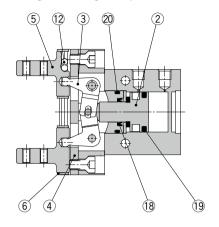


Single acting, Normally open

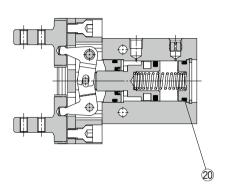

Double acting, With fingers closed

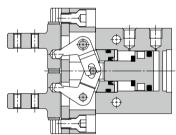

Single acting, Normally closed

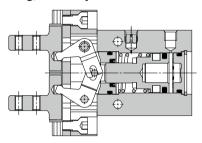

Component Parts

No.	Description	Note
2	Piston assembly	
3	Lever	
4	Guide	
5	Finger	
6	Roller stopper	

No.	Description	Note
12	Steel ball	
18	Rod seal	
19	Piston seal	
20	Gasket	

Replacement Parts/Part Nos.

Descri	ption	JMHZ2-8	JMHZ2-12	JMHZ2-16	JMHZ2-20	Contents
	JMHZ2-□□D	JMHZ8-PS	JMHZ12-PS	JMHZ16-PS	JMHZ20-PS	
Seal kit	JMHZ2-□□S	JMHZ8S-PS	JMHZ12S-PS	JMHZ16S-PS	JMHZ20S-PS	181920
	JMHZ2-□□C	JIVINZ03-P3	JIVITZ 125-P5	JIVITZ 103-P3	JIVINZ203-P3	
	JMHZ2-□□□	JMHZ-A0802	JMHZ-A1202	JMHZ-A1602	JMHZ-A1602	0000
Finger assembly	JMHZ2-□□□1	JMHZ-A0802-1	JMHZ-A1202-1	JMHZ-A1602-1	JMHZ-A1602-1	45612 Mounting screw
	JMHZ2-□□□2	JMHZ-A0802-2	JMHZ-A1202-2	JMHZ-A1602-2	JMHZ-A1602-2	
	JMHZ2-□□D	JMHZ-A0803	JMHZ-A1203	JMHZ-A1603	JMHZ-A2003	
Piston assembly	JMHZ2-□□S	JMHZ-A0803S	JMHZ-A1203S	JMHZ-A1603S	JMHZ-A2003S	2
	JMHZ2-□□C	JMHZ-A0803C	JIVITZ-A 12035	JIVITZ-A 16035	JIVITZ-A20035	
Lever assembly		JMHZ-A0804	JMHZ-A1204	JMHZ-A1604	JMHZ-A2004	3

^{*} Finger option

Grease pack part no.: GR-S-010 (10 g)



^{1 =} Side tapped, 2 = Through-hole


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


MHZ2 Series (910, 916, 920, 925)



Construction

MHZ2-10 to 25

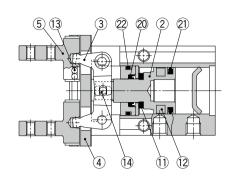

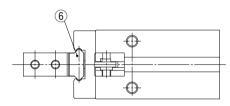

* The numbers correspond with those in the "Construction" of the MHZ2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	ø10, ø16: Stainless steel ø20, ø25: Aluminum alloy	
3	Lever	Stainless steel	
4	Guide	Stainless steel	
5	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
11	Bumper	Urethane rubber	

No.	Description	Material	Note
12	Rubber magnet	Synthetic rubber	
13	Steel ball	High carbon chrome bearing steel	
14)	Needle roller	High carbon chrome bearing steel	
20	Rod seal	NBR	
21)	Piston seal	NBR	
22	Gasket	NBR	
	•		

Popleoment Parts/Part Nos : Double Acting Single Acting

Des	cription	MHZ2-10	MHZ2-16	MHZ2-20	MHZ2-25	Main parts
Seal kit	MHZ2-□□D□ MHZ2-□□C□	MHZ10-PS	MHZ16-PS	MHZ20-PS	MHZ25-PS	202)22
	MHZ2-□□S□	MHZ10S-PS	MHZ16S-PS	MHZ20S-PS	MHZ25S-PS	
	MHZ2-□□□(N)	MHZ-AA1002(N)	MHZ-AA1602(N)	MHZ-AA2002(N)	MHZ-AA2502(N)	
Cingge coccuply	MHZ2-□□□(N)1	MHZ-AA1002(N)-1	MHZ-AA1602(N)-1	MHZ-AA2002(N)-1	MHZ-AA2502(N)-1	45613
Finger assembly	MHZ2-□□□(N)2	MHZ-AA1002(N)-2	MHZ-AA1602(N)-2	MHZ-AA2002(N)-2	MHZ-AA2502(N)-2	Mounting screw
	MHZ2-□□□3	MHZ-AA1002-3	MHZ-AA1602-3	MHZ-AA2002-3	MHZ-AA2502-3	7
	MHZ2-□□D□					
Piston assembly	MHZ2-□□S□	MHZ-AA1003	MHZ-AA1603	MHZ-AA2003	MHZ-AA2503	2(1)(2(4)
•	MHZ2-□□C□					
	MHZ2-□□D□W	MHZ-A1007	MHZ-A1607	MHZ-A2007	MHZ-A2507	Main bank of adout
End boss assembly	MHZ2-□□□□K	MHZ-A1008	MHZ-A1608	MHZ-A2008	MHZ-A2508	Main body of adapto
	MHZ2-□□□□M	MHZ-A1009	MHZ-A1609	MHZ-A2009	MHZ-A2509	Mounting screw for
	MHZ2-□□□□E	MHZ-A1010	MHZ-A1610	MHZ-A2010	MHZ-A2510	adaptor Seal
Lever assembly		MHZ-AA1004	MHZ-AA1604	MHZ-AA2004	MHZ-AA2504	(3)

* Finger option

1 = Side tapped, 2 = Through-hole, 3 = Flat type fingers

* End boss type

 \dot{W} = One-touch fitting for coaxial tubing, \dot{K} = With One-touch fitting, \dot{M} = With M5 port, \dot{E} = Side ported

* The end boss assembly other than type E should be mounted on the special body.

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Modular F.R.L.

Air Preparation Equipment

Industrial Filters

Replacement Procedure

Rotary Actuators Air Grippers

Air Preparation Equipment Industrial Filters




Parallel Type Air Gripper/Standard Type


MHZ2 Series (32, 940)



Construction

MHZ2-32 to 40

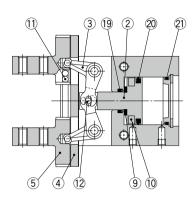

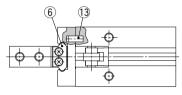

* The numbers correspond with those in the "Construction" of the MHZ2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	Aluminum alloy	
3	Lever	Stainless steel	
4	Guide	Stainless steel	
5	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
9	Bumper	Urethane rubber	
10	Rubber magnet	Synthetic rubber	
11	Steel ball	High carbon chrome bearing steel	

No.	Description	Material	Note
12	Needle roller	High carbon chrome bearing steel	
13	Parallel pin	Stainless steel	
19	Rod seal	NBR	
20	Piston seal	NBR	
21)	Gasket	NBR	

Replacement Parts/Part Nos.: Double Acting, Single Acting

replacement rates, art needs bouble Acting, chighe Acting					
Description Seal kit		MHZ2-32	MHZ2-40	Main parts	
		MHZ32-PS	MHZ40-PS	192021	
	MHZ2-□□□	MHZ-A3202	MHZ-A4002		
Finger assembly	MHZ2-□□□1	MHZ-A3202-1	MHZ-A4002-1	456113	
ringer assembly	MHZ2-□□□2	MHZ-A3202-2	MHZ-A4002-2	Mounting screw	
	MHZ2-□□□3	MHZ-A3202-3	MHZ-A4002-3		
	MHZ2-□□D□	MHZ-A3203	MHZ-A4003		
Piston assembly	MHZ2-□□S□	MUZ 40000		291012	
	MHZ2-□□C□	MHZ-A3203S	MHZ-A4003S		
Lever assembly		MHZ-A3204	MHZ-A4004	3	

^{*} Finger option

Grease pack part no.: GR-S-010 (10 g)



^{1 =} Side tapped, 2 = Through-hole, 3 = Flat type fingers


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


MHZL2 Series §10, Ø16, Ø20, Ø25



Construction

MHZL2-10 to 25

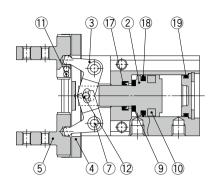

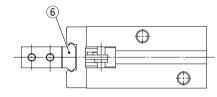

* The numbers correspond with those in the "Construction" of the MHZL2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	ø10, ø16: Stainless steel ø20, ø25: Aluminum alloy	
3	Lever	Stainless steel	
4	Guide	Stainless steel	
5	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
7	Lever shaft	Stainless steel	
9	Bumper	Urethane rubber	

No.	Description	Material	Note
10	Rubber magnet	Synthetic rubber	
11)	Steel ball	High carbon chrome bearing steel	
12	Needle roller	High carbon chrome bearing steel	
17	Rod seal	NBR	
18	Piston seal	NBR	
19	Gasket	NBR	

Benjacement Parts/Part Nos.: Double Acting, Single Acting

Description		MHZL2-10	MHZL2-16	MHZL2-20	MHZL2-25	Main parts
Seal kit		MHZL10-PS	MHZL16-PS	MHZL20-PS	MHZL25-PS	171819
	MHZL2-□□□	MHZL-AA1002	MHZL-AA1602	MHZL-AA2002	MHZL-AA2502	
Finger assembly	MHZL2-□□□1	MHZL-AA1002-1	MHZL-AA1602-1	MHZL-AA2002-1	MHZL-AA2502-1	45611
riliger assembly	MHZL2-□□□2	MHZL-AA1002-2	MHZL-AA1602-2	MHZL-AA2002-2	MHZL-AA2502-2	Mounting screw
	MHZL2-□□□3	MHZL-AA1002-3	MHZL-AA1602-3	MHZL-AA2002-3	MHZL-AA2502-3]
	$MHZL2-\Box\Box D\Box$	MHZL-A1003	MHZL-A1603	MHZL-A2003	MHZL-A2503	291012
Piston assembly	MHZL2-□□S□	WINZL-A 1003	WITIZE-A 1003	WITZL-AZ003	MITZL-A2503	
	MHZL2-□□C□	MHZL-A1003C	MHZL-A1603C	MHZL-A2003C	MHZL-A2503C	
	$MHZL2-\Box\Box D\Box W$	MHZ-A1007	MHZ-A1607	MHZ-A2007	MHZ-A2507	Main body of adaptor
End boss	MHZL2-□□□□K	MHZ-A1008	MHZ-A1608	MHZ-A2008	MHZ-A2508	Mounting screw for
assembly	MHZL2-□□□□M	MHZ-A1009	MHZ-A1609	MHZ-A2009	MHZ-A2509	adaptor Seal
	MHZL2-□□□□E	MHZ-A1010	MHZ-A1610	MHZ-A2010	MHZ-A2510	adaptor obai
Lever assembly		MHZL-A1004	MHZL-A1604	MHZL-A2004	MHZL-A2504	(3)(7)

* Finger option

1 = Side tapped, 2 = Through-hole, 3 = Flat type fingers

W = One-touch fitting for coaxial tubing, K = With One-touch fitting, M = With M5 port, E = Side ported

* The end boss assembly other than type E should be mounted on the special body.

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Replacement Procedure

Air Preparation Equipment

Industrial Filters



270


Parallel Type Air Gripper with Dust Cover


MHZJ2 Series §10, Ø16, Ø20, Ø25



Construction

MHZJ2-10 ☐ to 25 ☐

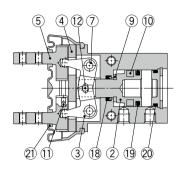

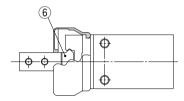

* The numbers correspond with those in the "Construction" of the MHZJ2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	ø10, ø16: Stainless steel ø20, ø25: Aluminum alloy	
3	Lever	Stainless steel	
4	Guide	Stainless steel	
5	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
7	Lever shaft	Stainless steel	
9	Bumper	Urethane rubber	
10	Rubber magnet	Synthetic rubber	
11)	Steel ball	High carbon chrome bearing steel	

No.	Description	Material	Note
12	Needle roller	High carbon chrome bearing steel	
18	Rod seal	NBR	
19	Piston seal	NBR	
20	Gasket	NBR	
		Chloroprene rubber	
21)	Dust cover	Fluororubber	
		Silicone rubber	

Replacement Parts/Part Nos.: Double Acting, Single Acting

Description			MHZJ2-10	MHZJ2-16	MHZJ2-20	MHZJ2-25	Main parts
Seal kit	Seal kit		MHZJ10-PS	MHZJ16-PS	MHZJ20-PS	MHZJ25-PS	181920
	<u>a</u> .	Chloroprene rubber	MHZJ2-J10	MHZJ2-J16	MHZJ2-J20	MHZJ2-J25	
Dust cover	Material	Fluororubber	MHZJ2-J10F	MHZJ2-J16F	MHZJ2-J20F	MHZJ2-J25F	21)
	ĺ≌̃	Silicone rubber	MHZJ2-J10S	MHZJ2-J16S	MHZJ2-J20S	MHZJ2-J25S	
Finger assembly		MHZJ-AA1002	MHZJ-AA1602	MHZJ-AA2002	MHZJ-AA2502	4 5 6 11 Mounting screw	
Piston assembly		MHZJ-A1003	MHZJ-A1603	MHZJ-A2003	MHZJ-A2503	291012	
	MHZJ2-□□D□W		MHZ-A1007	MHZ-A1607	MHZ-A2007	MHZ-A2507	Main body of adaptor
End boss	MHZJ	MHZJ2-□□□□K	MHZ-A1008	MHZ-A1608	MHZ-A2008	MHZ-A2508	Mounting screw for
assembly		MHZJ2-□□□□M	MHZ-A1009	MHZ-A1609	MHZ-A2009	MHZ-A2509	adaptor Seal
		MHZJ2-□□□□E	MHZ-A1010	MHZ-A1610	MHZ-A2010	MHZ-A2510	auapioi Seai
Lever assembly		MHZJ-A1004	MHZJ-A1604	MHZJ-A2004	MHZJ-A2504	ø10, ø16: ③ ø20, ø25: ③⑦	

Grease pack part no.: GR-S-010 (10 g)



W = One-touch fitting for coaxial tubing, K = With One-touch fitting, M = With M5 port, E = Side ported

^{*} The end boss assembly other than type E should be mounted on the special body.


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


MHF2 Series .8




Construction

MHF2-8D, MHF2-8D1

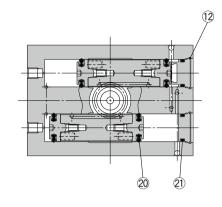

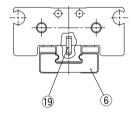

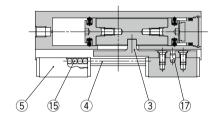

Component Parts

No.	Description	Description Material	
3	Joint	Stainless steel	
4	Guide rail	Stainless steel	
(5)	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
12	Clip	Stainless steel wire	
15	Steel ball	High carbon chrome bearing steel	
17	Roller	High carbon chrome bearing steel	
19	Parallel pin	Stainless steel	
20	Piston seal	NBR	
21)	Gasket	NBR	

* The numbers correspond with those in the "Construction" of the MHF2 series in the **Web Catalog**.

Replacement Parts/Part Nos.

	ricplacement i dits/i dit Nos.				
Ī	Description		Model		Comtonto
	Description	MHF2-8D	MHF2-8D1	MHF2-8D2	Contents
	Seal kit	MHF8-PS	MHF8-PS	MHF8-PS-2	122021
	Finger assembly	MHF-A0802	MHF-A0802-1 MHF-A0802-2	MUE ADODO O	3456151719
	ringer assembly	WITH-AU602		Mounting screw	

 $[\]ast$ Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part nos. Guide unit: GR-S-010 (10 g) Cylinder unit: GR-L-005 (5 g)

Bolts for Body Through-hole Mounting

Part no.	Number of pieces		
	MHF2-8D	2 pieces/unit	
MHF-B08	MHF2-8D1	2 pieces/unit	
	MHF2-8D2	4 pieces/unit	

* The bolts for body through-hole mounting are attached to the product. But you can also place an order for just 1 piece with this part number.




Low Profile Air Gripper


MHF2 Series (12, §16, §20)




Construction

MHF2-12D ☐ to 20D ☐

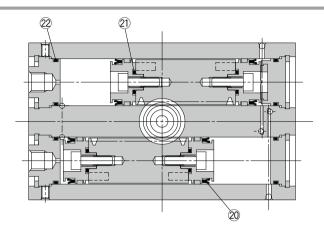

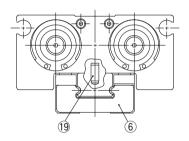

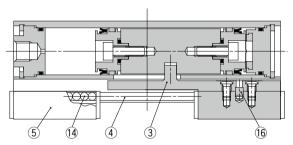

* The numbers correspond with those in the "Construction" of the MHF2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
3	Joint	Stainless steel	
4	Guide rail	Stainless steel	
5	Finger	Stainless steel	
6	Roller stopper	Stainless steel	
14)	Steel ball	High carbon chrome bearing steel	
16	ø12: Roller	High carbon chrome bearing steel	
	ø16 to ø20: Parallel pin	Stainless steel	

No.	Description	Material	Note
19	Parallel pin	Stainless steel	
20	Piston seal	NBR	
21)	Gasket	NBR	
22	Gasket	NBR	

Replacement Parts/Part Nos.

ricpiacement i artisti artistos.				
Description		Model		Contents
Description	MHF2-12D	MHF2-12D1	MHF2-12D2	Contents
Seal kit	MHF12-PS	MHF12-PS	MHF12-PS	202122
Finger assembly	MHF-A1202	MHF-A1202-1	MHF-A1202-2	345614619 Mounting screw
Description		Model		Contents
Description	MHF2-16D	MHF2-16D1	MHF2-16D2	Contents
Seal kit	MHF16-PS	MHF16-PS	MHF16-PS	202122
Finger assembly	MHF-A1602	MHF-A1602-1	MHF-A1602-2	3456469 Mounting screw
Description		Model		Contents
Description	MHF2-20D	MHF2-20D1	MHF2-20D2	Contents
Seal kit	MHF20-PS	MHF20-PS	MHF20-PS	202122
Finger assembly	MHF-A2002	MHF-A2002-1	MHF-A2002-2	3456141619 Mounting screw

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

Grease Pack Part Nos

Glease Fack Fait Nos.				
MHF2-□□D, D1 (ø12, ø16, ø20)	GR-S-010 (10 g) (Guide unit)			
MHF2-□□D2 (ø12)	GR-L-005 (5 g) (Cylinder unit)			
MHF2-□□D2 (ø16, ø20)	GR-S-010 (10 g) (Guide unit)			
WITE2-LLD2 (016, 020)	GR-L-010 (10 g) (Cylinder unit)			

Bolts for Body Through-hole Mounting

Part no. Number		f pieces
	MHF2-12D	2 pieces/unit
MHF-B12	MHF2-12D1	2 pieces/unit
	MHF2-12D2	4 pieces/unit

- * The bolts for body through-hole mounting are attached to the product. But you can also place an order for just 1 piece with this part number.
- an order for just 1 piece with this part number.

 * When mounting MHF2-16D□ or MHF2-20D□
 with the body through-holes, use hexagon
 socket head cap screws available on the
 market.







MHF2- F Series (88, \$\oldsymbol{0}12, \$\oldsymbol{0}16, \$\oldsymbol{0}20\$)


Construction


MHF2-8FD□R

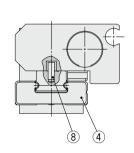

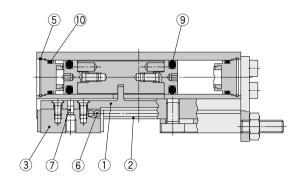

MHF2-12FD□R to MHF2-20FD□R

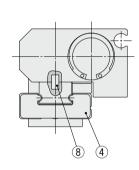

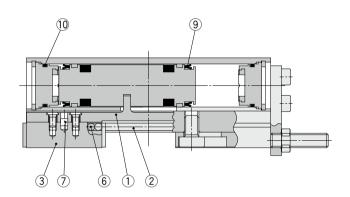

Component Parts

No.	Description	Note
1	Joint	
2	Guide rail	
3	Finger	
4	Roller stopper	
(5)	Clip	
6	Steel ball	

No.	Description	Note
(7)	Roller (ø8, ø12)	
<i>(</i>)	Parallel pin (ø16, ø20)	
8	Parallel pin	
9	Piston seal	
10	Gasket	

* The numbers correspond with those in the "Construction" of the MHF2-DF series in the Web Catalog.

Finger Assembly/Part Nos.

g,,,, and				
Part no.	Contents			
MHF-AA0802F	0.000.000.000			
MHF-AA0802F-1	1234678 Guide rail mounting screw			
MHF-AA0802F-2	Guide fall mounting screw			
MHF-AA1202F	0.000.000.000			
MHF-AA1202F-1	1234678 Guide rail mounting screw			
MHF-AA1202F-2	Guide fall mounting screw			
MHF-AA1602F	0.000.000			
MHF-AA1602F-1	1234678 Guide rail mounting screw			
MHF-AA1602F-2	Guide fall mounting screw			
MHF-AA2002F	0.000.000.000			
MHF-AA2002F-1	1234678 Guide rail mounting screw			
MHF-AA2002F-2	Guide fail mounting screw			
	MHF-AA0802F MHF-AA0802F-1 MHF-AA0802F-2 MHF-AA1202F MHF-AA1202F-1 MHF-AA1602F-2 MHF-AA1602F-1 MHF-AA1602F-1 MHF-AA1602F-2 MHF-AA2002F			

Grease Pack Part Nos.

Guide unit: GR-S-010 (10 g)

Actuators

Wide Type Parallel Style Air Gripper


MHL2-Z Series 010, 016, 020 025, 032, 040




Construction

ø10

ø16 to ø40

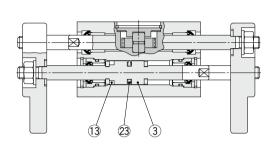

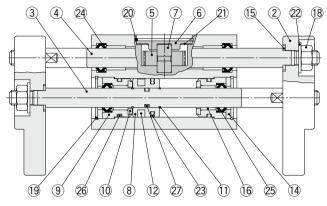

Component Parts

* The numbers correspond with those in the "Construction" of the MHL2-Z series in the Web Catalog.

No.	Description	Material	Note
2	Finger	Aluminum alloy	
3	Piston rod	Stainless steel	
4	Rack	Stainless steel	
5	Pinion	Carbon steel	
6	Pinion cover	Carbon steel	
7	Pinion axis	Stainless steel	
8	Piston	Aluminum alloy	
9	Rod cover	Aluminum alloy	
10	Bumper	Urethane rubber	
11)	Clip	Stainless steel spring wire	
12	Rubber magnet	Synthetic rubber	
13	Magnet	_	
14	Rod seal cover B	Cold rolled carbon steel sheet	

No.	Description	Material	Note
15	Washer	Stainless steel	
16	Bearing	Oil containing polyacetal	
18	U-nut	Carbon steel	
19	Inverted internal retaining ring	Carbon steel	
20	Basic internal retaining ring	Carbon steel	
21)	Wave washer	Steel for spring	
22	Conical spring washer	Carbon steel	
23	Piston seal	NBR	
24)	Rod seal	NBR	
25	Rod seal	NBR	
26	Gasket	NBR	
27)	Gasket	NBR	

Renlacement Parts/Part Nos

neplacement Faits/Fait Nos.								
De	scription	MHL2-10□Z	MHL2-16□Z	MHL2-20□Z	MHL2-25□Z	MHL2-32□Z	MHL2-40□Z	Contents
Seal kit		MHL10-PS	MHL16-PS	MHL20-PS	MHL25-PS	MHL32-PS	MHL40-PS	23/24/25/26/27
	MHL2-□□DZ	MHL-AA1001	MHL-AA1601	MHL-AA2001	MHL-AA2501	MHL-AA3201	MHL-AA4001	ø10: ③①①323
Piston assembly	MHL2-□□D1Z	MHL-AA1002	MHL-AA1602	MHL-AA2002	MHL-AA2502	MHL-AA3202	MHL-AA4002	ø 16 to ø 40: 3 8 11 12 23 27
assembly	MHL2-□□D2Z	MHL-AA1003	MHL-AA1603	MHL-AA2003	MHL-AA2503	MHL-AA3203	MHL-AA4003	01010040. 300110232
	MHL2-□□DZ	MHL-AA1004	MHL-AA1604	MHL-AA2004	MHL-AA2504	MHL-AA3204	MHL-AA4004	
Rack	MHL2-□□D1Z	MHL-AA1005	MHL-AA1605	MHL-AA2005	MHL-AA2505	MHL-AA3205	MHL-AA4005] ④
	MHL2-□□D2Z	MHL-AA1006	MHL-AA1606	MHL-AA2006	MHL-AA2506	MHL-AA3206	MHL-AA4006	
Rod cove	r assembly	MHL-AA1007	MHL-AA1607	MHL-AA2007	MHL-AA2507	MHL-AA3207	MHL-AA4007	ø10: 9(4)6(1925/26) ø16 to ø40: 9(10)4/16(1925/26)
Finger as:	sembly	MHL-AA1008	MHL-AA1608	MHL-AA2008	MHL-AA2508	MHL-AA3208	MHL-AA4008	2151822
Pinion as:	sembly	MHL-AA1009	MHL-AA1609	MHL-AA2009	MHL-AA2509	MHL-AA3209	MHL-AA4009	5672021
Nut set		MHL-A1017	MHL-A1617	MHL-A2017	MHL-A2517	MHL-A3217	MHL-A4017	151822
U-nut ass	embly	MHL-A1017A	MHL-A1617A	MHL-A2017A	MHL-A2517A	MHL-A3217A	MHL-A4017A	1822

- * Order 1 piece finger assembly, pinion assembly, nut set and U-nut assembly respectively per unit.
- * For piston assembly and rack, order 2 pieces per unit.
- * For rod cover assembly, order 4 pieces per unit.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease Pack Part Nos.

MHL2-□□DZ (Ø10 to Ø20)	GR-S-010 (10 g)
MHL2-□□DZ (Ø25, Ø32)	GR-S-010 (10 g)
MHL2-□□DZ (Ø40)	GR-S-020 (20 g)
MHL2-□□D1Z (Ø10, Ø16)	GR-S-010 (10 g)
MHL2-□□D1Z (Ø20, Ø25)	GR-S-010 (10 g)
MHL2-□□D1Z (Ø32, Ø40)	GR-S-020 (20 g)
MHL2-□□D2Z (Ø10, Ø16)	GR-S-010 (10 g)
MHL2-□□D2Z (Ø20, Ø25)	GR-S-010 (10 g)
MHL2-□□D2Z (Ø32, Ø40)	GR-S-010 (10 g), GR-S-020 (20 g) (1 pack each)




MHL2 Series ©10, ©16, ©20 ©25, ©32, ©40


The Replacement Procedure is on p. 534

Construction

Ø10

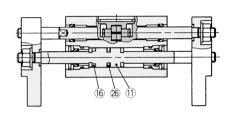

ø16 to ø25

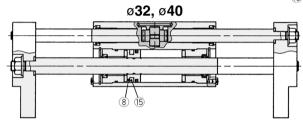

* The numbers correspond with those in the "Construction" of the MHL2 series in the **Web Catalog**.

Component Parts

No.	Description	Material	Note
2	Finger	Aluminum alloy	
3	Piston rod	Stainless steel	
4	Rack	Stainless steel	
5	Pinion	Carbon steel	
6	Pinion cover	Carbon steel	
7	Pinion axis	Stainless steel	
8	Piston	Brass	
9	Piston A	Brass	
10	Piston B	Brass	
11)	Piston A	Stainless steel	
12	Rod cover	Aluminum alloy	
13	Bumper	Urethane rubber	
14)	Clip	Stainless steel spring wire	
15	Rubber magnet	Synthetic rubber	
16	Magnet	<u> </u>	

No.	Description	Material	Note
17	Rod seal cover B	Cold rolled carbon steel sheet	
18	Washer	Stainless steel	
(19)	Bearing	Oil containing polyacetal	
19	Bearing	with back metal	
21)	U-nut	Carbon steel	
22	Inverted internal retaining ring	Carbon steel	
23	Basic internal retaining ring	Carbon steel	
24)	Wave washer	Steel for spring	
25	Conical spring washer	Carbon steel	
26	Piston seal	NBR	
27)	Rod seal	NBR	
28	Rod seal	NBR	
29	Gasket	NBR	
30	Gasket	NBR	

Replacement Parts/Part Nos.

ricpiaceine	III Fai 15/Fai	1103.						
Des	cription	MHL2-10□	MHL2-16□	MHL2-20□	MHL2-25□	MHL2-32□	MHL2-40□	Main parts
Seal k	cit	MHL10-PS	MHL16-PS	MHL20-PS	MHL25-PS	MHL32-PS	MHL40-PS	2627282930
	MHL2-□□D	MHL-A1001	MHL-A1601	MHL-A2001	MHL-A2501	MHL-A3201	MHL-A4001	<ø10> 11/13/16/26 <ø16 to ø25> (3/9/10)
Piston	MHL2-□□D1	MHL-A1002	MHL-A1602	MHL-A2002	MHL-A2502	MHL-A3202	MHL-A4002	14162630
assembly	MHL2-□□D2	MHL-A1003	MHL-A1603	MHL-A2003	MHL-A2503	MHL-A3203	MHL-A4003	<ø32, ø40> 3.8.14.15 26.30
	MHL2-□□D MHL-A1004 MHL-A1604 MHL-A2004 MHL-A2504	MHL-A2504	MHL-A3204	MHL-A4004				
Rack	MHL2-□□D1	MHL-A1005	MHL-A1605	MHL-A2005	MHL-A2505	MHL-A3205	MHL-A4005	4
	MHL2-□□D2	MHL-A1006	MHL-A1606	MHL-A2006	MHL-A2506	MHL-A3206	MHL-A4006	
Rod cover asse	embly	MHL-A1007	MHL-A1607	MHL-A2007	MHL-A2507	MHL-A3207	MHL-A4007	<ø10> 12 17 19 22 28 29 <ø16 to 40> 12 13 17 19 22 28 28
Finger assemb	ly	MHL-A1008	MHL-A1608	MHL-A2008	MHL-A2508	MHL-A3208	MHL-A4008	2182125
Pinion assembly		MHL-A1009	MHL-A1609	MHL-A2009	MHL-A2509	MHL-A3209	MHL-A4009	5672324
Nut set		MHL-A1017	MHL-A1617	MHL-A2017	MHL-A2517	MHL-A3217	MHL-A4017	182125
U-nut assembly	у	MHL-A1017A	MHL-A1617A	MHL-A2017A	MHL-A2517A	MHL-A3217A	MHL-A4017A	2125

- \ast Order 1 piece finger assembly, pinion assembly, nut set and U-nut assembly respectively per unit.
- * For piston assembly and rack, order 2 pieces per unit.
- * For rod cover assembly, order 4 pieces per unit.
- * Since the seal kit does not include a grease pack, it should be ordered separately.

Grease Pack Part Nos.

MHL2-⊔⊔D (Ø10 to Ø20)	GR-S-010 (10 g)
MHL2-□□D (ø25, ø32)	GR-S-010 (10 g)
MHL2-□□D (Ø40)	GR-S-020 (20 g)
MHL2-□□D1 (ø10, ø16)	GR-S-010 (10 g)
MHL2-□□D1 (ø20, ø25)	GR-S-010 (10 g)
MHL2-□□D1 (ø32, ø40)	GR-S-020 (20 g)
MHL2-□□D2 (ø10, ø16)	GR-S-010 (10 g)
MHL2-□□D2 (ø20, ø25)	GR-S-010 (10 g)
MHL2-□□D2 (ø32, ø40)	GR-S-010 (10 g), GR-S-020 (20 g) (1 pack each)


Rotary Actuated Air Gripper/3-Finger Type

MHR3/MDHR3 Series (10, 015)





Construction

MHR3

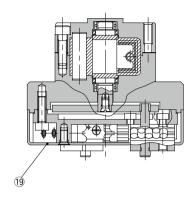

MDHR3

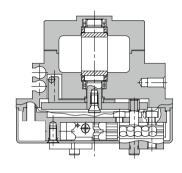

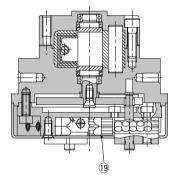

* The numbers correspond with those in the "Construction" of the MHR3/MDHR3 series in the Web Catalog.

Component Parts

No.	Description	Material	Note			
(19)	Cover	Aluminum allov				


Replacement Parts

Description	M□HR3-10□	M□HR3-15□	Main parts
Cover	P3313128	P3313228	19

MHK2 Series (912, 916, 920, 925)



Construction

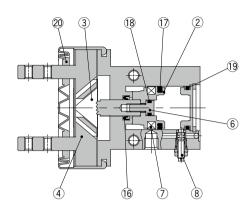

* The numbers correspond with those in the "Construction" of the MHK2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	Aluminum alloy	
3	Cam	Carbon steel	
(4)	Finance	Carbon steel	
4	Finger	Stainless steel 304	
6	Piston bolt	Stainless steel	
7	Rubber magnet	Synthetic rubber	
8	Needle assembly		

No.	Description	Material	Note
16	Rod seal	NBR	
17	Piston seal	NBR	
18	Gasket	NBR	
19	Gasket	NBR	
		Chloroprene rubber	
20	Dust cover	Fluororubber	
		Silicone rubber	

MHK2 Replacement Parts/Part Nos.: Double Acting, Single Acting

					<u> </u>		<u> </u>
Description		MHK2-12□	MHK2-16□	MHK2-20□	MHK2-25□	Main parts	
Seal kit			MHK12-PS	MHK16-PS	MHK20-PS	MHK25-PS	16171819
Piston assem	Piston assembly		MHK-A1201	MHK-A1601	MHK-A2001	MHK-A2501	267
Cam	Cam		P3318103	P3318203	P3318303	P3318403	3
Finance	Material	Carbon steel	P3318104	P3318204	P3318304	P3318404	(A)
Finger	Mate	Stainless steel	P3318104-1	P3318204-1	P3318304-1	P3318404-1	(4)
Needle assem	ıbly	,		MHK-	A1206		8
	ā	Chloroprene rubber	MHK2-J12	MHK2-J16	MHK2-J20	MHK2-J25	
Dust cover	ţ	Fluororubber	MHK2-J12F	MHK2-J16F	MHK2-J20F	MHK2-J25F	20
	Ma	Silicone rubber	MHK2-J12S	MHK2-J16S	MHK2-J20S	MHK2-J25S	

^{*} Order 2 fingers per unit.

Grease pack part no.: MH-G01 (30 g)

MHKI 2 Replacement Parts/Part Nos.: Double Acting, Single Acting

with L2 heplacement raits/rait Nos.: bouble Acting, onlyle Acting									
Descript	ion		MHKL2-12□	MHKL2-16□	MHKL2-20□	MHKL2-25□	Main parts		
Seal kit			MHK12-PS	MHK16-PS	MHK20-PS	MHK25-PS	16171819		
Piston assem	bly		MHK-A1201	MHK-A1601	MHK-A2001	MHK-A2501	267		
Cam	Cam		P3318111	P3318211	P3318311	P3318411	3		
Finger		Carbon steel	P3318112	P3318212	P3318312	P3318412	(4)		
ringer	Mate	Stainless steel	P3318112-1	P3318212-1	P3318312-1	P3318412-1	4)		
Needle assem	bly	,		MHK-	A1206		8		
	ial	Chloroprene rubber	MHKL2-J12	MHKL2-J16	MHKL2-J20	MHKL2-J25			
Dust cover	ter	Fluororubber	MHKL2-J12F	MHKL2-J16F	MHKL2-J20F	MHKL2-J25F	20		
	Me	Silicone rubber	MHKL2-J12S	MHKL2-J16S	MHKL2-J20S	MHKL2-J25S			

^{*} Order 2 fingers per unit.



^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

 $[\]ast$ Since the seal kit does not include a grease pack, it should be ordered separately.


Parallel Type Air Gripper/2-Finger Type


MHS2 Series 016, 020, 025, 032 040, 050, 063



Construction

Closed condition

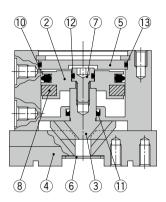

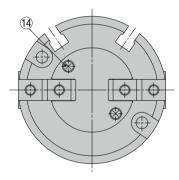

* The numbers correspond with those in the "Construction" of the MHS2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	Aluminum alloy	
3	Cam	Carbon steel	
4	Finger	Carbon steel	
(5)	Сар	Aluminum alloy	
6	End plate	Stainless steel	
7	Piston bolt	Stainless steel	

No.	Description	Material	Note
8	Magnet	_	
10	Piston seal	NBR	
11	Rod seal	NBR	
12	Gasket	NBR	
13	Gasket	NBR	
14	Cross recessed flat head screw	Carbon steel	

Replacement Parts/Part Nos.

ricpiacemen	it i aito, i ait	1100.						
Description	MHS2-16D	MHS2-20D	MHS2-25D	MHS2-32D	MHS2-40D	MHS2-50D	MHS2-63D	Main parts
Seal kit	MHS16-PS	MHS20-PS	MHS25-PS	MHS32-PS	MHS40-PS	MHS50-PS	MHS63-PS	10(1)(2(13)
Finger	P3316004	P3316104	P3316204	P3316304	P3316404	P3316504	P3316604	4
Cam	P3316023	P3316123	P3316223	P3316323	P3316423	P3316523	P3316623	3
Piston assembly	MHS-A1601	MHS-A2001	MHS-A2501	MHS-A3201	MHS-A4001	MHS-A5001	MHS-A6301	278
End plate assembly	MHS-A1613-2	MHS-A2013-2	MHS-A2513-2	MHS-A3213-2	MHS-A4013-2	MHS-A5013-2	MHS-A6313-2	614
Сар	MHS-A1614	MHS-A2014	MHS-A2514	MHS-A3214	MHS-A4014	MHS-A5014	MHS-A6314	(5)

^{*} Order 2 fingers per unit.




 $[\]ast$ Since the seal kit does not include a grease pack, it should be ordered separately.


INHS3 Series ©16, ©20, ©25, ©32, ©40 ©50, ©63, ©80, ©100, ©125



Construction

Closed condition

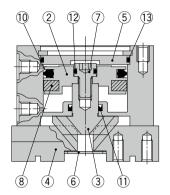

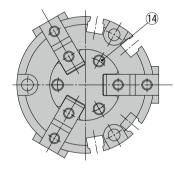

* The numbers correspond with those in the "Construction" of the MHS3 series in the Web Catalog.

Component Parts

Ī	No.	Description	Material	Note
	2	Piston	Aluminum alloy	
	3	Cam	Carbon steel	
	4	Finger	Carbon steel	
	5	Сар	Aluminum alloy	
	6	End plate	Stainless steel	
	7	Piston bolt	Stainless steel	

No.	Description	Material	Note
8	Magnet	_	
10	Piston seal	NBR	
11	Rod seal	NBR	
12	Gasket	NBR	
13	Gasket	NBR	
14)	Cross recessed flat head screw	Carbon steel	

Replacement Parts/Part Nos.

Description	MHS3-16D	MHS3-20D	MHS3-25D	MHS3-32D	MHS3-40D	Main parts
Seal kit	MHS16-PS	MHS20-PS	MHS25-PS	MHS32-PS	MHS40-PS	10(1)(2)(3)
Finger	P3316004	P3316104	P3316204	P3316304	P3316404	4
Cam	P3316003	P3316103	P3316203	P3316303	P3316403	3
Piston assembly	MHS-A1601	MHS-A2001	MHS-A2501	MHS-A3201	MHS-A4001	278
End plate assembly	MHS-A1613-3	MHS-A2013-3	MHS-A2513-3	MHS-A3213-3	MHS-A4013-3	614
Сар	MHS-A16014	MHS-A2014	MHS-A2514	MHS-A3214	MHS-A4014	(5)

Description	MHS3-50D	MHS3-63D	MHS3-80D	MHS3-100D	MHS3-125D	Main parts
Seal kit	MHS50-PS	MHS63-PS	MHS80-PS	MHS100-PS	MHS125-PS	10(1)(2)(3)
Finger	P3316504	P3316604	P3316704	P3316804	P3316904	4
Cam	P3316503	P3316603	P3316703	P3316803	P3316903	3
Piston assembly	MHS-A5001	MHS-A6301	MHS-A8001	MHS-A10001	MHS-A12501	278
End plate assembly	MHS-A5013-3	MHS-A6313-3	MHS-A8013-3	MHS-A10013-3	MHS-A12513-3	614
Сар	MHS-A5014	MHS-A6314	MHS-A8014	MHS-A10014	MHS-A12514	(5)

^{*} Order 3 fingers per unit.

Grease pack part no.: MH-G01 (30 g)



Air Preparation Equipment

Industrial Filters

Replacement Procedure

Actuators

Rotary Actuators Air Grippers

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Parallel Type Air Gripper/3-Finger Type with Dust Cover


MHSJ3 Series 016, 020, 025, 032 040, 050, 063, 080



Construction

Closed condition

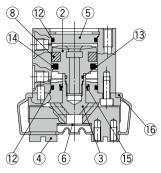

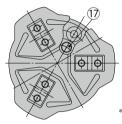

* The numbers correspond with those in the "Construction" of the MHSJ3 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
(2)	Piston	ø16 to ø25: Stainless steel	
2	PISION	ø32 to ø80: Aluminum alloy	
3	Cam	Carbon steel	
4	Finger	Carbon steel	
(5)	Сар	Aluminum alloy	
6	End plate	Stainless steel	
8	Magnet	_	
	•		


No.	Description	Material	Note
12	Gasket	NBR	
13	Gasket	NBR	
14)	Piston seal	NBR	
15	Rod seal	NBR	
		Chloroprene rubber	
16	Dust cover	Fluororubber	
		Silicone rubber	
17	Cross recessed flat head screw	Carbon steel	

Replacement Parts/Part Nos.

Description		MHSJ3-16D	MHSJ3-20D	MHSJ3-25D	MHSJ3-32D	Main parts	
Seal kit			MHSJ16-PS	MHSJ20-PS	MHSJ25-PS	MHSJ32-PS	12131415
<u></u>		hloroprene rubber	MHSJ3-J16	MHSJ3-J20	MHSJ3-J25	MHSJ3-J32	
Dust cover	F F	luororubber	MHSJ3-J16F	MHSJ3-J20F	MHSJ3-J25F	MHSJ3-J32F	16
	Ma	ilicone rubber	MHSJ3-J16S	MHSJ3-J20S	MHSJ3-J25S	MHSJ3-J32S	
Finger			P3316054	P3316154	P3316254	P3316354	4
Cam (J)			P3316093	P3316193	P3316293	P3316393	3
Piston assemb	ly		MHS-A1603	MHS-A2003	MHS-A2503	MHS-A3203	28
End plate assembly			MHSJ-A1613	MHSJ-A2013	MHSJ-A2513	MHSJ-A3213	617
Сар		MHSJ-A1614	MHSJ-A2014	MHSJ-A2514	MHSJ-A3214	(5)	

Description Seal kit		MHSJ3-40D	MHSJ3-50D	MHSJ3-63D	MHSJ3-80D	Main parts	
			MHSJ40-PS	MHSJ50-PS	MHSJ63-PS	MHSJ80-PS	12131415
Chloroprene rubbe		loroprene rubber	MHSJ3-J40	MHSJ3-J50	MHSJ3-J63	MHSJ3-J80	
Dust cover jag	를 Flu	uororubber	MHSJ3-J40F	MHSJ3-J50F	MHSJ3-J63F	MHSJ3-J80F	16
	Sili ≥	licone rubber	MHSJ3-J40S	MHSJ3-J50S	MHSJ3-J63S	MHSJ3-J80S	
Finger			P3316454	P3316554	P3316654	P3316754	4
Cam (J)			P3316493	P3316593	P3316693	P3316793	3
Piston assembly		MHS-A4003	MHS-A5003	MHS-A6303	MHS-A8003	28	
End plate assembly			MHSJ-A4013	MHSJ-A5013	MHSJ-A6313	MHSJ-A8013	617
Сар			MHSJ-A4014	MHSJ-A5014	MHSJ-A6314	MHSJ-A8014	(5)

^{*} Order 3 fingers per unit.

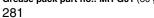




^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

WHSH3 Series of 16, of 20, of 25, of 32 of 18, of 20, of 3, of 3,


p. 541

Construction

Closed condition

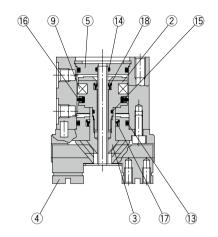

ø32 to ø80 Open condition

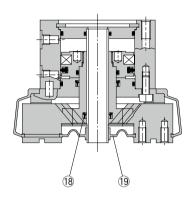

Component Parts

* The numbers correspond with those in the "Construction" of	of the MHSH3 series in the Web Catalog .
--	---

Description				
Description	Description Material			
Dieten	ø16 to ø25: Stainless steel			
PISION	ø32 to ø80: Aluminum alloy			
Cam (A)	Carbon steel			
Finger	Carbon steel			
Cap (A)	Aluminum alloy			
Magnet	-			
	Finger Cap (A)	Piston ø32 to ø80: Aluminum alloy Cam (A) Carbon steel Finger Carbon steel Cap (A) Aluminum alloy		

No.	Description	Material	Note
13	Gasket	NBR	
14)	Gasket	NBR	
15	Gasket	NBR	
16	Piston seal	NBR	
17	Rod seal	NBR	
18	Rod seal	NBR	
		Chloroprene rubber	
19	Dust cover	Fluororubber	
		Silicone rubber	

Replacement Parts/Part Nos.

Description		MUCUO 4CD	MHSH3-16D MHSH3-20D MHSH3-25D		MHSH3-32D	Main manta	
		MHSH3-16D			MHSHJ3-32D	Main parts	
Seal kit		MHSH16-PS	MHSH20-PS	MHSH25-PS	MHSH32-PS	131415161718	
	. Chloroprene rub	ber			MHSHJ3-J32		
Dust cover	Fluororubbe	_	_	_	MHSHJ3-J32F	19	
	Silicone rub	er			MHSHJ3-J32S		
Finger		P3316054	P3316154	P3316254	P3316354	4	
Cam (A)		P3316053	P3316153	P3316253	P3316353	3	
Piston assembly		MHS-A1603	MHS-A2003	MHS-A2503	MHS-A3203	29	
Сар		MHSH-A1614	MHSH-A2014	MHSH-A2514	MHSH-A3214	(5)	

Description		MHSH3-40D	MHSH3-50D	MHSH3-63D	MHSH3-80D	Main parts	
Desc	прис	711	MHSHJ3-40D	MHSHJ3-50D	MHSHJ3-63D	MHSHJ3-80D	Iviaiii parts
Seal kit			MHSH40-PS	MHSH50-PS	MHSH63-PS	MHSH80-PS	131415161718
Dust cover	ial	Chloroprene rubber	MHSHJ3-J40	MHSHJ3-J50	MHSHJ3-J63	MHSHJ3-J80	
	Į.	Fluororubber	MHSHJ3-J40F	MHSHJ3-J50F	MHSHJ3-J63F	MHSHJ3-J80F	19
	Ma	Silicone rubber	MHSHJ3-J40S	MHSHJ3-J50S	MHSHJ3-J63S	MHSHJ3-J80S	
Finger		P3316454	P3316554	P3316654	P3316754	4	
Cam (A)		P3316453	P3316553	P3316653	P3316753	3	
Piston assembly		MHS-A4003	MHS-A5003	MHS-A6303	MHS-A8003	29	
Сар			MHSH-A4014	MHSH-A5014	MHSH-A6314	MHSH-A8014	(5)

* Order 3 fingers per unit.



^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Parallel Type Air Gripper/3-Finger Type: Through-hole Type

MHSH3-A Series 032, 040, 050 063, 080



Construction

Center pusher/Cylinder type

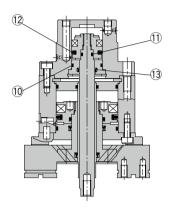

Component Parts

No.	Description	Material	Note
10	Gasket	NBR	
11)	Gasket	NBR	
12	Piston seal	NBR	
13	Rod seal	NBR	

^{*} The numbers correspond with those in the "Construction" of the MHSH3-A series in the Web Catalog.

Replacement Parts/Part Nos.: Seal Kit (Center pusher/Cylinder type)

	Model						
MHSH3-A32A MHSH3-A40A		MHSH3-A50A MHSH3-A63A N		MHSH3-A80A	Contents		
MHSH32A-PS	MHSH40A-PS	MHSH50A-PS	MHSH63A-PS	MHSH80A-PS	0 1123		

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.





MHSL3 Series Ø16, Ø20, Ø25, Ø32, Ø40 Ø50, Ø63, Ø80, Ø100, Ø125



Construction

Closed condition

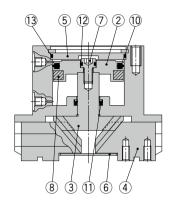

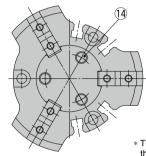

* The numbers correspond with those in the "Construction" of the MHSL3 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	Aluminum alloy	
3	Cam	Carbon steel	
4	Finger	Carbon steel	
(5)	Сар	Aluminum alloy	
6	End plate	Stainless steel	
(7)	Piston bolt	Stainless steel	

No.	Description	Material	Note
8	Magnet	_	
10	Piston seal	NBR	
11)	Rod seal	NBR	
12	Gasket	NBR	
13	Gasket	NBR	
14)	Cross recessed flat head screw	Carbon steel	

Replacement Parts/Part Nos.

Description	MHSL3-16D	MHSL3-20D	MHSL3-25D	MHSL3-32D	MHSL3-40D	Main parts
Seal kit	MHSL16-PS	MHSL20-PS	MHSL25-PS	MHSL32-PS	MHSL40-PS	10(1)(2(13)
Finger	P3316034	P3316134	P3316234	P3316334	P3316434	4
Cam	P3316033	P3316133	P3316233	P3316333	P3316433	3
Piston assembly	MHS-A1601	MHS-A2001	MHS-A2501	MHS-A3201	MHS-A4001	278
End plate assembly	MHSL-A1613	MHSL-A2013	MHSL-A2513	MHSL-A3213	MHSL-A4013	614
Сар	MHS-A1614	MHS-A2014	MHS-A2514	MHS-A3214	MHS-A4014	(5)

Description	MHSL3-50D	MHSL3-63D	MHSL3-80D	MHSL3-100D	MHSL3-125D	Main parts
Seal kit	MHSL50-PS	MHSL63-PS	MHSL80-PS	MHSL100-PS	MHSL125-PS	10(1)(2(13)
Finger	P3316534	P3316634	P3316734	P3316834	P3316934	4
Cam	P3316533	P3316633	P3316733	P3316833	P3316933	3
Piston assembly	MHS-A5001	MHS-A6301	MHS-A8001	MHS-A10001	MHS-A12501	278
End plate assembly	MHSL-A5013	MHSL-A6313	MHSL-A8013	MHSL-A10013	MHSL-A12513	614
Сар	MHS-A5014	MHS-A6314	MHS-A8014	MHS-A10014	MHS-A12514	(5)

^{*} Order 3 fingers per unit.

Grease pack part no.: MH-G01 (30 g)



Air Preparation Equipment

Industrial Filters

Replacement Procedure

^{*} Since the seal kit does not include a grease pack, it should be ordered separately.


Parallel Type Air Gripper/4-Finger Type


NHS4 Series §16, §20, §25, §32 §40, §50, §63



Construction

Closed condition

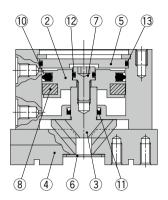

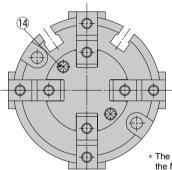

The numbers correspond with those in the "Construction" of the MHS4 series in the **Web Catalog**.

Component Parts

No	. Description	Material	Note
2	Piston	Aluminum alloy	
3	Cam	Carbon steel	
4	Finger	Carbon steel	
(5)	Cap	Aluminum alloy	
6	End plate	Stainless steel	
7	Piston bolt	Stainless steel	

No.	Description	Material	Note
8	Magnet	_	
10	Piston seal	NBR	
11)	Rod seal	NBR	
12	Gasket	NBR	
13	Gasket	NBR	
14)	Cross recessed flat head screw	Carbon steel	

Replacement Parts/Part Nos.

riopiacement i artori art reco.								
Description	MHS4-16D	MHS4-20D	MHS4-25D	MHS4-32D	MHS4-40D	MHS4-50D	MHS4-63D	Main parts
Seal kit	MHS16-PS	MHS20-PS	MHS25-PS	MHS32-PS	MHS40-PS	MHS50-PS	MHS63-PS	10111213
Finger	P3316004	P3316104	P3316204	P3316304	P3316404	P3316504	P3316604	4
Cam	P3316043	P3316143	P3316243	P3316343	P3316443	P3316543	P3316643	3
Piston assembly	MHS-A1601	MHS-A2001	MHS-A2501	MHS-A3201	MHS-A4001	MHS-A5001	MHS-A6301	278
End plate assembly	MHS-A1613-4	MHS-A2013-4	MHS-A2513-4	MHS-A3213-4	MHS-A4013-4	MHS-A5013-4	MHS-A6313-4	614
Сар	MHS-A1614	MHS-A2014	MHS-A2514	MHS-A3214	MHS-A4014	MHS-A5014	MHS-A6314	(5)

^{*} Order 4 fingers per unit.




^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

MHC2 Series (910, 916, 920, 925)



Construction

Double acting, With fingers open

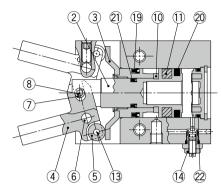

* The numbers correspond with those in the "Construction" of the MHC2 series in the Web Catalog

Component Parts

No.	Description	Material	Note
2	Piston A	Aluminum alloy	
3	Piston B assembly		
(4)	Finance	ø10 to ø20: Stainless steel	
4	Finger	ø25: Carbon steel	
(5)	Side roller	Carbon steel	
6	Lever shaft	Stainless steel	
7	Center roller	Carbon steel	
8	Center pin	Carbon steel	

No.	Description	Material	Note
10	Bumper	Urethane rubber	
11	Rubber magnet	Synthetic rubber	
13	Needle roller	High carbon chrome bearing steel	
14)	Needle assembly	Brass/Electroless nickel plating	
19	Piston seal	NBR	
20	Piston seal	NBR	
21)	Piston seal	NBR	
22	Gasket	NBR	

Replacement Parts/Part Nos.: Double Acting, Single Acting

Description	MHC2-10□	MHC2-16□	MHC2-20□	MHC2-25□	Main parts
Seal kit	MHC10-PS	MHC16-PS	MHC20-PS	MHC25-PS	19202122
Finger assembly	MHC-A1003	MHC-A1603	MHC-A2003	MHC-A2503	4567813
Piston assembly set	MHC-A1002	MHC-A1602	MHC-A2002	MHC-A2502	23781011192021
Piston A assembly	MHC-A1001	MHC-A1601	MHC-A2001	MHC-A2501	21011
Piston B assembly	P3311145B	P3311245B	P3311345B	P3311445C	3
Needle assembly	MH-A1006		MH-A1606		14

* Order 1 piece finger assembly per unit.

* Since the seal kit does not include a grease pack, it should be ordered separately.

Grease pack part no.: GR-S-010 (10 g)

Air Preparation Equipment

ndustrial Filters


Replacement Procedure

Rotary Actuators Air Grippers

Toggle Type Air Gripper

MHT2 Series 032, 040, 050, 063

Construction

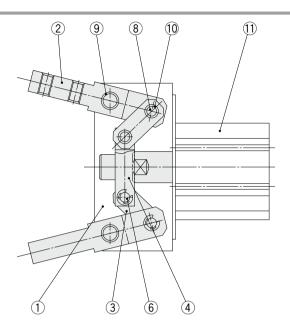

Component Parts

	4	penent and		
De	No.	Description	Material	Note
Side plat	1	Side plate	Aluminum alloy	
Finger	2	Finger	Carbon steel	
Lever	3	Lever	Carbon steel	
Joint	4	Joint	Carbon steel	
Joint pin	6	Joint pin	Stainless steel	
Lever pi	8	Lever pin	Stainless steel	
Bearing	9	Bearing		
Bearing	10	Bearing		
Cylinder	11)	Cylinder		
Lever ping Bearing Bearing	8 9 10	Lever pin Bearing Bearing		

Replacement Parts/Part Nos.

Description	MHT2-32DZ	MHT2-40DZ	MHT2-50DZ	MHT2-63DZ	Main parts
Finger assembly	MH-TA3201	MH-TA4001	MH-TA5001	MH-TA6301	29
Lever assembly	MH-TA3202	MH-TA4002	MH-TA5002	MH-TA6302	310
Link parts assembly	MH-TA3203	MH-TA4003	MH-TA5003	MH-TA6303	<pre><ø32, ø50> 2 3 4 6 8 9 10 <ø40, ø63> 2 3 4 8 9 10</pre>
Compact cylinder	CDQ2A32-15DZ	CDQ2A40-15DZ	CDQ2A50-20DZ	CDQ2A63-20DZ	11)

^{*} For finger assembly, lever assembly, order 2 pieces per unit.

Grease pack part nos. For finger part: MH-G01 (30 g) For cylinder part: GR-S-010 (10 g)



^{*} The numbers correspond with those in the "Construction" of the MHT2 series in the Web Catalog.


MHY2 Series (010, 016, 020, 025)




Construction

Closed condition


ø10

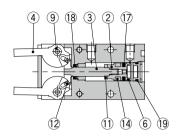

ø16

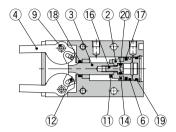

ø20, ø25

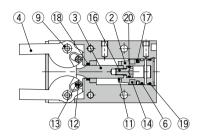

* The numbers correspond with those in the "Construction" of the MHY2 series in the Web Catalog

Component Parts

oomponom r and								
No.	Description	Material	Note					
2	Piston	ø10: Stainless steel ø16 to 25: Aluminum alloy						
3	Joint	Stainless steel						
4	Finger	Stainless steel						
6	Wear ring	Resin						
9	Bushing B	Sintered alloy steel						
11	Bumper	Urethane rubber						
12	Needle roller	High carbon chrome bearing steel						
12	•							

No.	Description	Material	Note
13	Joint roller	Carbon steel	
14)	Rubber magnet	Synthetic rubber	
16	Piston bolt	Stainless steel	
17	Piston seal	NBR	
18	Rod seal	NBR	
19	Gasket	NBR	
20	Gasket	NBR	

Replacement Parts/Part Nos

neplacement Farts/Fart Nos.							
Descripti	on	MHY2-10	MHY2-16	MHY2-20	MHY2-25	Main parts	
Seal kit		MHY10-PS	MHY16-PS	MHY20-PS	MHY25-PS	<ø10> 171819	
Seai Kit		WILLIAM S	WITT TO-F 3	MH110-F3 MH120-F3		<ø16, ø20, ø25> 17181920	
Finger assembly	MHY2-\(D \) MHY-A1001 MHY-A1601 MHY-A2001 M		MHY-A2501	(4)(9)			
riliger assembly	MHY2-□D2	MHY-A1001-2	MHY-A1601-2	MHY-A2001-2	MHY-A2501-2		
Joint assembly		MHY-A1002	MHY-A1602	MHY-A2002	MHY-A2502	<ø10, ø16> ③⑫	
		WITT-A1002				<ø20, ø25> 31213	
Piston assembly		MHY-A1003	MHY-A1603	MHY-A2003	03 MHY-A2503	<ø10> 26114	
		WILLI-A1003	WII 11-A 1603	WIH 1-A 1003 WIH 1-A 2003		<ø16, ø20, ø25> ②⑥⑴⑷⑥	

* Order 1 piece finger assembly per unit.

Grease pack part no.: MH-G04 (30 g)


Air Preparation Equipment


^{*} Since the seal kit does not include a grease pack, it should be ordered separately.

180° Angular Type Air Gripper/Rack & Pinion Type

MHW2 Series (20, ©25, ©32, ©40, ©50)

Construction

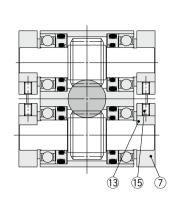

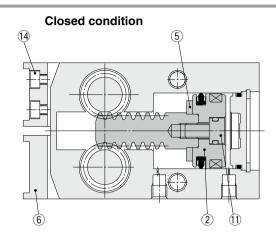

* The numbers correspond with those in the "Construction" of the MHW2 series in the Web Catalog.

Component Parts

No.	Description	Material	Note
2	Piston	Aluminum alloy	
(5)	Bumper	Urethane rubber	
6	Finger (A)	Carbon steel	
7	Finger (B)	Carbon steel	
8	Rubber magnet	Synthetic rubber	

No.	Description	Material	Note
9	Rack	Carbon steel	
11)	Piston bolt	Stainless steel	
13	Key	Carbon steel	
14)	Hexagon socket head cap screw	Carbon steel	
15	Hexagon socket head set screw	Carbon steel	

Replacement Parts/Part Nos.

Description		MHW2-20	MHW2-25	MHW2-32	MHW2-40	MHW2-50	Main parts
Seal kit		MHW20-PS	MHW25-PS	MHW32-PS	MHW40-PS	MHW50-PS	1819202122
Piston assembly		MHW-A2001	MHW-A2501	MHW-A3201	MHW-A4001	MHW-A5001	25891122
Figure	MHW2-□D	MHW-A2002	MHW-A2502	MHW-A3202	MHW-A4002	MHW-A5002	67131415
Finger assembly	MHW2-□D1	MHW-A2002-1	MHW-A2502-1	MHW-A3202-1	MHW-A4002-1	MHW-A5002-1	
Finger A assembly	MHW2-□D	MHW-A2006	MHW-A2506	MHW-A3206	MHW-A4006	MHW-A5006	614
Finger C assembly	MHW2-□D1	MHW-A2006-1	MHW-A2506-1	MHW-A3206-1	MHW-A4006-1	MHW-A5006-1	614
Finger B assembly		MHW-A2007	MHW-A2507	MHW-A3207	MHW-A4007	MHW-A5007	71315

^{*} Order 1 piece finger assembly per unit.

Grease pack part nos. ø20, ø25, ø32: GR-S-010 (10 g) ø40, ø50: GR-S-020 (20 g)



^{*} Since the seal kit does not include a grease pack, it should be ordered separately.