Related Products: Multi-tube Holder TW Series



- Easy arrangement of tubing Easy tube insertion and firm fixation
- Possible to separate options depending on number of connection tubes
- Use of flame resistant resin (Equivalent to UL-94 standard V-0)



Applicable Tubing

Tubing material	Nylon, Soft nylon, Polyurethane, other soft plastic tubing
Tubing O.D.	ø4, ø6, ø8, ø10, ø12


Model

Applicable tubing	Model	No. of connecting tubes (Max.)					
O.D. (mm)	Wiodei	6	8	12			
4	TM-04			•			
6	TM-06			•			
8	TM-08		•				
10	TM-10	•					
12	TM-12	•					

Specifications

Ambient temperature	−20 to 60°C							
Material	Flame resistant polypropylene (Equivalent to UL-94 standard V-0)							
Color	Black							
Accessory	For mounting Cross recessed head countersunk tapping screw (Zinc chromated)							
	Model	Size (Nominal x Length)	No. of tubings					
	TM-04	2 x 6						
	TM-06	2.6 x 8						
	TM-08	2.0 X 8	4					
	TM-10	3 x 8						
	TM-12							

Dimensions: Multi-tube Holder

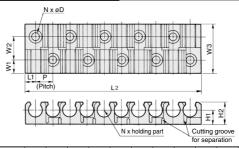

Model	(No. of holding parts)	Р	Lı	L ₂	W ₁	W ₂	W₃	H₁	H ₂	ø D	Mounting screw (Nominal x Length)
TM-04	12	6	3.25	72.5	4.5	8	17	5	7.5	2.2	2 x 6
TM-06	12	7.5	4.5	91.5	5.5	10	21	6.5	10	2.8	2.6 x 8
TM-08	8	9.5	5.5	77.5	6	11	23	7.5	12	2.8	2.6 x 8
TM-10	6	12.5	7.5	77.5	6.5	12	25	8.8	14.3	3.2	3 x 8
TM-12	6	15	9	93	6.5	12	25	9.8	16.3	3.2	3 x 8
	TM-04 TM-06 TM-08 TM-10	Model (No. of holding parts) TM-04 12 TM-06 12 TM-08 8 TM-10 6	Model (No.dif holding parts) P TM-04 12 6 TM-06 12 7.5 TM-08 8 9.5 TM-10 6 12.5	Model (No. of plants) P L1 TM-04 12 6 3.25 TM-06 12 7.5 4.5 TM-08 8 9.5 5.5 TM-10 6 12.5 7.5	Model plant (No. of position plants) P L1 L2 TM-04 12 6 3.25 72.5 TM-06 12 7.5 4.5 91.5 TM-08 8 9.5 5.5 77.5 TM-10 6 12.5 7.5 77.5	Model plants (No. of plants) parts) P L1 L2 W1 TM-04 12 6 3.25 72.5 4.5 TM-08 12 7.5 4.5 91.5 5.5 TM-08 8 9.5 5.5 77.5 6 TM-10 6 12.5 7.5 77.5 6.5	Model plant (No. of parts) P L1 L2 W1 W2 TM-04 12 6 3.25 72.5 4.5 8 TM-08 12 7.5 4.5 91.5 5.5 11 TM-08 8 9.5 5.5 77.5 6.5 12 TM-10 6 12.5 7.5 7.5 6.5 12	Model No. of parts P L1 L2 W1 W2 W3 W4 M5 M5 M5 M5 M5 M5 M5 M	Model political parts (No. of political parts) P L1 L2 W1 W2 W3 H1 TM-04 12 6 3.25 72.5 4.5 8 17 5 TM-08 12 7.5 4.5 91.5 5.5 10 21 6.5 TM-08 8 9.5 5.5 77.5 6.5 12 25 8.8 TM-10 6 12.5 7.5 77.5 6.5 12 25 8.8	Model plant (No. of plants) P L1 L2 W1 W2 W3 H1 H2 TM-04 12 6 3.25 72.5 4.5 8 17 5 7.5 TM-08 12 7.5 4.5 91.5 5.5 10 21 6.5 10 TM-08 8 9.5 5.5 77.5 6 11 23 7.5 12 TM-10 6 12.5 7.5 77.5 6.5 12 25 8.8 14.3	Model (No. of portion) (No. of portion) P L1 L2 W1 W2 W3 H1 H2 oD TM-04 12 6 3.25 72.5 4.5 8 17 5 7.5 2.2 TM-08 12 7.5 4.5 9.5 5.5 10 21 6.5 10 2.8 TM-08 8 9.5 5.5 77.5 6 11 23 7.5 12 2.8 TM-10 6 12.5 7.5 7.5 6.5 12 25 8.8 14.3 3.2

How to Use

Cut the multi-tube holder depending on number of tubes to be connected.

<Cutting method>



- Install the multi-tube holder to the equipment with cross-recessed head, countersunk tapping screw.
- 3. Lay the tube across the gripper and push on the tube.
- **4.** For removing the tubes, pull up the tubes from the gripper.