Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

Rubber Seal

Note) CE/UKCA-compliant: D/DL/DS/DZ only (Electrical entry)

Large flow capacity, small exhaust resistance

(Refer to "Flow Rate Characteristic" table.)

Easy conversion to N.C. or

Function plate makes it possible to use solenoid valve as a N.C. or N.O. valve with the port unchanged.

Possible to use in vacuum or under low pressures


Vacuum: Up to 101.2 kPa Low pressure: 0 to 0.2 MPa


Free mounting orientation



Symbol


Internal pilot <Standard>

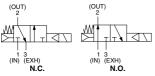

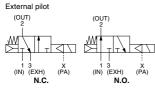

Note) N.O. valve operates properly only when appropriate pressure is applied to the pilot.

How to Order

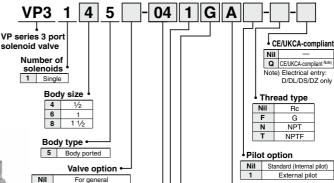

V For vacuum/low pressure Port size (IN, OUT port)

Symbol	Rc (Nominal size)	VP3145	VP3165	VP3185
03	3/8 (10A)	•		
04	½ (15A)	•		
06	3/4 (20A)	•	•	
10	1 (25A)		•	
12	1 1/4 (32A)		•	•
14	1 ½ (40A)			•
20	2 (50A)			•

COL	rated voltage •
	ratea restage
1	100 VAC, 50/60 Hz
2	200 VAC, 50/60 Hz
3*	110 VAC, 50/60 Hz
4*	220 VAC, 50/60 Hz
5	24 VDC
6*	12 VDC
7*	240 VAC, 50/60 Hz

Electrical entry

G	Grommet	_			
Т	Conduit terminal	_			
D	DIN terminal	•			
TL* Conduit terminal with indicator light					
TS*	Conduit terminal with surge voltage suppressor	_			
TZ*	Conduit terminal with light/surge voltage suppressor	_			
DL*	DIN terminal with indicator light	•			
DS*	DIN terminal with surge voltage suppressor	•			
DZ*	DIN terminal with light/surge voltage suppressor	•			

Type of actuation

A N.C. (Normally closed) B N.O. (Normally open)

CEUKCA-complia

* Semi-standard

How to Order Pilot Valve Assembly

VT3113 - 00

Coil	Coil rated voltage						
1	100 VAC, 50/60 Hz						
2	200 VAC, 50/60 Hz						
3*	110 VAC, 50/60 Hz						
4*	220 VAC, 50/60 Hz						
5	24 VDC						
6*	12 VDC						
7*	240 VAC, 50/60 Hz						
. 0	at at an alama						

Elec	ctrical entry	CE/UKCA-compliant	1
G	Grommet	_	ı
Т	Conduit terminal	_	ı
D	DIN terminal	•	Į,
TL*	Conduit terminal with indicator light	_	N
TS*	Conduit terminal with surge voltage suppressor	_	
TZ*	Conduit terminal with light/surge voltage suppressor	_	No
DL*	DIN terminal with indicator light	•	
DS*	DIN terminal with surge voltage suppressor	•	
DZ*	DIN terminal with light/surge voltage suppressor	•	

CE/UKCA-compliant te) Electrical entry D/DL/DS/DZ only

For other rated voltages, please consult with SMC. * Semi-standard

(Refer to pages 1121 to 1123 for details.) Note) The pilot valve assembly shown above includes the function plate and gasket.



Made to Order

Semi-standard For other rated voltages, please consult with SMC.

VP3145/3165/3185 Series


External Pilot

Use external pilot model in the following cases

- Vacuum or low pressure (0.2 MPa or less): Vacuum/Low pressure type
- . Using the valve with supply port external throttle: General type
- · Air pressure of supply port is slow: General type
- Resistance in outlet side is small in case of air blowing or filling an air tank: General type

Note 1) Keep external pilot pressure within the pressure range below.

Note 2) Conversion of internal pilot and external pilot can not be done.

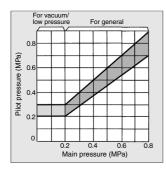

Specifications								
Fluid			Air					
Type of actuation			1	V.C	or N.O.	(Conve	rtible)	
		Inter	nal pilo	ot	External pilot			
Pilot type		For	genera	ıl	For vacuum/	low pressui	re Fo	or general
Operating pressure range (MPa)	Main pressure				-101.2 k	Pa to 0.:	Pa to 0.2 0.2 to 0	
Operating pressure range (MFa)	Pilot pressure	0.2 to 0.8		0.2 to 0.3			Refer to the graph left.	
Ambient and fluid temperature	(°C)	0 (No freezing) to 60						
Response time (ms) (1)		ON	AC	30	or less	OFF	AC	30 or less
(at the pressure of 0.5 MPa)		ON	DC	40	or less	OFF	DC	30 or less
Max. operating frequency (Hz)		3						
Lubrication (2)		Required (Equivalent to turbine oil Class1 ISO VG32)						
Manual override		Yes (Non-locking)						
Mounting orientation			Unrestricted					
Impact/Vibration resistance (m	n/s²) (3)	150/50						

Note 1) Based on dynamic performance test, JIS B 8419: 2010. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)

Note 2) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

(Values at the initial period)

Note 3) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature.

Solenoid Specifications

Solenoid Specifications							
		andard	Grommet (G), Conduit terminal (T) DIN terminal (D)				
Electrical entry	Option		Conduit terminal with indicator light (TL), Conduit terminal with surge voltage suppressor (TS), Conduit terminal with light/surge voltage suppressor (TZ), DIN terminal with indicator light (DL), DIN terminal with surge voltage suppressor (DS), DIN terminal with light/surge voltage suppressor (DZ)				
Coil rated voltage (V)	AC (50/60 Hz)		100, 200, 110 *, 220 *, 240 *				
Con rated voltage (v)	DC		12 *, 24				
Allowable voltage fluctuati	on		-15 to +10% of rated voltage				
A Note)		Inrush	73 VA (50 Hz), 58 VA (60 Hz)				
Apparent power Note)	AC Holding		28 VA (50 Hz), 17 VA (60 Hz)				
Power consumption Note)	DC		12 W				

Semi-standard Note) At rated voltage

Flow Rate Characteristics/Weight

		Port	oizo	Flow rate characteristics						
Valve n	Port size			$1 \rightarrow 2 \text{ (IN} \rightarrow \text{OUT)}$		$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$			Weight * (kg)	
valve II	nouei	1(IN), 2(OUT)	3(EXH)	C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	Grommet
		3/8		19	0.43	5.5	18	0.47	5.4	
VP3	145	1/2	3/4	23	0.32	6.2	21	0.39	5.8	1.5
		3/4		28	0.36	7.6	26	0.35	7.0	

Valve model	Port :	size	Effective a	Weight * (kg)		
	1 (IN), 2 (OUT)	3(EXH)	$1 \rightarrow 2 (IN \rightarrow OUT)$	$2 \rightarrow 3 \text{ (OUT} \rightarrow \text{EXH)}$	Grommet	
	3/4		230	280		
VP3165	1	11/4	280	310	2.0	
	11/4		310	330		
	11/4		570	650		
VP3185	11/2	2	650	670	2.8	
	2		650	670		

^{*} For grommet Conduit terminal -- +0.2 kg




Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

Construction/Internal Pilot

As in the figure below, this pilot-operated solenoid valve consists of a compact 3 port solenoid valve as the pilot valve and a large 3 port valve as the main valve.

The pilot valve controls opening and closing the main valve. N.C. or N.O. function conversion can be done by switching the pilot passage.

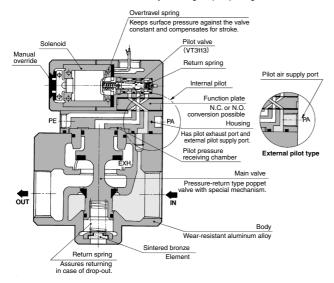

Note) Pilot valve and body are shown in a different direction from the actual product in order to show the construction and air passage.

Piping (Vacuum Use)

1. Piping in general:

Following the above piping, vacuum passage is switched between OUT and EXH, therefore, N.C./N.O. indication on the function plate and switching of the vacuum passage are reversed; N.C. (Normally closed) in vacuum passage are reversed:

Air pressure-in

"N.C." indicated on the plate


→ N.O. in vacuum passage
(Normally open)

"N.O." indicated on the plate → N.C. in vacuum passage (Normally closed)

N.C./N.O. Conversion

To convert valve operation from N.C. to N.O. or N.O. to N.C., remove the pilot valve, move the function plate along the gasket, both top and bottom until the mark ▶ meets N.C. (N.O.)

Please note however, that the N.O. valve functions properly only when the appropriate pressure is applied to the valve.

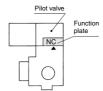






VP3145 Series

Dimensions: VP3145

Grommet: VP3145□-□□GA□

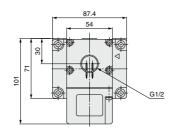


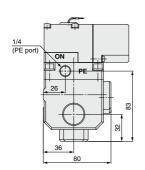

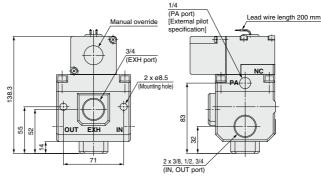


Note) External pilot port (PA port) 1/4 is processed for threads in external pilot model only.

Conduit terminal: VP3145□-□□T□R□

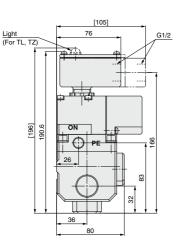


DIN terminal: VP3145□-□□D□A□

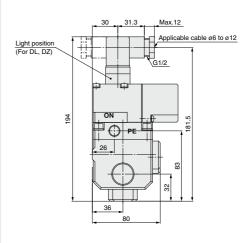

[]: With indicator light (TL, TZ)

Dimensions: VP3165

Grommet: VP3165□-□□G♣□

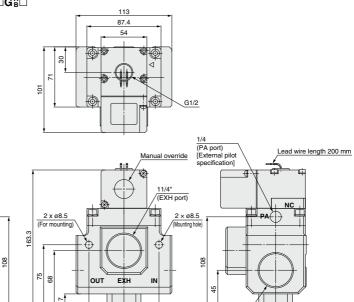

Note) External pilot port (PA port) 1/4 is processed for threads in external pilot model only.


Conduit terminal: VP3165□-□□T□A□

36

95


45

1/4 (PE port)

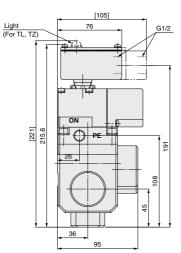

DIN terminal: VP3165□-□□D□B□

2 x 3/4, 1, 1 1/4 (IN, OUT port)

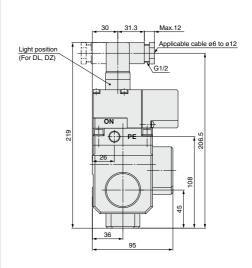


[]: With indicator light (TL, TZ)


82.6

VP3185 Series


Dimensions: VP3185

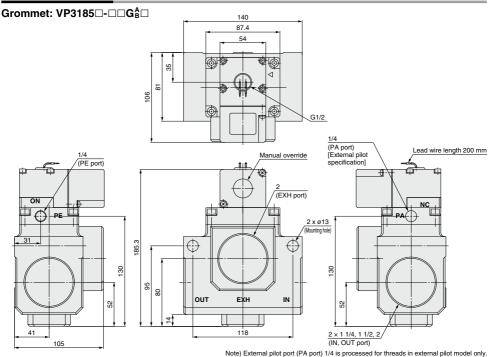

Conduit terminal: VP3185□-□□T□A□

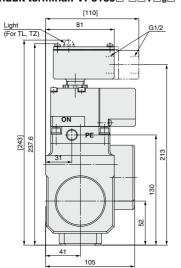

DIN terminal: VP3185□-□□D□A□

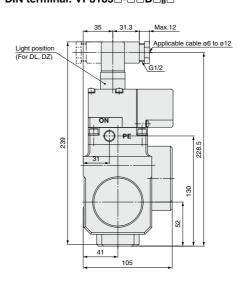

[]: With indicator light (TL, TZ)


1120

VP3145/3165/3185 Series Made to Order






Please contact SMC for detailed dimensions, specifications and lead times.

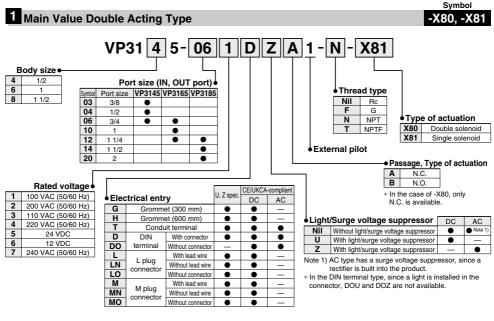



How to Order Pilot Valve Assembly

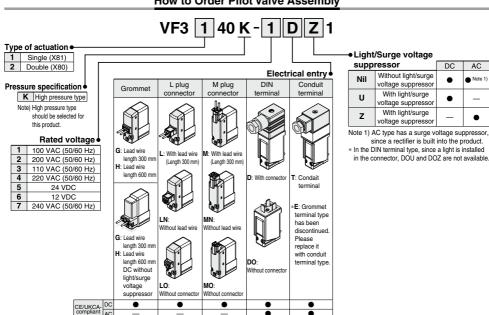

VP3145/3165/3185 Series

Symbol -X80

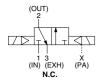

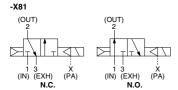

Specifications

Valve configuration	External pilot 3 port solenoid valve		
Type of actuation	Double solenoid (-X80), Single solenoid (-X81)		
Fluid	Air		
Operating pressure range	-101.2 kPa to 0.8 MPa		
Pilot pressure	85 to 115% of main pressure, Min. 0.2 MPa		
Ambient and fluid temperature	0 to 50°C (No freezing)		
Lubrication Note 1)	Required (Equivalent to turbine oil Class 1 ISO VG32)		
Mounting orientation	Unrestricted		
Impact/Vibration resistance Note 2)	150/50 m/s ²		

Note 1) This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)


Solenoid Specifications

Electrical entry	Grommet, Conduit terminal, DIN terminal L plug connector, M plug connector					
Coil rated voltage (V)	AC (50/60 Hz)		100, 200, 110, 220, 240			
Con rated voltage (v)	DC		24, 12			
Allowable voltage fluctuation			±10% of rated voltage			
Apparent power (VA) Note)	AC*	1.55 (With indicator light: 1.65)				
Apparent power (VA)	AC	DIN/Conduit terminal with indicator light: 1.7				
Power consumption (W) Note)	I DC I	Without indicator light	1.5			
Power consumption (w)		With indicator light	1.55, DIN/Conduit terminal with indicator light: 1.75			

^{*} A rectifying circuit is used in the AC type. Note) At rated voltage

Piping and other usage are the same as standard products.

Dimensions

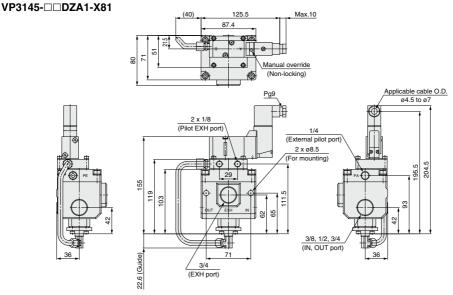


- In the case of B spec. of -X81 (N.O. spec.), VF3140K solenoid has to be positioned at left, when looking at the EXH port in the front face.

 In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.




Large Size 3 Port Solenoid Valve VP3145/3165/3185 Series

Dimensions

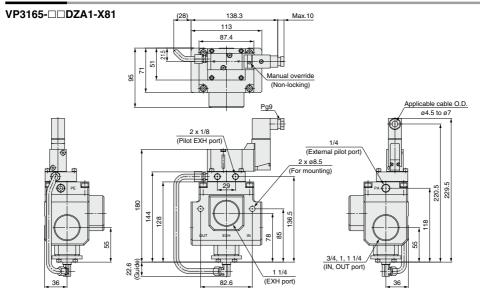

- In the case of B spec. of -X81 (N.O. spec.), VF3140K solenoid has to be positioned at left, when looking at the EXH port in the front face.
- In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.

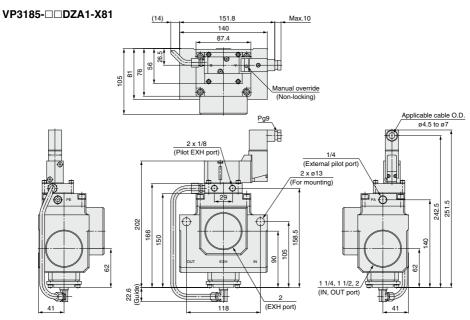

- In the case of B spec. of -X81 (N.O. spec.), VF3140K solenoid has to be positioned at left, when looking at the EXH port in the front face.
- In the case of -X80, VF3240K-□□□1 (Pilot valve) will be mounted.





VP3145/3165/3185 Series **Specific Product Precautions**

Be sure to read this before handling the products.

Refer to page 8 for safety instructions and pages 9 to 15 for 3/4/5 port solenoid valve precautions.

Pipina

If supply port air pressure drops to less than 0.2 MPa, the valve may malfunction. In such a case, use external pilot type. (When throttling IN port, or operating with OUT port open to the atmosphere or in a similar operation.)

Pressure balance among each port

This solenoid valve is pressureunbalanced type. Operate it within this pressure range: IN ≥ OUT ≥ EXH. If not operated in the range, the valve will malfunction.

Use as 2 port valve

- 1. Plug EXH port in case of pressure-in and plug IN port in case of vacuum
- 2. This valve has slight air leakage and can not be used for such purposes as (including holding air pressure vacuum) in the pressure container.

Supply air

Install an air filter and a lubricator on the upstream side.

Lubrication

This solenoid valve requires lubrication. Use turbine oil Class 1 (ISO VG32).

Environment

If using the valve in a dusty environment, install a silencer at EXH port and PE port to prevent dust from entering.

N.C./N.O. conversion

When converting from N.C. to N.O. and vice versa, note that the equipment to be connected will act reversely.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to the Web Catalog.

Light/Surge Voltage Suppressor

	Grommet (G)	Conduit terminal (T)	DIN tern	ninal (D)
With indicator light (L)	None	Neon bulb &	48 VDC or less	100 VAC or more Neon bulb⊗
Surge voltage suppressor (S)		Varistor	™ [] []	
With light/surge voltage suppressor (Z)	None	Neon bulb Varistor Neon bulb	• LED	00 VAC or more Neon bulb Varistor

"Items that are marked "With indicator light," "With surge voltage suppressors," and "With light/surge voltage suppressor" are all non-polar types.

How to Use DIN Terminal

1. Disassembly

- 1) After loosening the screw 1, then if the housing (4) is pulled in the direction of the screw (1), the connector will be removed from the body of equipment (solenoid, etc.). 2) Pull out the screw 1), then remove the
 - gasket 2.
- 3) On the bottom part of the terminal block 3. there's a cut-off part (indication of an arrow) 3a. If a small flat head screwdriver is inserted between the opening in the bottom, terminal block 3 will be removed from the housing (4). (Refer to graph at right.)
- 4) Remove the cable gland (5) and plain washer 6 and rubber seal 7.

- 1) Pass the cable ® through the cable gland 5, washer 6, rubber seal 7, in this order and then insert them into the housing (4).
- 2) Dimensions of the cable ® are as shown in the right figure. Skin the cable and crimp the crimped terminal 9 to the edges.
- 3) Remove the screw 3f from the bracket 3e. (Loosen in the case of Y-shape type terminal.) As shown in the right figure, mount a crimped terminal 9, and then again tighten the screw 3f.
- Note) Tighten within the tightening torque of 0.5 N·m ±15%.
- Note: a) It is possible to wire even in the state of bare wire. In that case, loosen the screw 3f and place a lead wire into the bracket 30, and then tighten it once again.
 - b) The maximum size for the round terminal 9 is 1.25 mm2-3.5 and for the Y terminal is 1.25 mm2-4
- c) Cable ® outside diameter: ø6 to ø12 mm Note) For the one with outside diameter ranged between ø9 to ø12 remove the inside parts of the rubber seal 7 before

3. Assembly

- 1) Terminal block 3 connected with housing 4 should be reinstated. (Push it down until you hear the click sound.)
- 2) Putting rubber seal 7, plain washer 6, in this order into the cable introducing slit on the housing 4, then further tighten the cable gland 5 securely.
- 3) By inserting gasket 2 between the bottom part of the terminal block 3 and a plug on an equipment, screw in 1 on top of the housing 4 and tighten it.
- Note) Tighten within the tightening torque of 0.5 N·m ±20%.

Changing the entry direction

The cable entry direction of a connector can be changed as desired (4 directions at 90° intervals), depending on the combination of a housing 4 and a terminal block 3.

