
### **Sine Rodless Cylinder**

### **REA/REB** Series

(Maximum speed: 300 mm/s) (Maximum speed: 600 mm/s)

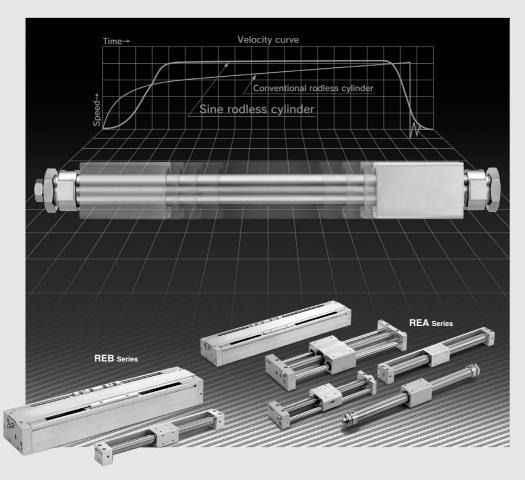

#### REA Series (300 mm/s)

Guide type	Model	Page
Basic type	REA	P. 29
Direct mount type	REAR	P. 39
Slider type (Slide bearing)	REAS	P. 51
Slider type (Ball bushing bearing)	REAL	P. 65
Linear guide type (Single axis)	REAH	P. 79
Linear guide type (Double axis)	REAHT	P. 79

#### REB Series (600 mm/s)


Guide type	Model	Page
Direct mount type	REBR -	P. 95
Linear guide type (Single axis)	REBH	P. 107
Linear guide type (Double axis)	REBHT	P. 107



### Allows rapid transfer of impact


Throughput dramatically increased (Maximum speed: **600** mm/s)

REB series introduced with a maximum speed of 600 mm/s. Compared with the previous type (REA series: 300 mm/s), the tact time can be shortened by approximately 1/2.

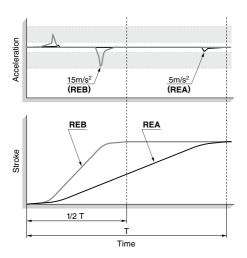



#### Acceleration ranges

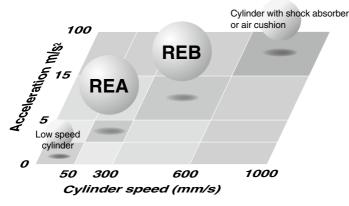

### Series Variations ———REA Series (300 mm/s)


direction


throttle groove in its longitudinal

nla series	300 11	1111/3 <i>)</i>
Guide type	Base cylinder	Model
Basic type	СҮЗВ	REA
Direct mount type	CY3R	REAR
Slider type (Slide bearing)	CY1S	REAS
Slider type (Ball bushing bearing)	CY1L	REAL
Linear guide type (Single axis)	CY1H	REAH
Linear guide type (Double axis)	CY1HT	REAHT

### sensitive workpieces (300 mm/s) (600 mm/s)



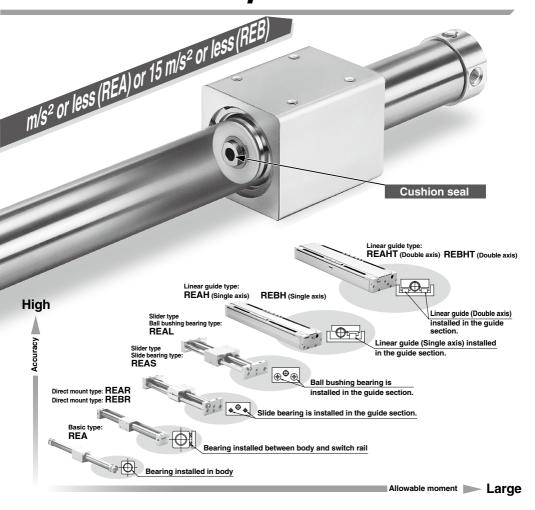

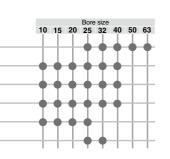

#### REB Series (600 mm/s)

	`	,								
Guide type	Base	Model					size			
Guide type	cylinder	Model	10	15	20	25	32	40	50	63
Direct mount type	CY3R	REBR -	-	•	+	•	-	+	+	-
Linear guide type (Single axis)	CY1H	REBH -	-	•	+	•	+	+	+	+
• " • •				T		T				
Linear guide type (Double axis)	CY1HT	REBHT -	-	-	-	•	-	4	4	-
	•	IILDIII	- 1		- 1	Т	Т	- 1	- 1	- 1

# REA/REAR/REBR/REAS/REAL/REAH/REBH Series Model Selection Criteria

Model Selection Criteria	Recommended Cylinder			
Model Selection Criteria		Appearance		Features
When many different types of guides are used     When a long stroke is necessary	rated type	REA Series Size: 025, 032, 040, 050, 063	• Wide variations from ø25 to ø63.	Long strokes available.
When many different types of guides are used When auto switches are added to the basic type When used without a guide for a light load When space is very limited	Guide non-integrated type	REAR Series Size: 010, 015, 020, 025, 032, 040 REBR Series Size: 015, 025, 032	Choice of the maximum speed of 300 mm/s or 600 mm/s is available.	Cylinder can be directly mounted. Auto switch capable, with no cylinder lurching. Rotation can be stopped within an allowable range. Compact external dimensions Mounting can be performed from the top or one side.
To ensure a permanent path When used for general transfer operations  The permanent path  The permanent path  The permanent path		REAS Series Size: 010, 015, 020, 025, 032, 040	A load can be carried directly by the quide	Smooth operation is made possible by using special slide bearings.
To ensure a permanent path When smoother operation is required, even with an offset load	Guide integrated type	REAL Series Size: 010, 015, 020, 025, 032, 040	integrated type.  The centralized piping type allows concentration of piping on one side plate.  Auto switch capable.  Choice of the maximum speed of 300 mm/s or 600 mm/s is available.  (RE⊟H/Linear guide type)	Stable operation is possible, even with an offset load, by using ball bushings.
To ensure a permanent path When a large load, large moment is required When used for pick-and-place operations, etc.		REAH Series Size: 010, 015, 020, 025, 032 REBH Series Size: 015, 025, 032		The use of a linear guide facilitates a large load, large moment.  Mounting freedom is improved by providing T-slots on the mounting surfaces.  A top cover mounted over the sliding parts of the cylinder prevents scratches and damage, etc.



# REA/REB Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### **Disassembly and Maintenance**

#### **⚠** Warning

 Use caution as the attractive force of the magnets is very strong.

When removing the external slider and piston slider from the cylinder tube for maintenance, etc., handle with caution, since the magnets installed in each slider have a very strong attractive force.

#### **∧** Caution

 Use caution when removing the external slider, as the piston slider will be directly attracted to it.

When removing the external slider or piston slider from the cylinder tube, first force the sliders out of their magnetically coupled positions, and then remove them individually when there is no longer any holding force. If they are removed while still magnetically coupled, they will be directly attracted to one another and will not come apart.

Do not disassemble the magnetic components (piston slider, external slider).

This can cause a loss of holding force and malfunction.

- When disassembling to replace the seals and wear ring, refer to the separate disassembly instructions.
- Use caution to the direction of the external slider and the piston slider.

Since the external slider and piston slider are directional for size ø10, refer to the figures below when performing disassembly or maintenance. Put the external slider and piston slider together, and insert the piston slider into the cylinder tube so that they will have the correct positional relationship as shown in Fig. (1). If they align as shown in Fig. (2), reinsert the piston slider only, after turning it around 180°. If the direction is not correct, it will be impossible to obtain the specified holding force.

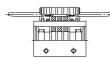




Fig. (1) Correct position

Fig. (2) Incorrect position

During disassembly, use caution in handling the cushion ring.

The cushion ring is a precision part, and any deformation, etc., can cause malfunction or poor performance.

#### Speed Adjustment


#### 

1. SMC's "throttle" type speed controllers (AS series) are recommended for speed adjustment. (Refer to Table (3).)

Table (3) Recommended Speed Controller

Model		
Elbow type	Straight type	In-line type
AS1201F-M5-04-X214	AS1301F-M5-04-X214	AS1001F-04-X214
AS1201F-M5-04-X214	AS1301F-M5-04-X214	AS1001F-04-X214
AS2201F-01-06-X214	AS2301F-01-06-X214	AS2001F-06-X214
AS2201F-01-06-X214	AS2301F-01-06-X214	AS2001F-06-X214
AS2201F-01-06-X214	AS2301F-01-06-X214	AS2001F-06-X214
AS2201F-02-06-X214	AS2301F-02-06-X214	AS2001F-06-X214
AS3201F-02-08-X214	AS3301F-02-08-X214	AS3001F-08-X214
AS3201F-02-08-X214	AS3301F-02-08-X214	AS3001F-08-X214
	AS1201F-M5-04-X214 AS1201F-M5-04-X214 AS2201F-01-06-X214 AS2201F-01-06-X214 AS2201F-01-06-X214 AS2201F-02-06-X214 AS2201F-02-08-X214	Elbow type Straight type AS1201F-M5-04-X214 AS1301F-M5-04-X214 AS1201F-M5-04-X214 AS1301F-M5-04-X214 AS2201F-01-06-X214 AS2301F-01-06-X214 AS2201F-01-06-X214 AS2301F-01-06-X214 AS2201F-01-06-X214 AS2301F-01-06-X214 AS2201F-01-06-X214 AS2301F-02-06-X214 AS2301F-02-06-X214 AS2301F-02-06-X214 AS3201F-02-08-X214 AS3301F-02-08-X214

- Speed adjustment is possible with meter-in/meter-out type speed controllers, but it may not be possible to obtain the cushion effect (smooth start-up, soft stop).
- 3. In the case of other than horizontal mounting, it is recommended that the system have a reduced pressure supply circuit installed at its lower side. (This is also effective as a countermeasure against start-up delay on an upward stroke, and for air conservation.)

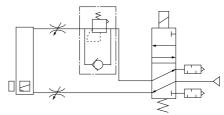

Lower-side reduced pressure supply circuit

#### Adjustment of Cushion Effect (Smooth start-up, Soft stop)

#### **⚠** Caution

1. The cushion cannot be adjusted.

There is no cushion needle adjustment of the kind found on current cushion mechanisms. As this product uses non-adjustable type cushions, the cushioning performance on each end may vary slightly.


### **Basic Type**

### **REA** Series

 $\emptyset$ 25,  $\emptyset$ 32,  $\emptyset$ 40,  $\emptyset$ 50,  $\emptyset$ 63




# REA Series Model Selection

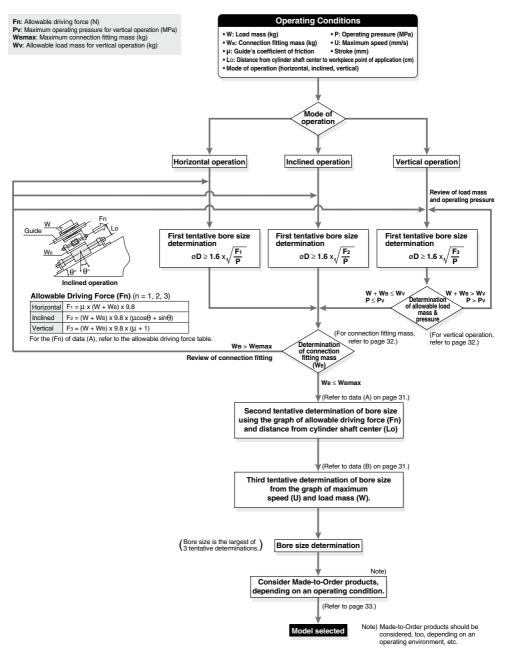

#### **Selection Method**

#### Selection Procedures

- Find the drive resisting force Fn (N) when moving the load horizontally.
- 2. Find the distance Lo (cm) from the point of the load where driving force is applied, to the center of the cylinder shaft.
- Select a bore size from Lo and Fn in Data (A).

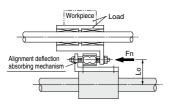



#### Selection Example


Given a load drive resisting force of Fn = 100 (N) and a distance from the cylinder shaft center to the load application point of Lo = 8 cm, find the intersection point by extending upward from the horizontal axis of data (A) where the distance from the shaft center is 8 cm, and then extending to the side, find the allowable driving force on the vertical axis. Models suitable to satisfy the requirement of 100 (N) are REA32 or REA40.


 Distance from cylinder shaft center, Lo, is the moment working point between the cylinder and the load.


#### <Data (A): Distance from Cylinder Shaft Center ——Allowable Driving Capacity>

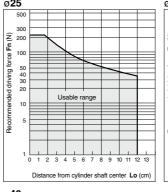


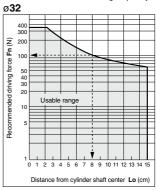

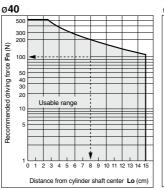

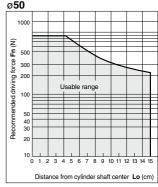


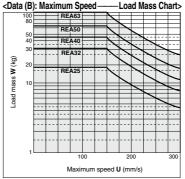

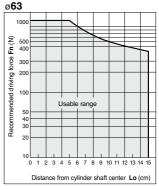


#### Cylinder Self-weight Deflection


When the cylinder is mounted horizontally, deflection appears due to its own weight as shown in the data, and the longer the stroke the greater the amount of variation in the shaft centers. A connection method as shown in the figure should be considered to allow for this deflection.

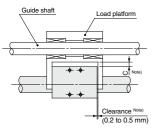

The above clearance is for reference.

Note) Referring to the self-weight deflection in the graph below, provide clearance so that the cylinder does not touch the mounting surface or the load section, and is able to operate smoothly within the minimum operating pressure range for a full stroke.

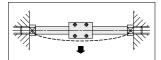

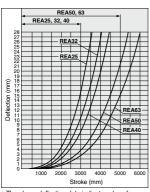

<sup>\*</sup> The above deflection data indicate values for external movement within the stroke.

#### Max. Connection Fitting Mass

REA (Basic type) is not directly connected to the load, and is guided by another shaft (LM guide, etc.). Load connection fittings should be designed so that they do not exceed the mass given in the table below


Maximum Connection Fitting Mass Wemax (kg)

Model	Maximum load (kg)			
REA25	1.2			
REA32	1.5			
REA40	2.0			
REA50	2.5			
REA63	3.0			

\* When loading the mass exceeding the above values, please consult with SMC.

#### **Vertical Operation**

The load should be guided by a ball type bearing (Linear guide, etc.). If a slide bearing is used, sliding resistance increases due to the load mass and load moment, which can cause malfunction. When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middle-stroke, use an external stopper to secure accurate positioning.

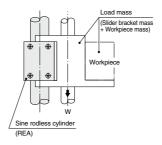

	Model	Allowable load mass <b>Wv</b> (kg)	Maximum operating pressure <b>Pv</b> (MPa)
	REA25	18.5	0.65
	REA32	30.0	0.65
	REA40	47.0	0.65
	REA50	75.0	0.65
ſ	REA63	115.0	0.65

Note) Use caution, since the magnetic coupling may be dislocated if it is used over the maximum operating pressure.

#### Intermediate Stop

The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or a return from an intermediate stop using an external stopper, etc.

#### **Cushion Stroke**

Model	Stroke (mm)
REA25	30
REA32	30
REA40	35
REA50	40
REA63	40


### Sine Rodless Cylinder/Basic Type

## **REA** Series

Ø25, Ø32, Ø40, Ø50, Ø63



#### How to Order

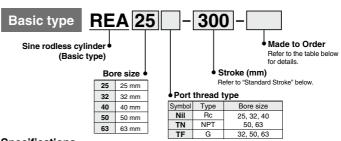

#### **Specifications**

Bore size (mm)	25	32	40	50	63
Fluid	Air				
Proof pressure	1.05 MPa				
Maximum operating pressure	0.7 MPa				
Minimum operating pressure	0.18 MPa				
Ambient and fluid temperature	-10 to 60°C (No freezing)				
Piston speed (Max.) Note)	50 to 300 mm/s				
Lubrication	Not required (Non-lube)				
Stroke length tolerance (mm)	0 to 250 st: 10, 251 to 100 st: 1.4, 1001 st or longer: 1.8				
Holding force (N)	363	588	922	1,470	2,260

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the body moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

# Symbol Air cushion (Magnet type)



#### Made to Order: Individual Specifications (For details, refer to pages 122 and 123.)

Symbol	Specifications
-X168	Helical insert thread specifications
-X206	Additional moving element mounting taps
-X210	Non-lubricated exterior specifications
-X324	Non-lubricated exterior specifications with dust seal

#### Made to Order Specifications Click here for details

Symbol	Specifications
-XB11	Long stroke type
-XC24	With magnet shielding plate
-XC57	With floating joint

Refer to the **Web Catalog** for clean room specifications.

#### Standard Stroke

Bore size (mm)	Standard stroke (mm)	Maximum manufacturable stroke (mm)				
25	200, 250, 300, 350, 400, 450, 500, 600, 700, 800					
32	200, 250, 300, 350, 400, 450, 500, 600, 700, 800	3000				
40	200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000					
50	<b>50</b> 200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000					
63	200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000	5000				
Note 1) Inte	rmediate stroke is available in 1 mm increments.					

Note 2) Strokes over 2000 mm are available as made-to-order. (Refer to -XB11.)

#### Weight

					(kg)
Bore size (mm)	25	32	40	50	63
Basic weight	0.65	1.16	1.96	3.04	4.57
Additional weight per each 50 mm of stroke	0.023	0.033	0.04	0.077	0.096


Calculation: (Example) **REA32-500** • Basic weight ··················1.16 (kg) • Additional weight ······0.033 (kg/50 st)

Additional weight .....0.033 (kg/50 st)
 Cylinder stroke ......500 (st)



#### **REA** Series

#### Working principle

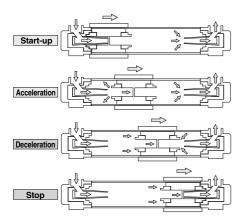

#### Start-up/Acceleration

The driving air from the cylinder port passes through the inside of the cushion ring, and flows into the left chamber of the drive piston from the clearance between the cushion seal and the U-shaped groove in the outer surface of the cushion ring. Further, the exhaust air in the right chamber of the drive piston passes from inside the hollow cushion ring through the cylinder port and is released to the atmosphere by the drive solenoid valve.

When the differential pressure (thrust) generated on either side of the drive piston becomes larger than the starting resistance of the machinery, the drive piston begins to move to the right. As the drive piston moves to the right, the U-shaped groove in the outer surface of the cushion ring gradually becomes deeper, a flow corresponding to the drive speed of the drive piston flows into the left chamber of the drive piston, and the drive piston proceeds to accelerate. The U-shaped groove is machined into the cushion ring in such a way that this acceleration process can proceed smoothly (as a sine function).

#### Deceleration/Stop


In current cushion mechanisms, when the cushion seal installed on the drive piston is pushed into the cushion ring at the right stroke end, the drive piston's right chamber is pressurized and a sudden braking force is generated.

However, in a sine rodless cylinder, due to the U-shaped groove provided on the outer surface of the cushion ring, whose depth changes as a sine function, a large quantity of the air in the cushion chamber is discharged when the cushion seal is pushed in, and a sudden braking force is not generated. With the progression of the cushion stroke, the discharge flow from the cushion chamber is restricted, and therefore, a soft stop is achieved at the stroke end.

#### Construction

ø**25**, ø**32**, ø**40** 



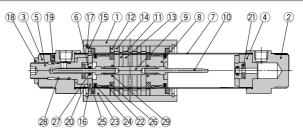


**Component Parts** 

No.	Description	Material	Note
1	Body	Aluminum alloy	
2	Head cover	Aluminum alloy	
3	Head cover A	Aluminum alloy	
4	End collar	Aluminum alloy	
5	End collar A	Aluminum alloy	
6	Cushion seal holder	Aluminum alloy	
7	Cylinder tube	Stainless steel	
8	Piston	Aluminum alloy	
9	Shaft	Stainless steel	
10	Cushion ring	Copper alloy	ø25 is stainless steel
11	Piston side yoke	Rolled steel plate	
12	External slider side yoke	Rolled steel plate	
13	Magnet A	_	
14	Magnet B	_	
15	Spacer	Aluminum alloy	

**Component Parts** 

00	iponent raits		
No.	Description	Material	Note
16	Bumper	Urethane rubber	
17	Retaining ring	Carbon tool steel	
18	Lock nut	Copper alloy	
19	Hexagon socket head set screw	Chromium steel	
20	Tube holder	Aluminum alloy	
21	Lube-retainer C	Special resin	
22	Wear ring A	Special resin	
23	Wear ring B	Special resin	
24	Piston seal	NBR	
25	Lube-retainer B	Special resin	
26	Lube-retainer A	Special resin	
27	Cushion seal	NBR	
28	O-ring	NBR	
29	O-ring	NBR	

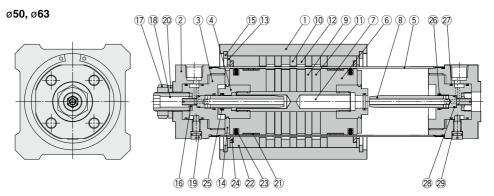

Component Parts

0011	inponent raits								
No.	Description	Material	Note						
1	Body	Aluminum alloy							
2	Head cover	Aluminum alloy							
3	Cushion ring holder	Aluminum alloy							
4	Cushion seal holder	Aluminum alloy							
5	Cylinder tube	Stainless steel							
6	Piston	Aluminum alloy							
7	Shaft	Stainless steel							
8	Cushion ring	Copper alloy							
9	Piston side yoke	Rolled steel plate							
10	External slider side yoke	Rolled steel plate							
11	Magnet A	_							
12	Magnet B	_							
13	Spacer	Aluminum alloy							
14	Bumper	Urethane rubber							
15	Retaining ring	Carbon tool steel							


Component Parts

No.	Description	Material	Note
16	Lock nut B	Carbon steel	
17	Lock nut A	Carbon steel	
18	Adjustment screw	Carbon steel	
19	Stopper bolt	Carbon steel	
20	Spring washer	Steel wire	
21	Wear ring A	Special resin	
22	Wear ring B	Special resin	
23	Piston seal	NBR	
24	Lube-retainer	Special resin	
25	Cushion seal	NBR	
26	O-ring	NBR	
27	O-ring	NBR	
28	O-ring	NBR	
29	O-ring	NBR	

#### **REA** Series

#### **Dimensions**


#### REA25/32/40

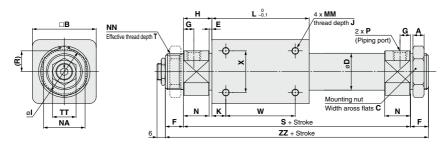

Model	Α	В	С	D	E	F	G	Н	ı	J	K	L	MM	N	NA	NN	R	S	Т
REA25	8	46	32	26.4	2	13	7.5	20.5	34	8	10	70	M5 x 0.8	18.5	30	M26 x 1.5	15	111	10
REA32	8	60	32	33.6	2	16	8	22	40	8	15	80	M6 x 1	20	36	M26 x 1.5	18	124	13
REA40	10	70	41	41.6	3	16	11	29	50	10	16	92	M6 x 1	26	46	M32 x 2	23	150	13

	Model	w	х	zz	тт	P	(Piping po	rt)
	Model	VV	^	22	١.,	Nil	TN	TF
	REA25	50	30	137	17	Rc1/8	NPT1/8	G1/8
-[	REA32	50	40	156	19	Rc1/8	NPT1/8	G1/8
	REA40	60	40	182	22	Rc1/4	NPT1/4	G1/4

#### **REA50/63**

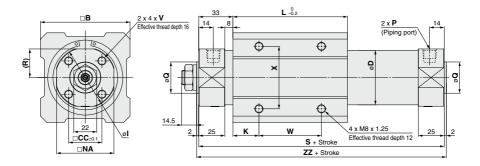

Model	_	СС	_		v		NA	_	_	_	v	14/	,   🗸	w x	v	v   77	P (Piping port)		
wodei	-	CC	ע	'		-	INA	u	, K	"	, v	W	^	22	Nil	TN	TF		
REA50	86	32	52.4	58	25	110	55	30 -0.007	27.5	176	M8 x 1.25	60	60	180	Rc1/4	NPT1/4	G1/4		
REA63	100	38	65.4	72	26	122	69	32 -0.007	34.5	188	M10 x 1.5	70	70	192	Rc1/4	NPT1/4	G1/4		

#### Mounting Nuts: 2 pcs. Packaged with Each Cylinder





Model	Applicable bore size (mm)	d	Н	В	С
SN-032B	ø25, ø32	M26 x 1.5	8	32	37
SN-040B	ø <b>40</b>	M32 x 2.0	10	41	47.3





# **REA** Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### Mounting

#### 

 Take care to avoid nicks or other damage on the outside surface of the cylinder tube.

This can lead to a damage of the scraper and the wear ring, which in turn can cause malfunction.

2. Use caution to the rotation of the external slider.

Rotation should be controlled by connecting it to another shaft (linear guide, etc.).

3. Do not operate with the magnetic coupling out of position.


If the magnetic coupling is out of position, push the external slider by hand (or the piston slider with air pressure) back to the proper position at the stroke end.

4. Be sure that both head covers are secured to the mounting surface before operating the cylinder.


Avoid operation with the external slider secured to the surface.

#### 5. Do not apply a lateral load to the external slider.

When a load is mounted directly to the cylinder, variations in the alignment of each shaft center cannot be offset, which results in the generation of a lateral load that can cause malfunction. The cylinder should be operated using a connection method which allows for shaft alignment variations and deflection due to the cylinder's own mass. A drawing of a recommended mounting is shown in Fig. (2).

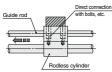

Variations in the load and cylinder shaft alignment cannot be offset and may result in a malfunction.

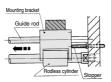

Shaft alignment variations are offset by providing clearance between the mounting bracket and cylinder.

Moreover, the mounting bracket is extended above the cylinder shaft center, so that the cylinder is not subjected to moment.

Fig. (1) Incorrect mounting

Fig. (2) Recommended mounting

#### Use caution regarding the allowable load mass when operating in a vertical direction.

The allowable load mass when operating in a vertical direction (reference values on page 32 is determined by the model selection method. However, if a load greater than the allowable value is applied, the magnetic coupling may break and there is a possibility of dropping the load. When using this type of application, please contact SMC regarding the operating conditions (pressure, load, speed).

#### **Disassembly and Maintenance**

#### 

 When reattaching the head covers after disassembly, confirm that they are tightened securely.

When disassembling, hold the wrench flats of one head cover with a vise, and remove the other cover using a spanner or adjustable wrench on the wrench flats. When retightening, first coat with Loctite<sup>®</sup> (no. 542 Red), and retighten 3° to 5° past the original position prior to removal.

#### Stroke Adjustment

#### **⚠** Caution

- This mechanism is not intended for adjustment of the cushion effect (smooth start-up, soft stop). This mechanism is for matching of the cylinder's stroke end position to the mechanical stopper, etc., of a machine. (adjustment range from 0 to -2 mm)
- Before adjustment is performed, shut off the drive air, release any residual pressure and implement measures to prevent dropping of workpieces, etc.


#### Stroke End Adjustment

(To ensure safety, implement with air shut down.)

#### 

- 1. Loosen lock nut A.
- Insert a wrench into the hexagon socket of the adjusting screw, and turn it to the left or right, matching the cushion ring holder (stroke end) with the position of the external stopper by moving it backward or forward.
- After the stroke end adjustment is completed, retighten lock nut A, and apply high strength Loctite<sup>®</sup> no. 262 or another comparable locking agent.

#### REA25, 32, 40

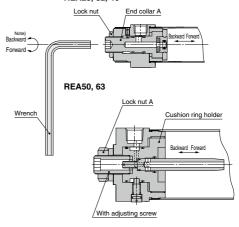

Note) Do not move it backward (Left rotation), as it is set to a full stroke at the time of shipment.

#### Adjusting Screw Hexagon Socket

Model	Width across flats (mm)
REA25	5
REA32	5
REA40	6
REA50	8
RFA63	8

#### Lock Nut A tightening Torque

Model	Tightening torque (N·m)
REA25	1.2
REA32	1.2
REA40	2.1
REA50	3.4
REA63	3.4



38


### **Direct Mount Type**

### **REAR** Series

 $\emptyset$ 10,  $\emptyset$ 15,  $\emptyset$ 20,  $\emptyset$ 25,  $\emptyset$ 32,  $\emptyset$ 40




# **REAR Series Model Selection**

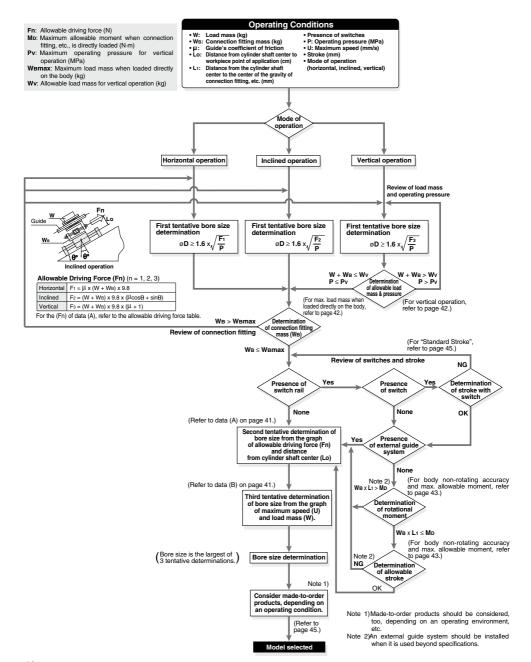

#### **Selection Method**

#### Selection Procedures

- 1. Find the drive resisting force Fn (N) when moving the load horizontally.
- 2. Find the distance Lo (cm) from the point of the load where driving force is applied, to the center of the cylinder shaft.
- 3. Select a bore size from Lo and Fn in Data (A).

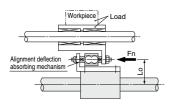



#### Selection Example


Given a load drive resisting force of Fn = 100 (N) and a distance from the cylinder shaft center to the load application point of Lo = 8 cm, find the intersection point by extending upward from the horizontal axis of data (A) where the distance from the shaft center is 8 cm, and then extending to the side, find the allowable driving force on the vertical axis. Models suitable to satisfy the requirement of 100 (N) are REAR32 or REAR40.


\* Distance from cylinder shaft center, Lo, is the moment working point between the cylinder and the load


#### <Data (A): Distance from Cylinder Shaft Center — -Allowable Driving Force>

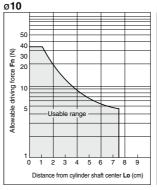


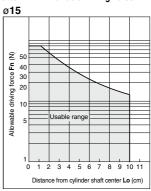


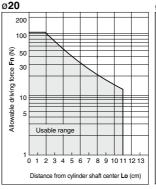

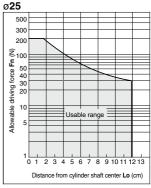


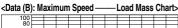

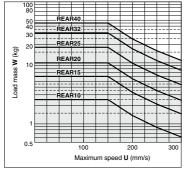

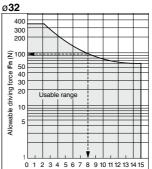


Distance from cylinder shaft center Lo (cm)

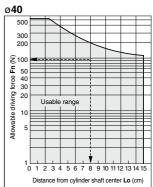


#### Cylinder Self-weight Deflection

When the cylinder is mounted horizontally, deflection appears due to its own weight as shown in the data, and the longer the stroke, the greater the amount of variation in the shaft centers. Therefore, a connection method should be considered which allows for this variation as shown in the drawing.

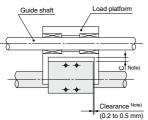

The above clearance is for reference.

Note)Referring to the self-weight deflection in the graph below, provide clearance so that the cylinder does not touch the mounting surface or the load section, and is able to operate smoothly within the minimum operating pressure range for a full stroke.

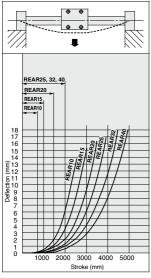


\* The above deflection data indicate values when the external slider has moved to the middle of the stroke.

#### **Vertical Operation**

The load should be guided by a ball type bearing (Linear guide, etc.). If a slide bearing is used, sliding resistance will increase due to the load weight and moment, and this can cause malfunction.

When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middle-stroke, use an external stopper to secure accurate positioning.

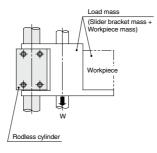


Bore size (mm)	Model	Allowable load mass <b>Wv</b> (kg)	Maximum operating pressure <b>Pv</b> (MPa)	
10	REAR10	2.7	0.55	
15	REAR15	7.0	0.65	
20	REAR20	11.0	0.65	
25	REAR25	18.5	0.65	
32	REAR32	30.0	0.65	
40	REAR40	47.0	0.65	

Note) Use caution, since the magnetic coupling may be dislocated if it is used over the maximum operating pressure.

### Maximum Load Mass when Loaded Directly on Body

When the load is applied directly to the body, it should be no greater than the maximum values shown in the table below.

Model	Maximum load mass WBmax (kg)
REAR 10	0.4
REAR 15	1.0
REAR 20	1.1
REAR 25	1.2
REAR 32	1.5
RFAR 40	2.0

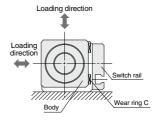

#### Intermediate Stop

The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or return from an intermediate stop using an external stopper, etc.


#### **Cushion Stroke**

Model	Stroke (mm)
REAR10	20
REAR15	25
REAR20	30
REAR25	30
REAR32	30
REAR40	35

### Body Non-rotating Accuracy and Max. Allowable Moment (With switch rail) (Reference values)

Reference values for non-rotating accuracy and maximum allowable moment at stroke end are indicated below.

Bore size (mm)	Non-rotating accuracy	Maximum allowable moment <b>M</b> D (N·m)	Allowable (2) stroke (mm)
10	6.0	0.05	100
15	4.5	0.15	200
20	3.7	0.20	300
25	3.7	0.25	300
32	3.1	0.40	400
40	2.8	0.62	400

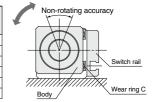


- Note 1) Avoid operations where rotational torque (moment) is applied. In such a case, the use of an external guide is recommended.
- Note 2) The above reference values will be satisfied within the allowable stroke ranges. However, caution is necessary because as the stroke becomes longer the inclination (rotation angle) within the stroke can be expected to increase.
- Note 3) When a load is applied directly to the body, the work load should be no greater than the allowable load mass on page 42.

### Sine Rodless Cylinder/Direct Mount Type

# REAR Series

Ø10, Ø15, Ø20, Ø25, Ø32, Ø40

#### How to Order

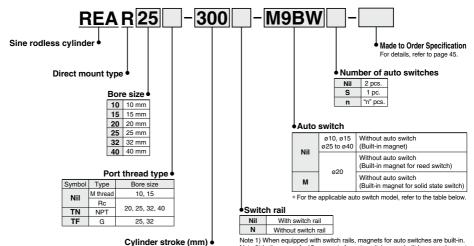

Cylinder stroke (mm) •
Refer to "Standard Stroke" on page 45.

Note 1) When equipped with switch rails, magnets for auto switches are built-in. Note 2) In the case of o15, magnets for auto switches are built-in even when not equipped with switch rails.

\* Solid state auto switches marked with "O" are produced upon receipt of order.

#### Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches.

			E,		L	oad volta	age		Lead v	vire le	ngth (	m)	D	using al											
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	D	С	AC	Auto switch model	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applica	ble load										
<u>-</u>				3-wire (NPN)		5 V,12 V		M9N	•	•	•	0	0	IC											
switch	_			3-wire (PNP)		5 V,12 V		M9P	•	•	•	0	0	circuit											
S				2-wire		12 V		M9B	•	•	•	0	0	_											
anto	Diagnostic indication			3-wire (NPN)		5 V,12 V		M9NW	•	•	•	0	0	IC	Relay,										
<u>a</u>	(2-color indicator)	Grommet	Yes	3-wire (PNP) 24	24 V 3 V, 12 V	5 V, 12 V   -	M9PW	•	•	•	0	0		PLC											
state	(2-color indicator)			2-wire							12 V		M9BW	•	•	•	0	0	_	FLC					
	Water resistant			3-wire (NPN)		5 V.12 V		M9NA*1	0	0	•	0	0	IC											
Solid	(2-color indicator)			3-wire (PNP)										3 V,12 V	J V,12 V	5 V,12 V	5 V, 12 V		M9PA*1	0	0	•	0	0	circuit
	(2-color indicator)			2-wire		12 V		M9BA*1	0	0	•	0	0	_											
Reed auto switch	_	Crommet	Yes	3-wire (NPN equivalent)	_	5 V	_	A96	•	-	•	_	_	IC circuit	_										
Be co	_	- Grommet 100	2-wire	24 V	12 V	100 V	A93	•	•	•	•	_	_	Relay,											
art			N0	2-wire	24 V	12 V	100 V or less	A90	•	_	•	_	_	IC circuit	PLC										

<sup>\*1</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

\* Lead wire length symbols: 0.5 m-----Nil (Example) M9NW

1 m------M (Example) M9NWM

3 m······L (Example) M9NWL 5 m·····Z (Example) M9NWZ

**SMC** 

<sup>\*</sup> Since there are other applicable auto switches than listed, refer to page 49 for details. \* For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.

<sup>\*</sup> Auto switches are shipped together (not assembled).

# 

#### Symbol Air cushion (Magnet type)





#### **Made to Order Specifications** Click here for details

Symbol	Specifications
-XC57	With floating joint

#### **Specifications**

Bore size (mm)	10	15	20	25	32	40
Fluid	Air					
Proof pressure		1.05 MPa				
Maximum operating pressure	0.7 MPa					
Minimum operating pressure	0.18 MPa					
Ambient and fluid temperature	-10 to 60°C (No freezing)					
Piston speed (Max.) Note)			50 to 30	00 mm/s		
Lubrication	Not required (Non-lube)					
Stroke length tolerance (mm)	0 to 250 st: +1.0, 251 to 1000 st: +1.4, 1001 st or longer: +1.8					
Holding force (N)	53.9	137	231	363	588	922

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the body moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

#### Standard Stroke

Bore size (mm)	Standard stroke (mm)	Maximum manufacturable stroke (mm)	Maximum stroke with switch stroke (mm)
10	150, 200, 250, 300	500	500
15	150, 200, 250, 300, 350, 400 450, 500	1000	750
20		1500	1000
25 32	200, 250, 300, 350, 400, 450 500, 600, 700, 800	2000	1500
40	200, 250, 300, 350, 400, 450 500, 600, 700, 800, 900, 1000	2000	1500

Note) Intermediate stroke is available in 1 mm increments.

#### Weight


							(kg)
Item	Bore size (mm)	10	15	20	25	32	40
Basic	REAR□ (with switch rail)	0.111	0.277	0.440	0.660	1.27	2.06
weight (for 0 st)	REAR□-□N (without switch rail)	0.080	0.230	0.370	0.580	1.15	1.90
Additional weight per each 50 mm of stroke (when equipped with switch rail)		0.034	0.045	0.071	0.083	0.113	0.133
Additional weight per each 50 mm of stroke (when not equipped with switch rail)		0.014	0.020	0.040	0.050	0.070	0.080


Calculation: (Example) **REAR25-500** (with switch rail) • Basic weight -------- 0.660 (kg) • Additional weight ----- 0.083 (kg/50 st) • Cylinder stroke ----- 500 (st) 0.660 + 0.083 x 500 + 50 = 1.49 kg




#### **REAR** Series

#### Construction: ø10, ø15

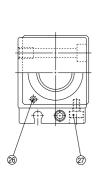

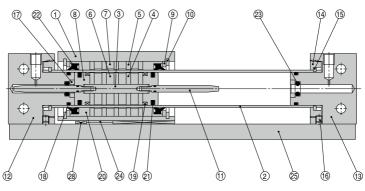

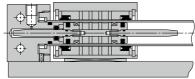

#### REAR10

#### **Component Parts**

No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodized
2	Cylinder tube	Stainless steel	
3	Shaft	Stainless steel	
4	Piston side yoke	Rolled steel plate	Zinc chromated
5	External slider side yoke	Rolled steel plate	Zinc chromated
6	Magnet A	_	
7	Magnet B	_	
8	Piston	Aluminum alloy	Chromated
9	Spacer	Rolled steel plate	Nickel plated
10	Retaining ring	Carbon tool steel	Phosphate coated
11	Cushion ring	Stainless steel	
12	End cover A	Aluminum alloy	Hard anodized
13	End cover B	Aluminum alloy	Hard anodized
14	Attachment ring	Aluminum alloy	Hard anodized
15	Type C retaining ring	Stainless steel	REAR10
15	for axis	Hard steel wire material	Nickel plated (REAR15)
16	Hexagon socket head set screw	Chromium steel	Nickel plated
17	Retaining plate	Aluminum alloy	

#### omponent Parts

COIII	Component Parts					
No.	Description	Material	Note			
18*	Cylinder tube gasket	NBR				
19*	Wear ring A	Special resin				
20*	Wear ring B	Special resin				
21*	Piston seal	NBR				
22*	Scraper	NBR				
23*	Cushion seal	NBR				
24	Magnetic shielding plate	Rolled steel plate	Chromated			
25	Switch rail	Aluminum alloy	Clear anodized			
26	Magnet	_				
27	Hexagon socket head cap screw	Chromium steel	Nickel plated			
28*	Wear ring C	Special resin				

#### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
10	REAR10-PS	Set of nos. above (8), (2), (2), (23), (28) Note 1) Note 2)
15	REAR15-PS	Set of nos. above (8), (9), (2), (2), (2), (3), (8) <sup>Note 1)</sup>

Note 1) It may be difficult to replace the cushion seal 3.


Note 2) For replacement of wear ring A (9) of Ø10, please consult with SMC.

\* Seal kit includes a grease pack (ø10: 5 g and 10 g, ø15: 10 g).

Order with the following part number when only the grease pack is needed. For ø10 grease pack part no.: GR-F-005 (5 g) For external sliding part GR-S-010 (10 g) For tube interior

For Ø15 grease pack part no.: GR-S-010 (10 g)

#### Switch Rail Accessory Kit

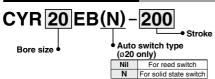


#### Switch Rail Accessory Kit

Bore size (mm)	Kit no.	Contents
10	CYR10EB-□	Above nos. 25, 26, 27, 28
15	CYR15EB-□	Above nos. 24, 25, 27, 28 <sup>Note 2)</sup>

Note 1) ☐ indicates the stroke.

Note 2) Ø15 has internal magnets in the body.

#### Construction: ø20 to ø40

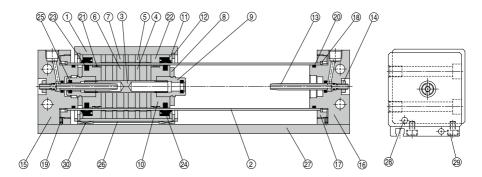

#### **Component Parts**

No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodized
2	Cylinder tube	Stainless steel	
3	Shaft	Stainless steel	
4	Piston side yoke	Rolled steel plate	Zinc chromated
5	External slider side yoke	Rolled steel plate	Zinc chromated
6	Magnet A	_	
7	Magnet B	_	
8	Bumper	Urethane rubber	
9	Cushion seal holder	Aluminum alloy	Chromated
10	Piston	Aluminum alloy	Chromated
11	Spacer	Rolled steel plate	Nickel plated
12	Retaining ring	Carbon tool steel	Phosphate coated
13	Cushion ring	Brass	Electroless nickel plated (REAR 32, 40)
13	Cusilion ring	Stainless steel	REAR 20, 25
14	Lock nut B	Carbon steel	Nickel plated
15	End cover A	Aluminum alloy	Hard anodized
16	End cover B	Aluminum alloy	Hard anodized
17	Attachment ring	Aluminum alloy	Hard anodized
18	Type C retaining ring	Stainless steel	REAR 25, 32
18	for axis	Hard steel wire material	Nickel plated (REAR 20, 40)
19	Hexagon socket head set screw	Chromium steel	Nickel plated

Component Parts								
Material	Note							
NBR								
Special resin								
Special resin								
NBR								
NBR								
NBR	Chromated							
Rolled steel plate	Clear anodized							
Aluminum alloy								
_	Nickel plated							
Chromium steel								
Special resin								
	NBR Special resin Special resin NBR NBR NBR NBR AlBR Rolled steel plate Aluminum alloy — Chromium steel							

<sup>\*</sup> Seal kit includes @ to @, @. Order the seal kit, based on each bore size.

#### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
20	REAR20-PS	
25	REAR25-PS	Above nos.
32	REAR32-PS	(a), (d), (d), (d), (d), (d), (d) (e)
40	REAR40-PS	
	_	


Note) Cushion seal (2) may be difficult to be replaced.

Seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is needed.

Grease pack part no.: GR-S-010 (10 g)

#### Switch Rail Accessory Kit

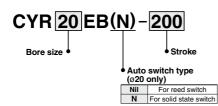


#### Switch Rail Accessory Kit

	Bore size (mm)		Kit no.	Contents				
	For reed switch		CYR20EB-□					
	20	For solid state switch	CYR20EBN-□	Above nos.				
	25 32 40		CYR25EB-□	26, 27, 28, 29, 30				
			CYR32EB-□	49, 69, 69, 69, 59				
			CYR40EB-□					

Note)  $\square$  indicates the stroke.

#### **REAR** Series


#### **Dimensions**

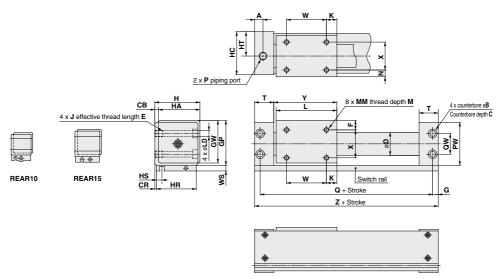

																				(mm)
Model	Α	В	С		СВ	CR	D	F	G	GP	GW	Н	HA	HC	HE	3   ⊦	IS	HT	Jх	Е
REAR10	10.5	6.5	3.2	!	2	0.5	12	6.5	6	27	25.5	26	24	25	24	1 5		14	M4 x 0	.7 x 6
REAR15	12	8	4.2	.	2	0.5	17	8	7	33	31.5	32	30	31	30	) 8	.5	17	M5 x 0	.8 x 7
REAR20	9	9.5	5.2	!	3	1	22.8	9	6	39	37.5	39	36	38	36	3 7	.5	21	M6 x	1 x 8
REAR25	8.5	9.5	5.2	:	3	1	27.8	8.5	6	44	42.5	44	41	43	41	6	.5	23.5	M6 x	1 x 8
REAR32	10.5	11	6.5		3	1.5	35	10.5	7	55	53.5	55	52	54	51	7	.	29	M8 x 1.2	25 x 10
REAR40	10	11	6.5		5	2	43	13	7	65	63.5	67	62	66	62	2 8	: :	36	M8 x 1.2	25 x 10
Model	ĸ	L	LD	м		мм	N		P			PW	a	QW	т	w	ws	x	Y	z
WIOGCI							.,	Nil	TI	N	TF		•	~	·			_ ^		
REAR10	9	38	3.5	4	M:	3 x 0.5	4.5	M5 x 0.8	_	-		26	68	14	19.5	20	8	15	39.5	80
REAR15	14	53	4.3	5	M	4 x 0.7	6	M5 x 0.8	_	-		32	84	18	21	25	7	18	54.5	98
REAR20	11	62	5.6	5	M	4 x 0.7	7	Rc 1/8	NPT	1/8	_	38	95	17	20.5	40	7	22	64	107
REAR25	15	70	5.6	6	M	5 x 0.8	6.5	Rc 1/8	NPT	1/8	G 1/8	43	105	20	21.5	40	7	28	72	117
REAR32	13	76	7	7	N	Л6 x 1	8.5	Rc 1/8	NPT	1/8	G 1/8	54	116	26	24	50	7	35	79	130
REAR40	15	90	7	8	N	16 x 1	11	Rc 1/4	NPT	1/4	_	64	134	34	26	60	7	40	93	148
·																				_

### **REAR** Series **Auto Switch Mounting**

#### Auto Switch Proper Mounting Position (Detection at Stroke End)

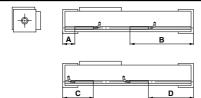

#### **Auto Switch Proper Mounting Position**

ø10 to ø40

								(111111)	
Auto switch model		Α		В		С	D		
Bore size (mm)	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	
10	30	34	50	46	50	46	_	34	
15	19.5	23.5	78.5	74.5	_	_	58.5	62.5	
20	19.5	23.5	87.5	83.5	39.5	35.5	67.5	71.5	
25	19	23	98	94	42	38	75	79	
32	22.5	26.5	107.5	103.5	45.5	41.5	84.5	88.5	
40	24.5	28.5	123.5	119.5	47.5	43.5	100.5	104.5	

Note 1) Auto switches cannot be installed in Area C in the case of ø15.

Note 2) D-A9□ cannot be mounted on D of ø10.

Note 3) Adjust the auto switch after confirming the operating conditions in the actual setting.

ø <b>25 to</b> ø	40			(mm)
Auto switch model	Α	В	С	D
Bore size (mm)	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W
25	18	99	43	74
32	21.5	108.5	46.5	83.5
40	23.5	124.5	48.5	99.5

Note) Adjust the auto switch after confirming the operating conditions in the actual setting

#### Operating Range


						(mm)
A. da accidada accadad		Е	Bore siz	ze (mn	1)	
Auto switch model	10	15	20	25	32	40
D-A9□	13	8	6	7.5	8	9
D-M9□W						
D-M9□	6.5	4.5	5.5	4	4.5	5
D-M9□A						
D-Z7□/Z80	_	_	_	9	9	11
D-Y5□/Y7P/Y7□W	_	_	_	7	6	6

\* Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion)
There may be the case it will vary substantially depending on an ambient environment.

#### Auto Switch Mounting Bracket: Part No.

Auto switch model	Bore size (mm)
	ø25, ø32, ø40
D-A9□ D-M9□ D-M9□W D-M9□A	BMG2-012

D-A9\(\to\)/M9\(\to\)/M9\(\to\)A

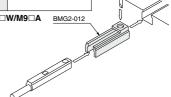

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to pages 1341 to 1435.

	• •				
	Auto switch type	Model	Electrical entry (Fetching direction)	Features	Applicable bore size
Bd		D-Z73, Z76	Grommet (In-line)	_	
Reed	D-Z80			ø25 to ø40	
	Solid state	D-Y59A, Y59B, Y7P	Grommet (In-line)	_	023 to 040
	Solid State	D-Y7NW, Y7PW, Y7BW	Gionnie (in-line)	Diagnostic indication (2-color indicator)	

<sup>For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1410 and 1411 for details.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available. Refer to pages 1360 and 1362 for details.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available. Refer to pages 1360 and 1362 for details.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available. Refer to pages 1360 and 1362 for details.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available.

Normally closed (NC = b contact) solid state auto switches (NC = b contact) solid state auto switches (NC = b contact) solid state auto switches (NC = b contact) solid state auto s</sup> 



# REAR Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### Mounting

#### 

 Take care to avoid nicks or other damage on the outside surface of the cylinder tube.

This can lead to a damage of the scraper and the wear ring, which in turn can cause malfunction.

2. Use caution to the rotation of the external slider.

Rotation should be controlled by connecting it to another shaft (linear guide, etc.).


Do not operate with the magnetic coupling out of position.

If the magnetic coupling is out of position, push the external slider by hand (or the piston slider with air pressure) back to the proper position at the stroke end.


- The cylinder is mounted with bolts through the mounting holes in the end covers. Be sure they are tightened securely.
- 5. Be sure that both end covers are secured to the mounting surface before operating the cylinder.
  - Avoid operation with the external slider secured to the surface.

#### 6. Do not apply a lateral load to the external slider.

When a load is mounted directly to the cylinder, variations in the alignment of each shaft center cannot be offset, which results in the generation of a lateral load that can cause malfunction. The cylinder should be operated using a connection method which allows for shaft alignment variations and deflection due to the cylinder's own weight. A drawing of a recommended mounting is shown in Fig. (2).

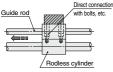

Variations in the load and cylinder shaft alignment cannot be offset and may result in a malfunction.

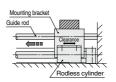

Shaft alignment variations are offset by providing clearance between the mounting bracket and cylinder. Moreover, the mounting bracket is extended above the cylinder shaft

Moreover, the mounting bracket is extended above the cylinder shaft center, so that the cylinder is not subjected to moment.

Figure (1) Incorrect mounting

Figure (2) Recommended mounting


#### Use caution regarding the allowable load mass when operating in a vertical direction.

The allowable load mass when operating in a vertical direction (reference values on page 42) is determined by the model selection method, however, if a load greater than the allowable value is applied, the magnetic coupling may break and there is a possibility of dropping the load. When using this type of application, please contact SMC regarding the operating conditions (pressure, load).

#### **Disassembly and Maintenance**

#### **⚠** Caution

1. Special tools are necessary for disassembly.

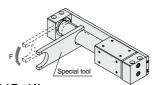

Special Tool No.

Part no.	Applicable bore size (mm)
CYRZ-V	10, 15, 20
CYRZ-W	25, 32, 40


### Slider Type/Slide Bearing

### **REAS** Series

Ø10, Ø15, Ø20, Ø25, Ø32, Ø40



# REAS Series Model Selection

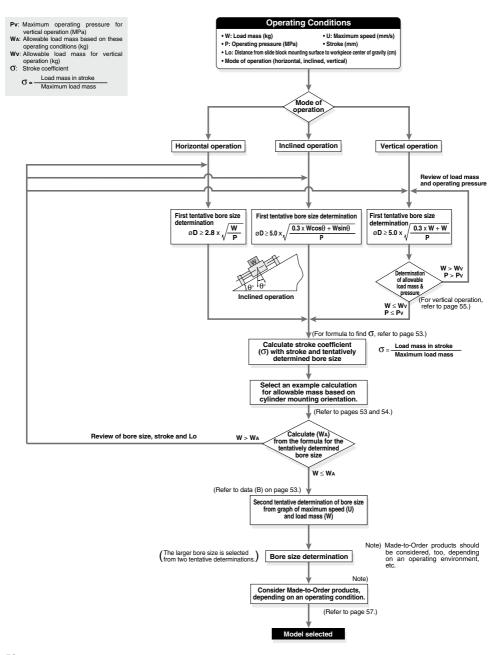

#### How to Find $\sigma$ when Selecting the Allowable Load Mass


Since the maximum load mass with respect to the cylinder stroke changes as shown in the table below,  $\sigma$  should be considered as a coefficient determined in accordance with each stroke.

- Example) For REAS25-650 (1) Maximum load mass = 20 kg
  - (2) Load mass for 650 st = 13.6 kg
  - (3)  $\sigma = \frac{13.6}{22} = 0.68$  is the result.


#### Calculation Formula for $\sigma$ ( $\sigma$ < 1)

Calcula	tion Formula i	or (0 ≤ 1)	31. Stroke (IIIII)			
Model	REAS10	REAS15	REAS20			
σ=	10 <sup>(0.86 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(1.5 - 1.3 × 10<sup>-3</sup> × ST)</sup>	10 <sup>(1.71 - 1.3 × 10<sup>-3</sup> × ST)</sup>			
	3	7	12			
Model	REAS25	REAS32	REAS40			
σ=	10 <sup>(1.98 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(2.26 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(2.48 - 1.3 x 10<sup>-3</sup> x ST)</sup>			

Note) Calculate with  $\sigma$  = 1 for all applications up to ø10–300 mmST, ø15–500 mmST, ø20–500 mmST, ø25–500 mmST, ø32–600 mmST, ø40–600 mmST.

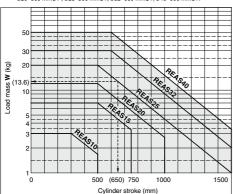


#### <Data (B): Maximum Speed——Load Mass Chart>

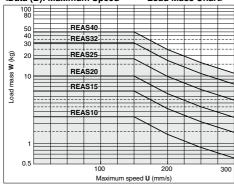

#### Example of Allowable Load Mass Calculation Based on Cylinder Mounting Orientation

#### 1. Horizontal Operation (Floor mounting)

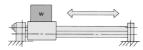


#### Maximum Load Mass (Center of slide block)

Maximan		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	000.	o. o.i.a.	J DIOUN,	(kg)	
Bore size (mm)	10	15	20	25	32	40	
Max. load mass (kg)	3	7	12	20	30	50	
Stroke (Max.)	Up to 300st	Up to 500st	Up to 500st	Up to 500st	Up to 600st	Up to 600st	

The above maximum load mass values will change with the stroke length for each cylinder size, due to limitation from warping of the guide shafts. (Take note of the coefficient  $\sigma$ .)

Moreover, depending on the operating direction, the allowable load mass may be different from the maximum load mass.


#### 2. Horizontal Operation (Wall mounting)

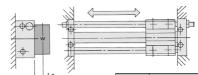

Lo: Distance from mounting surface to load center of gravity (cm)

Allowable load mass Wa (kg)
 13.8 + 2Lo
<u></u> <del>0.258</del> 17 + 2Lo

#### 3. Vertical Operation

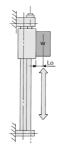


Bore size (mm)	Allowable load mass Wa (kg)
10	<u> </u>
	2.2 + Lo
15	<b>σ</b> ⋅13.23
13	2.7 + Lo
20	σ·26.8
20	2.9 + Lo
25	<b>σ</b> ⋅44.0
25	3.4 + Lo
32	σ⋅88.2
32	4.2 + Lo
40	<b>σ</b> ⋅167.8
40	5.1 + Lo

Lo: Distance from mounting surface to load center of gravity (cm) Note) Consider a safety factor for drop prevention.

#### **Example of Allowable Load Mass Calculation Based on Cylinder Mounting Orientation**

#### 4. Inclined Operation (in operating direction)

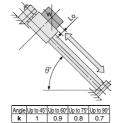


Bore size (mm)	Allowable load mass Wa (kg)
10	σ·10.5·K
10	$3.5\cos\theta + 2 (2.2 + Lo) \sin\theta$
15	σ.35.K
15	$5\cos\theta + 2 (2.7 + \text{Lo}) \sin\theta$
20	σ.72.K
20	6cosθ + 2 (2.9 + Lo) sinθ
25	σ·120·K
25	$6\cos\theta + 2 (3.4 + \text{Lo}) \sin\theta$
32	σ.210.K
32	7cosθ + 2 (4.2 + Lo) sinθ
40	σ-400-K
40	8cosθ + 2 (5.1 + Lo) sinθ

Angle coefficient (k): **k** = [up to  $45^{\circ}$  (=  $\theta$ )] = 1, [up to  $60^{\circ}$ ] = 0.9, [up to  $75^{\circ}$ ] = 0.8, [up to  $90^{\circ}$ ] = 0.7

Lo: Distance from mounting surface to load center of gravity (cm)


#### 5. Inclined Operation (at a right angle to operating direction)

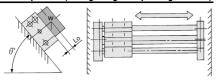


Lo: Distance from mounting surface to load center of gravity (cm)

Allowable load mass Wa (kg)
σ·12.0
4 + 2 (2.2 + Lo) sinθ
σ·36.4
5.2 + 2 (2.7 + Lo) sinθ
σ.74.4
6.2 + 2 (2.9 + Lo) sinθ
<b>σ</b> ·140
7 + 2 (3.4 + Lo) sinθ
<b>σ</b> ⋅258
8.6 + 2 (4.2 + Lo) sinθ
σ.520
10.4 + 2 (5.1 + Lo) sinθ

#### 6. Load Center Offset in Operating Direction (Lo)

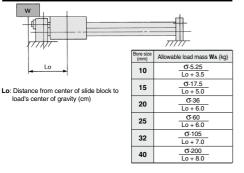

#### 7. Horizontal Operation (Pushing load, Pusher)

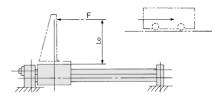

F: Drive (from slide block to position Lo) resistance force (kg)
Lo: Distance from mounting surface to load center of gravity (cm)

Bore size (mm)	10	15	20
Allowable drive resisting force (FA) (kg)	<u>σ⋅5.25</u> 2.2 + Lo	<u>σ·17.5</u> 2.7 + Lo	
Bore size (mm)	25	32	40
Allowable drive resisting force	_ σ.60	<b>σ</b> ⋅105	σ⋅200

34+10


(FA) (kg)

Wa (kg)

#### 8. Horizontal Operation (Load, Lateral offset Lo)

42+10

51+10

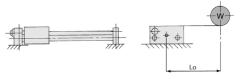

8.6 + Lo

10.4 + Lo

Lo: Distance from mounting surface to load center of gravity (cm)

Bore size (mm)	10	15	20
Allowable load mass <b>Wa</b> (kg)		<u> </u>	<u>σ⋅52.1</u> 6.2 + Lo
Bore size (mm)	25	32	40
Allowable load mass	σ.98	<b>σ</b> ⋅180	σ-364

7.0 + Lo

#### Vertical Operation

When operating a load vertically, it should be operated within the allowable load mass and maximum operating pressures shown in the table below.

Use caution since operating above the prescribed values may lead to a dropping of the load with the magnetic coupling out of position.

When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middle-stroke, use an external stopper to secure accurate positioning.


Bore size (mm)	Model	Model Allowable load mass Wv (kg)				
10	REAS10	2.7	0.55			
15	REAS15	7.0	0.65			
20	REAS20	11.0	0.65			
25	REAS25	18.5	0.65			
32	REAS32	30.0	0.65			
40	REAS40	47.0	0.65			

#### Stroke Adjustment

The adjusting bolt is adjusted to the optimum position for smooth acceleration and deceleration at the time of shipment, and should be operated at the full stroke. When stroke adjustment is necessary, the maximum amount of adjustment on one side is 2 mm. (Do not adjust more than 2 mm, as it will not be possible to obtain smooth acceleration and deceleration.)

#### Stroke adjustment method

Loosen the hexagon nut, and after performing the stroke adjustment from the plate side with a hexagon wrench, retighten and secure the hexagon nut.

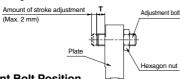

### Adjustment Bolt Position (at the time of shipment), Hexagon Nut Tightening Torque

Model	T (mm)	Tightening torque (N·m)
REAS10	1	1.67
REAS15	1	1.07
REAS20	1.5	3.14
REAS25	1.5	10.8
REAS32	3	23.5
REAS40	2	25.5

#### Intermediate Stop


The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below. The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or a return from an intermediate stop using an external stopper, etc.

#### **Cushion Stroke**

Model	Stroke (mm)
REAS10	20
REAS15	25
REAS20	30
REAS25	30
REAS32	30
REAS40	35

### Sine Rodless Cylinder Slider Type/Slide Bearing **REAS** Series Ø10, Ø15, Ø20, Ø25, Ø32, Ø40

#### **How to Order**

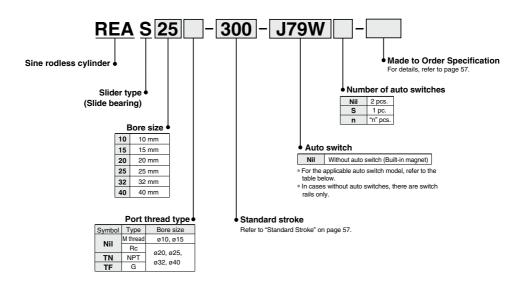

#### Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches.

			light	Marinina au	L	oad volta	age	Auto swit	ch model	Lead	wire l	ength	n (m)*			
Туре	Special function	Electrical entry	Indicator	Wiring (Output)	DC		AC	7 late emilen meder		0.5	3		None	Pre-wired connector	Applicable load	
		entry	Indic	(Output)	L	ic AC		Perpendicular	In-line	(Nil)	(L)	(Z)	(N)	COTTRECTOR	load	
				3-wire (NPN)		5 V, 12 V		F7NV	F79	•	•	0	_	0	IC	
등		Grommet		3-wire (PNP)		5 V, 12 V		F7PV	F7P	•	•	0	_	0	circuit	
switch	_			2-wire		40.17		F7BV	J79	•	•	0	_	0		
s o		Connector		Z-wire		12 V		J79C	-	•	•	•	•	_	1 - 1	
anto			Yes	3-wire (NPN)	24 V	5 V 40 V	_	F7NWV	F79W	•	•	0	_	0	IC	Relay,
<u>e</u>	Diagnostic indication		162	3-wire (PNP)		5 V, 12 V	12 V	-	F7PW	•	•	0	_	0	circuit —	
state	(2-color indicator)	C		2-wire		12 V		F7BWV	J79W	•	•	0	_	0		
<u> </u>	Water resistant	Grommet						-	F7BA**	I —	•	0	_	0		
Solid	(2-color indicator)							F7BAV**	-	_	•	0	_	0		
0,	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V, 12 V		-	F79F	•	•	0	_	0	IC circuit	]
Reed auto switch			Yes	3-wire (NPN equivalent)	_	5 V		1	A76H	•	•	_	_	_	IC circuit	-
SW		Grommet	162		_	_	200 V	A72	A72H	•	•	_	_	_		
유	_					12 V	100 V	A73	A73H	•	•	•	_	_	_	Relay,
ğ			No	2-wire	24 V	5 V, 12 V	100 V or less	A80	A80H	•	•	_	_	_	IC circuit	PLC
Be		Connector Ye	Connector Yes	]	24 V	12 V		A73C	ı	•	•	•	•	_	_	] ' [
		Connector	No			5 V, 12 V		A80C	ı	•	•	•	•	_	IC circuit	

<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot quarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

(Example) J79WZ

(Example) J79CN

5 m ..... Z

<sup>\*</sup> Lead wire length symbols: 0.5 m ...... Nil (Example) J79W 3 m ..... L (Example) J79WL

<sup>\*</sup> Solid state auto switches marked with "O" are produced upon receipt of order.

<sup>·</sup> Since there are other applicable auto switches than listed, refer to page 62 for details

None ······ N For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.

<sup>\*</sup> Auto switches are shipped together (not assembled).

# 

# Symbol Air cushion (Magnet type)

#### Made to Order

### Made to Order: Individual Specifications (For details, refer to pages 122 and 123.)

Symbol Specifications		Specifications
	Helical insert thread specifications	
	-X210	Non-lubricated exterior specifications
	-X324	Non-lubricated exterior specifications with dust seal
	-X431	Auto switch rails on both side faces (With 2 pcs.)

#### **Specifications**

Bore size (mm)	10	15	20	25	32	40
Fluid	Air					
Proof pressure	1.05 MPa					
Maximum operating pressure	0.7 MPa					
Minimum operating pressure	0.18 MPa					
Ambient and fluid temperature	−10 to 60°C (No freezing)					
Piston speed (Max.) Note)	50 to 300 mm/s					
Lubrication		N	ot required	d (Non-lub	e)	
Stroke length tolerance (mm)	0 to 250	st: +1.0, 25	1 to 1000	st: +1.4, 10	01 st or lor	nger: +1.8
Holding force (N)	53.9	137	231	363	588	922

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the slide block moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

#### Standard Stroke

Bore size (mm)	Standard stroke (mm)	Maximum manufacturable stroke (mm)
10	150, 200, 250, 300	500
15	150, 200, 250, 300, 350, 400, 450, 500	750
20		1000
25	200, 250, 300, 350, 400, 450, 500, 600, 700, 800	1500
32	300, 300, 700, 300	1500
40	200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000	1500

Note) Intermediate stroke is available in 1 mm increments.

#### Weight

						(kg)
Bore size (mm)	10	15	20	25	32	40
Basic weight	0.48	0.91	1.48	1.84	3.63	4.02
Additional weight per each 50 mm of stroke	0.074	0.104	0.138	0.172	0.267	0.406


Calculation: (Example) REAS32-500 • Basic weight ·············· 3.63 kg
• Additional weight ······ 0.267/50 st

Cylinder stroke ------ 500 st
 3.63 + 0.267 x 500 ÷ 50 = 6.3 kg



#### **REAS** Series

#### Construction: Ø10, Ø15

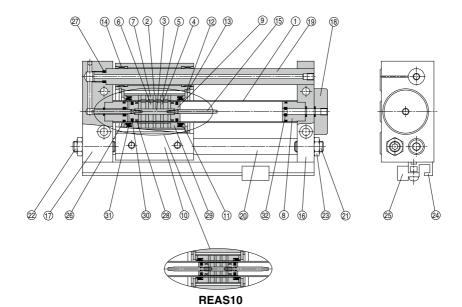

**Component Parts** 

No.	Description	Material	Note		
1	Cylinder tube	Stainless steel			
2	External slider tube	Aluminum alloy			
3	Shaft	Stainless steel			
4	Piston side yoke	Rolled steel plate	Zinc chromated		
5	External slider side yoke	Rolled steel plate	Zinc chromated		
6	Magnet A	_			
7	Magnet B	_			
8	Cushion seal holder	Aluminum alloy	Anodized		
9	Piston	Aluminum alloy	Chromated		
10	Slide block	Aluminum alloy	Hard anodized		
11	Spacer	Rolled steel plate	Nickel plated		
12	Slider spacer	Rolled steel plate	Nickel plated		
13	Retaining ring	Carbon tool steel	Phosphate coated		
14	Bushing	Oil retaining bearing material			
15	Cushion ring	Stainless steel			
16	Plate A	Aluminum alloy	Hard anodized		

#### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
10	REAS10-PS	Set of nos. above 26, 27, 29, 30, 31, 32 Note 1) Note 2)
15	REAS15-PS	Set of nos. above (3), (2), (3), (3), (3), (3) Note 1)

Note 1) It may be difficult to replace the cushion seal ③. Note 2) For replacement of wear ring A ② of ø10, please consult with SMC.

\* Seal kit includes a grease pack (ø 10: 5 g and 10 g, ø 15: 10 g).

Order with the following part number when only the grease pack is needed.


For ø10 grease pack part no.: GR-F-005 (5 g) For external sliding part GR-S-010 (10 g) For tube interior

For ø15 grease pack part no.: GR-S-010 (10 g)

#### Component Parts

No.	Description	Material	Note
17	Plate B	Aluminum alloy	Hard anodized
18	Port cover	Aluminum alloy	Hard anodized
19	Guide shaft A	Carbon steel	Hard chrome plated
20	Guide shaft B	Carbon steel	Hard chrome plated
21	Adjustment bolt A	Chromium molybdenum steel	Nickel plated
22	Adjustment bolt B	Chromium molybdenum steel	Nickel plated
23	Hexagon nut	Carbon steel	Nickel plated
24	Switch mounting rail	Aluminum alloy	
25	Auto switch	_	
26*	Cylinder tube gasket	NBR	
<b>27</b> *	Guide shaft gasket	NBR	
28*	Wear ring A	Special resin	
29*	Wear ring B	Special resin	
30*	Piston seal	NBR	
31*	Scraper	NBR	
32*	Cushion seal	NBR	

# Construction: ø20 to ø40

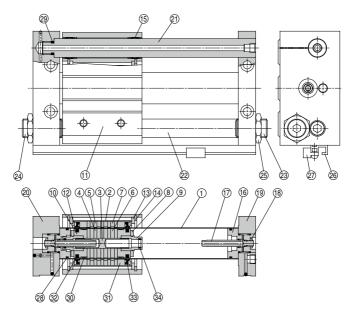

#### **Component Parts**

٠٠.	iipoiioiit i ai to		
No.	Description	Material	Note
1	Cylinder tube	Stainless steel	
2	External slider tube	Aluminum alloy	
3	Shaft	Stainless steel	
4	Piston side yoke	Rolled steel plate	Zinc chromated
5	External slider side yoke	Rolled steel plate	Zinc chromated
6	Magnet A	_	
7	Magnet B	_	
8	Bumper	Urethane rubber	
9	Cushion seal holder	Aluminum alloy	Chromated
10	Piston	Aluminum alloy	Chromated
11	Slide block	Aluminum alloy	Hard anodized
12	Spacer	Rolled steel plate	Nickel plated
13	Slider spacer	Rolled steel plate	Nickel plated
14	Retaining ring	Carbon tool steel	Phosphate coated
15	Bushing	Oil retaining bearing material	
16	Cushion ring holder	Aluminum alloy	Anodized
		Brass	Electroless nickel plated (REAS32, 40
17	Cushion ring	Stainless steel	REAS20, 25

No.	Description	Material	Note
18	Lock nut B	Carbon steel	Nickel plated
19	Plate A	Aluminum alloy	Hard anodized
20	Plate B	Aluminum alloy	Hard anodized
21	Guide shaft A	Carbon steel	Hard chrome plated
22	Guide shaft B	Carbon steel	Hard chrome plated
23	Adjustment bolt A	Chromium molybdenum steel	Nickel plated
24	Adjustment bolt B	Chromium molybdenum steel	Nickel plated
25	Hexagon nut	Carbon steel	Nickel plated
26	Switch mounting rail	Aluminum alloy	
27	Auto switch	_	With auto switch
28*	Cylinder tube gasket	NBR	
29*	Guide shaft gasket	NBR	
30*	Wear ring A	Special resin	
31*	Wear ring B	Special resin	
32*	Piston seal	NBR	
33*	Scraper	NBR	
34*	Cushion seal	NBR	

<sup>\*</sup> Seal kit includes ® to ③. Order the seal kit, based on each bore size.

# Replacement Parts: Seal Kit


- In principle of the control of the									
Bore size (mm)	Kit no.	Contents							
20	REAS20-PS								
25	REAS25-PS	Set of nos. above							
32	REAS32-PS	(38, (29, 30, 31) (20, 33, (34))							
40	REAS40-PS								

Note) Cushion seal (34) may be difficult to be replaced.


\* Seal kit includes a grease pack (10 g).
 Order with the following part number when only the grease pack is needed.
 Grease pack part no.: GR-S-010 (10g)

# **REAS** Series

# Dimensions: Ø10

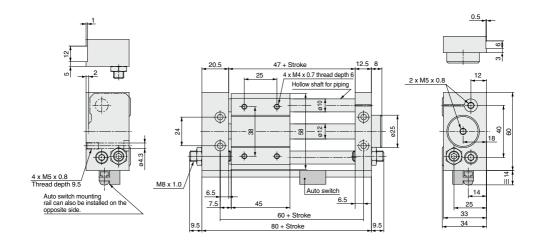

# Dimensions: Ø15 to Ø40

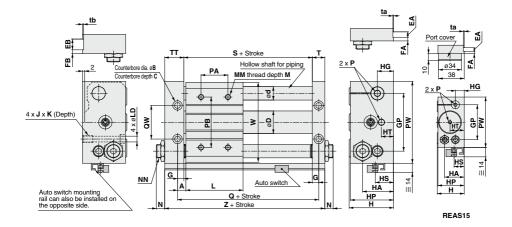

1	mm)	

Model	Α	В	С	D	d	EA	EB	FA	FB	G	GP	Н	HA	HG
REAS15	7.5	9.5	5	16.6	12	6	13	3	6	6.5	52	40	29	13
REAS20	10	9.5	5	21.6	16	_	_	_	_	8.5	62	46	36	17
REAS25	10	11	6.5	26.4	16	8	14	4	7	8.5	70	54	40	20
REAS32	12.5	14	8	33.6	20	8	16	5	7	9.5	86	66	46	24
REAS40	12.5	14	8	41.6	25	10	20	5	10	10.5	104	76	57	25


Model	HP	HS	HT	JxK	L	LD	М	MM	N	NN
REAS15	39	15	21	M6 x 1.0 x 9.5	60	5.6	8	M5 x 0.8	7.5	M8 x 1.0
REAS20	45	25.5	10	M6 x 1.0 x 9.5	70	5.6	10	M6 x 1.0	9.5	M10 x 1.0
REAS25	53	23	10	M8 x 1.25 x 10	70	7	10	M6 x 1.0	11	M14 x 1.5
REAS32	64	27	17	M10 x 1.5 x 15	85	8.7	12	M8 x 1.25	11.5	M20 x 1.5
REAS40	74	31	14	M10 x 1.5 x 15	95	8.7	12	M8 x 1.25	10.5	M20 x 1.5

Model	P			DA*	PA* PB	PW	Q	QW	s	_	TT	ta	tb	w	z
	Nil	TN	TF	PA	PB	PVV	<b>u</b>	QW	3	'	• • •	la	li)	**	_
REAS15	M5 x 0.8	_	_	30	50	75	75	30	62	12.5	22.5	0.5	1	72	97
REAS20	Rc 1/8	NPT 1/8	G 1/8	40	70	90	90	38	73	16.5	25.5	_	_	87	115
REAS25	Rc 1/8	NPT 1/8	G 1/8	40	70	100	90	42	73	16.5	25.5	0.5	1	97	115
REAS32	Rc 1/8	NPT 1/8	G 1/8	40	75	122	110	50	91	18.5	28.5	0.5	1	119	138
REAS40	Rc 1/4	NPT 1/4	G 1/4	65	105	145	120	64	99	20.5	35.5	1	1	142	155

 $\ast$  PA dimensions are for split from center.

# REAS Series Auto Switch Mounting

# Auto Switch Proper Mounting Position (Detection at Stroke End)

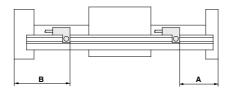

mm'

Auto switch		A dimension		B dimension				
Bore size (mm)	D-A73/A80	D-A72 D-A7□H/A80H D-A73C/A80C D-F7□/J79 D-F7□W/J79W D-J79C D-F7□V/F□WV D-F7BA D-F79F	D-F7NT	D-A73/A80	D-A72 D-A7□H/A80H D-A73C/A80C D-F7□/J79 D-F7□W/J79W D-J79C D-F7□V/F7□WV D-F7BA D-F79F	D-F7NT		
10	35	35.5	40.5	45	44.5	39.5		
15	34.5	35	40	63	62	57.5		
20	64.5	65	70	50.5	50	45		
25	44	44.5	49.5	71.5	71	66		
32	55	55.5	60.5	83.5	83	78		
40	61	61.5	66.5	94.5	94	89		

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

# **Operating Range**

(mm)

Auto solitale secolal	Bore size (mm)								
Auto switch model	10	15	20	25	32	40			
D-A7□, A8□	6	6	6	6	6	6			
D-F7□, J7□, F79F	3	4	3	3	3	3.5			

<sup>\*</sup> Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately  $\pm 30\%$  dispersion)

There may be the case it will vary substantially depending on an ambient environment.

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to pages 1341 to 1435.

applicable. For detailed specifications, refer to pages 1341 to 1435.									
Auto switch type	Model	Electrical entry (Fetching direction)	Features						
Solid state	D-F7NT	Grommet (In-line)	With timer						

<sup>\*</sup> For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1410 and 1411 for details.

**ØSMC** 



# REAS Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

### Operation

# ⚠ Warning

 Be aware of the space between the plates and the slide block.

Take sufficient care to avoid getting your hands or fingers caught when the cylinder is operated.

Do not apply a load to a cylinder which is greater than the allowable value stated in the "Model Selection" pages.

It may cause malfunction.

- Consult with SMC when the cylinder is operated in an environment in which the cylinder is exposed to cutting fluid or water, or the cylinder sliding part lubrication deteriorates.
- When applying grease to the cylinder, use the grease already used for the product. Contact SMC, grease packs are available.

#### Mounting

# 

 Avoid operation with the external slider fixed to the mounting surface.

The cylinder should be operated with the plates fixed to the mounting surface.

Make sure that the cylinder mounting surface has a flatness of 0.2 mm or less.

If the flatness of a workpiece is not appropriate, it may adversely affect the operation since two guide shafts will be twisted. Furthermore, the increase of the sliding resistance and early abrasion of bearings may shorten the service life.

The cylinder mounting surface must have a flatness of 0.2 mm or less, and the cylinder must be mounted so as to be smoothly operated with a minimum operating pressure (0.18 MPa or less) for a full stroke.

#### Disassembly and Maintenance

# **⚠** Warning

 Use caution, the attractive force of the magnets is very strong.

When removing the external slider and piston slider from the cylinder tube for maintenance, etc., handle with caution since the magnet installed in each slider has a very strong attractive force.

# 

 Use caution when taking off the external slider, since the piston slider will be directly attracted to it.

When removing the external slider or piston slider from the cylinder tube, first force the sliders out of their magnetically coupled positions, and then remove them individually when there is no longer any holding force. If they are removed while still magnetically coupled, they will be directly attracted to one another and will not come apart.

Do not disassemble the magnetic components (piston and external sliders).

This may cause a loss of holding force and malfunction.




# Slider Type/Ball Bushing Bearing

# **REAL** Series

Ø10, Ø15, Ø20, Ø25, Ø32, Ø40



# REAL Series Model Selection

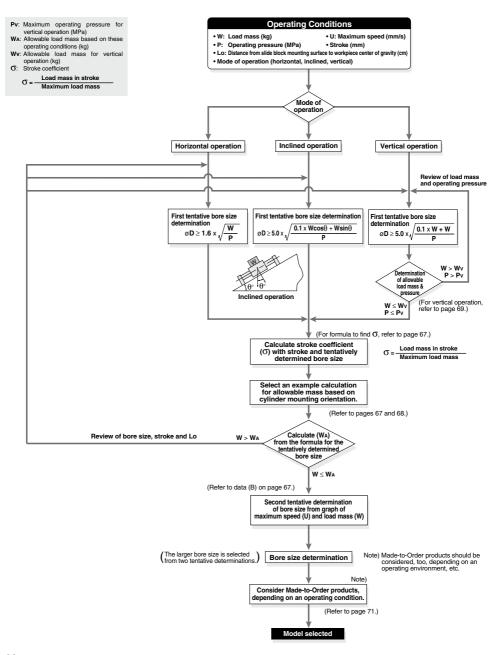

# How to Find $\sigma$ when Selecting the Allowable Load Mass

Since the maximum load mass with respect to the cylinder stroke changes as shown in the table below,  $\boldsymbol{\sigma}$  should be considered as a coefficient determined in accordance with each stroke.


- Example) For REAL25-650
  (1) Maximum load mass = 20 kg
  - (2) Load mass for 650 st = 13.6 kg
  - (3)  $S = \frac{13.6}{20} = 0.68$  is the result.


# Calculation Formula for $\sigma$ ( $\sigma \leq 1$ )

ST: Stroke (mm)

- uiouiu	tion i omiaia i	<b>3</b> . ∪ (∪ <u>−</u> .)	OT. Olloke (IIIII		
Model	REAL10	REAL15	REAL20		
σ=	10 <sup>(0.86 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(1.5 - 1.3 × 10<sup>-3</sup> × ST)</sup>	10 <sup>(1.71 - 1.3 x 10<sup>-3</sup> x ST)</sup>		
	3	7	12		
Model	REAL25	REAL32	REAL40		
σ=	10 <sup>(1.98 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(2.26 - 1.3 x 10<sup>-3</sup> x ST)</sup>	10 <sup>(2.48 - 1.3 × 10<sup>-3</sup> × ST)</sup>		
			50		


Note) Calculate with  $\sigma$  = 1 for all applications up to ø10–300 mmST, ø15–500 mmST, ø20–500 mmST, ø25–500 mmST, ø32–600 mmST, ø40–600 mmST.

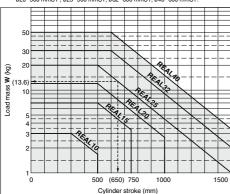

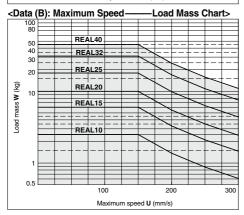

# Examples of Allowable Load Mass Calculation Based on Cylinder Mounting Orientation

#### 1. Horizontal Operation (Floor mounting)

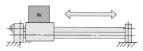


#### Maximum Load Mass (Center of slide block)

Bore size (mm)	10	15	20	25	32	40			
Maximum load mass (kg)	3	7	12	20	30	50			
Stroke (max)	Up to 300 st	Up to 500 st	Up to 500 st	Up to 500 st	Up to 600 st	Up to 600 st			

The above maximum load mass values will change with the stroke length for each cylinder size, due to limitation from warping of the guide shafts. (Take note of the coefficient  $\sigma$ .)

Moreover, depending on the operating direction, the allowable load mass may be different from the maximum load mass.


### 2. Horizontal Operation (Wall mounting)

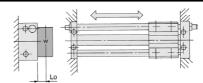

Lo: Distance from mounting surface to load center of gravity (cm)

Bore size (mm)	Allowable load mass Wa (kg)
10	<b>σ</b> ⋅15.0
10	8.9 + 2Lo
15	<b>σ</b> ⋅45.5
15	11.3 + 2Lo
20	<b>σ</b> ⋅101
20	13.6 + 2Lo
OF.	σ·180
25	15.2 + 2Lo
32	σ.330
32	18.9 + 2Lo
40	σ.624
40	22.5 + 2Lo

# 3. Vertical Operation

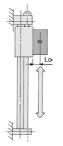


Bore size (mm)	Allowable load mass Wa (kg)
10	
15	<u></u> <del>σ·15.96</del> 2.4 + Lo
20	
25	
32	<u> </u>
40	

Lo: Distance from mounting surface to load center of gravity (cm) Note) Consider a safety factor for drop prevention.

# Examples of Allowable Load Mass Calculation Based on Cylinder Mounting Orientation

# 4. Inclined Operation (in operating direction)

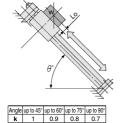


Bore size (mm)	Allowable load mass Wa (kg)
10	σ-10.2-K
10	2.8cosθ + 2 (1.95 + Lo) sinθ
15	σ-31.1-K
15	2.9cosθ + 2 (2.4 + Lo) sinθ
20	σ.86.4·K
20	6cosθ + 2 (2.8 + Lo) sinθ
25	σ·105.4·K
25	3.55cosθ + 2 (3.1 + Lo) sinθ
32	σ·178·K
32	4cosθ + 2 (3.95 + Lo) sinθ
40	σ-361.9-K
40	5.7cosθ + 2 (4.75 + Lo) sinθ

 $|\mathbf{k}|$  1 | 0.9 | 0.8 | 0.7 | Angle coefficient (**k**):  $|\mathbf{k}|$  = [up to 45° (=  $\theta$ )] = 1.

[up to  $60^\circ$ ] = 0.9, [up to  $75^\circ$ ] = 0.8, [up to  $90^\circ$ ] = 0.7

Lo: Distance from mounting surface to load center of gravity (cm)


# 5. Inclined Operation (at a right angle to operating direction)

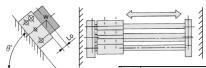

Lo: Distance from mounting surface to load center of gravity (cm)

Bore size (mm)	Allowable load mass Wa (kg)
10	σ·15
10	5 + 2 (1.95 + Lo) sinθ
15	<b>σ</b> ⋅45.5
15	6.5 + 2 (2.4 + Lo) sinθ
20	<u>σ</u> .115
20	8 + 2 (2.8 + Lo) sinθ
25	σ·180
	9 + 2 (3.1 + Lo) sinθ
32	<b>σ</b> ⋅330
32	11 + 2 (3.95 + Lo) sinθ
40	<u></u> σ.624
	13 + 2 (4.75 + Lo) sinθ


# 6. Load Center Offset in Operating Direction (Lo)

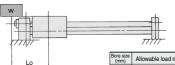

Lo: Distance from center of slide block to load center of gravity (cm)

Bore size (mm)	Allowable load mass Wa (kg)
10	
15	<u> </u>
20	<u> </u>
25	<u> </u>
32	<u></u>
40	<u>σ⋅188.1</u> Lo + 5.7

# 7. Horizontal Operation (Pushing load, Pusher)

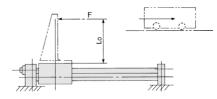


F: Drive (from slide block to position Lo) resistance force (kg)

Lo: Distance from mounting surface to load center of gravity (cm)

Bore size (mm)	10	15	20
Allowable drive resisting force (FA) (kg)	<u>σ⋅5.55</u> 1.95 + Lo	<u> </u>	<u>σ·41.7</u> 2.8 + Lo

Bore size (mm)	25	32	40
Allowable drive resisting force	σ.58.9	<b>σ</b> ⋅106.65	σ.228
(FA) (kg)	3.1 + Lo	3.95 + Lo	4.75 + Lo

# 8. Horizontal Operation (Load, Lateral offset Lo)

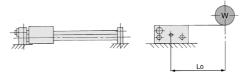

Lo: Distance from center of side block to load's center of gravity (cm)

Bore size (mm)	10	15	20
Allowable load mass <b>Wa</b> (kg)	5 + Lo	<u>σ⋅45.5</u> 6.5 + Lo	
Boro sizo (mm)	25	22	40

Bore size (mm)	25	32	40
Allowable load mass	σ.144	<b>σ</b> ⋅275	σ.520
Wa (kg)	9 + Lo	11 + Lo	13 + Lo

### Vertical Operation

When operating a load vertically, it should be operated within the allowable load weights and maximum operating pressures shown in the table below.

Use caution since operating above the prescribed values may lead to a dropping of the load with the magnetic coupling out of nosition

When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middle-stroke, use an external stopper to secure accurate positioning.


Bore size (mm)	Model	Allowable load mass <b>Wv</b> (kg)	Maximum operating pressure <b>Pv</b> (MPa)
10	REAL10	2.7	0.55
15	REAL15	7.0	0.65
20	REAL20	11.0	0.65
25	REAL25	18.5	0.65
32	REAL32	30.0	0.65
40	REAL40	47.0	0.65

# Stroke Adjustment

The adjusting bolt is adjusted to the optimum position for smooth acceleration and deceleration at the time of shipment, and should be operated at the full stroke. When stroke adjustment is necessary, the maximum amount of adjustment on one side is 2 mm. (Do not adjust more than 2 mm, as it will not be possible to obtain smooth acceleration and deceleration.)

#### Stroke adjustment method

Loosen the hexagon nut, and after performing the stroke adjustment from the plate side with a hexagon wrench, retighten and secure the hexagon nut.

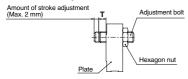

# Adjustment Bolt Position (at the time of shipment), Hexagon Nut Tightening Torque

Model	T (mm)	Tightening torque (N·m)
REAL10	1	1.67
REAL15	1	1.67
REAL20	1	3.14
REAL25	1	10.8
REAL32	1	23.5
REAL40	1	23.5

### Intermediate Stop


The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below. The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or return from an intermediate stop using an external stopper, etc.

#### **Cushion Stroke**

Model	Stroke (mm)
REAL10	20
REAL15	25
REAL20	30
REAL25	30
REAL32	30
REAL40	35

# Sine Rodless Cylinder Slider Type/Ball Bushing Bearing **REAL** Series Ø10, Ø15, Ø20, Ø25, Ø32, Ø40

# **How to Order**

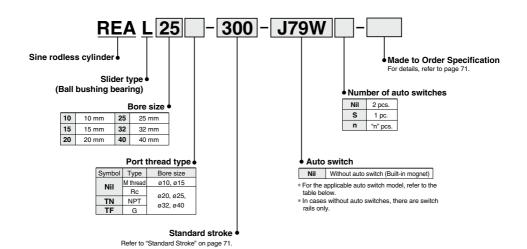

Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches

		Electrical entry	light		L	oad volt	age	Auto swite	ch model	Lead v	vire le	ength	(m) *					
Туре	Special function		Indicator	Wiring (Output)		DC AC		Auto switch model		0.5	3		None	Pre-wired connector				
		Citaly	lpdi				٨٥	Perpendicular	In-line	(Nil)	(L)	(Z)	(N)	COTTRECTO	load			
				3-wire (NPN)		5 V 40 V		F7NV	F79	•	•	0	_	0	IC			
등		Grommet		3-wire (PNP)		5 V, 12 V		F7PV	F7P	•	•	0	_	0	circuit			
switch	_			2-wire				F7BV	J79	•	•	0	_	0		1		
S		Connector	1	2-wile		12 V		J79C	-	•	•	•	•	_	_			
anto			Yes	3-wire (NPN)	24 V			F7NWV	F79W	•	•	0	_	0	IC	Relay,		
ě	(2-color indicator)	res	3-wire (PNP)	24 V  5 V, 12 V   -	_	-	F7PW	•	•	0	_	0	circuit PLC	PLC				
state					1)	12 V		F7BWV	J79W	•	•	0	_	0				
9	Water resistant	Grommet		2-wire			12 V	12 V	12 V		-	F7BA**	_	•	0	_	0	_
Solid	(2-color indicator)									F7BAV**	_	_	•	0	_	0		
٠,	With diagnostic output (2-color indicator)			4-wire (NPN)		5 V, 12 V	12 V	-	F79F	•	•	0	_	0	IC circuit	]		
switch			Yes	3-wire (NPN equivalent)	_	5 V	_	-	A76H	•	•	_	_	_	IC circuit	_		
SW		Grommet	res		_	_	200 V	A72	A72H	•	•	_	_	_				
윺	_					12 V	100 V	A73	A73H	•	•	•	_	_	_	Relay,		
Reed auto			No	2-wire	24 V	5 V, 12 V	100 V or less	A80	A80H	•	•	_	_	_	IC circuit	PLC		
æ		Q	Yes	Yes		24 V	12 V		A73C	-	•	•	•	•	_	_	] FLC	
	Connecto	Connector	No	]		5 V, 12 V	_	A80C	_	•	•	•	•	_	IC circuit	]		

<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

- \* Lead wire length symbols: 0.5 m ..... Nil (Example) J79W 3 m ...... L 5 m ..... Z (Example) J79WL
  - (Example) J79WZ None ······ N (Example) J79CN
- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- Since there are other applicable auto switches than listed, refer to page 76 for details
- For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.
- \* Auto switches are shipped together (not assembled).



# 

# Symbol Air cushion

(Magnet type)



Made to Order	Made to Order: Individual Specifications (For details, refer to pages 122 and 123)
-	(For details, refer to pages 122 and 123.)

Symbol	Specifications
-X168	Helical insert thread specifications
-X431	Auto switch rails on both side faces (With 2 pcs.)

# **Specifications**

Bore size (mm)	10	15	20	25	32	40	
Fluid	Air						
Proof pressure	1.05 MPa						
Maximum operating pressure	0.7 MPa						
Minimum operating pressure	0.18 MPa						
Ambient and fluid temperature	e −10 to 60°C (No freezing)						
Piston speed (Max.) Note)	ote) 50 to 300 mm/s						
Lubrication	Not required (Non-lube)						
Stroke length tolerance (mm)	0 to 250 st: +1.0, 251 to 1000 st: +1.4, 1001 st or longer: +1.8						
Holding force (N)	53.9	137	231	363	588	922	

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the slide block moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

# **Standard Stroke**

Bore size (mm)	Standard stroke (mm)	Maximum manufacturable stroke (mm)
10	150, 200, 250, 300	500
15	150, 200, 250, 300, 350, 400, 450, 500	750
20		1000
25 32	200, 250, 300, 350, 400, 450, 500, 600, 700, 800	1500
40	200, 250, 300, 350, 400, 450, 500, 600, 700, 800, 900, 1000	1500

Note) Intermediate stroke is available in 1 mm increments.

# Weight

						(kg)
Bore size (mm)	10	15	20	25	32	40
Basic weight	0.580	1.10	1.85	2.21	4.36	4.83
Additional weight per each 50 mm of stroke	0.077	0.104	0.138	0.172	0.267	0.406


Calculation: (Example) REAL32-500 • Basic weight ······

- Basic weight ······· 4.36 kg
   Additional weight ····· 0.267/50 st
- Cylinder stroke ...... 500 st
   4.36 + 0.267 x 500 ÷ 50 = 7.03 kg



# **REAL** Series

Construction: ø10, ø15

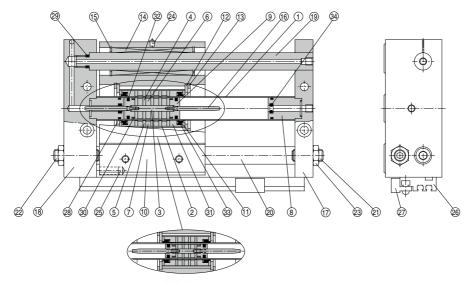

REAL<sub>10</sub>

### **Component Parts**

Component i arts						
No.	Description	Material	Note			
1	Cylinder tube	Stainless steel				
2	External slider tube	Aluminum alloy				
3	Shaft	Stainless steel				
4	Piston side yoke	Rolled steel plate	Zinc chromated			
5	External slider side yoke	Rolled steel plate	Zinc chromated			
6	Magnet A	_				
7	Magnet B	_				
8	Cushion seal holder	Aluminum alloy	Anodized			
9	Piston	Aluminum alloy	Chromated			
10	Slide block	Aluminum alloy	Hard anodized			
11	Spacer	Rolled steel plate	Nickel plated			
12	Slider spacer	Rolled steel plate	Nickel plated			
13	Retaining ring	Carbon tool steel	Phosphate coated			
14	Ball bushing	_				
15	Retaining ring	Carbon tool steel	Phosphate coated			
16	Cushion ring	Stainless steel				
17	Plate A	Aluminum alloy	Hard anodized			

# Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
10	REAL10-PS	Set of nos. above 28, 29, 31, 32, 33, 34 Note 1) Note 2)
15	REAS15-PS	Set of nos. above 28, 29, 30, 31, 32, 33, 34 Note 1)

Note 1) It may be difficult to replace the cushion seal ③. Note 2) For replacement of wear ring A ⑨ of ø10, please consult with SMC.

\* Seal kit includes a grease pack (ø 10: 5 g and 10 g, ø 15: 10 g).

Order with the following part number when only the grease pack is needed.


For ø10 grease pack part no.: GR-F-005  $(5\ g)$  For external sliding part GR-S-010 (10 g) For tube interior

For ø15 grease pack part no.: GR-S-010 (10 g)

Com	Component Parts							
No.	Description	Material	Note					
18	Plate B	Aluminum alloy	Hard anodized					
19	Guide shaft A	Carbon steel	Hard chrome plated					
20	Guide shaft B	Carbon steel	Hard chrome plated					
21	Adjustment bolt A	Chromium molybdenum steel	Nickel plated					
22	Adjustment bolt B	Chromium molybdenum steel	Nickel plated					
23	Hexagon nut	Carbon steel	Nickel plated					
24	Grease nipple	Carbon steel	Nickel plated (Except REAL10)					
25	Magnet for auto switch	_						
26	Switch mounting rail	Aluminum alloy						
27	Auto switch	_						
28 *	Cylinder tube gasket	NBR						
29 *	Guide shaft gasket	NBR						
30 *	Wear ring A	Special resin						
31 *	Wear ring B	Special resin						
32 *	Piston seal	NBR						
33 *	Scraper	NBR						
34 *	Cushion seal	NBR						

<sup>\*</sup> Seal kit includes ② to ③. Order the seal kit, based on each bore size.

# Construction: ø20 to ø40

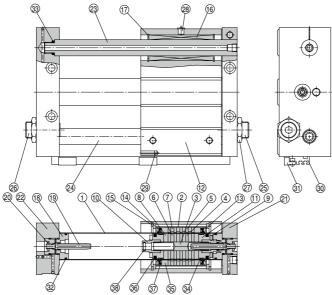

**Component Parts** 

00	iponent i arts		
No.	Description	Material	Note
1	Cylinder tube	Stainless steel	
2	External slider tube	Aluminum alloy	
3	Shaft	Stainless steel	
4	Piston side yoke	Rolled steel plate	Zinc chromated
5	External slider side yoke	Rolled steel plate	Zinc chromated
6	Magnet A	_	
7	Magnet B	_	
8	Piston side spacer	Aluminum alloy	Chromated
9	Bumper	Urethane rubber	
10	Cushion seal holder	Aluminum alloy	Chromated
11	Piston	Aluminum alloy	Chromated
12	Slide block	Aluminum alloy	Hard anodized
13	Spacer	Rolled steel plate	Nickel plated
14	Slider spacer	Carbon steel	Nickel plated
15	Retaining ring	Carbon tool steel	Phosphate coated
16	Ball bushing	_	
17	Retaining ring	Carbon tool steel	Phosphate coated
18	Cushion ring holder	Aluminum alloy	Anodized
19	Ourskins since	Brass	Electroless nickel plated (REAL32, 40)
19	Cushion ring	Stainless steel	REAL20, 25

	ponent Parts		
No.	Description	Material	Note
20	Lock nut B	Carbon steel	Nickel plated
21	Plate A	Aluminum alloy	Hard anodized
22	Plate B	Aluminum alloy	Hard anodized
23	Guide shaft A	Carbon steel	Hard chrome plated
24	Guide shaft B	Carbon steel	Hard chrome plated
25	Adjustment bolt A	Chromium molybdenum steel	Nickel plated
26	Adjustment bolt B	Chromium molybdenum steel	Nickel plated
27	Hexagon nut	Carbon steel	Nickel plated
28	Grease nipple	Brass	Nickel plated
29	Magnet for auto switch	_	
30	Switch mounting rail	Aluminum alloy	
31	Auto switch	-	
32 *	Cylinder tube gasket	NBR	
33 *	Guide shaft gasket	NBR	
34 *	Wear ring A	Special resin	
35 *	Wear ring B	Special resin	
36 *	Piston seal	NBR	
37 *	Scraper	NBR	
38 *	Cushion seal	NBR	

 $<sup>\</sup>ast$  Seal kit includes  $\ensuremath{\mathfrak{Y}}$  to  $\ensuremath{\mathfrak{B}}$ . Order the seal kit, based on each bore size.

# Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents					
20	REAS20-PS						
25	REAS25-PS	Set of nos. above					
32	REAS32-PS	20,33,34,35,36,37,38					
40	REAS40-PS						

Note) It may be difficult to replace the cushion seal ®.


Grease pack part no.: GR-S-010 (10 g)




Seal kit includes a grease pack (10 g).
 Order with the following part number when only the grease pack is needed.

# **REAL** Series

# Dimensions: Ø10

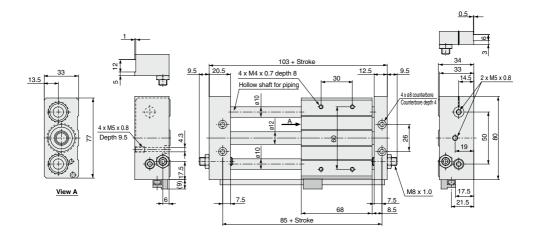

# Dimensions: Ø15 to Ø40

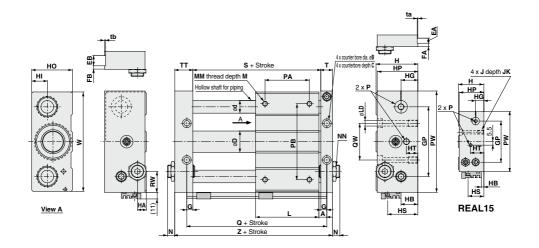

Model	Α	В	С	D	d	EA	EB	FA	FB	G	GP	н	НА	НВ	HG	н	но	HP
REAL15	7.5	9.5	5	16.6	12	6	13	3	6	6.5	65	40	6.5	4	16	14	38	39
REAL20	9.5	9.5	5	21.6	16	_	_	_	_	8.5	80	46	9	10	18	16	44	45
REAL25	9.5	11	6.5	26.4	16	8	14	4	7	8.5	90	54	9	18	23	21	52	53
REAL32	10.5	14	8	33.6	20	8	16	5	7	9.5	110	66	12	26.5	26.5	24.5	64	64
REAL40	11.5	14	8	41.6	25	10	20	5	10	10.5	130	78	12	35	30.5	28.5	76	74

Mardal				11/								P			
Model	HS	нт	J	JK		LD	М	MM	N	NN	Nil	TN	TF	PA*	
REAL15	25	21	M6 x 1.0	9.5	75	5.6	8	M5 x 0.8	7.5	M8 x 1.0	M5 x 0.8	_	_	45	
REAL20	31	10	M6 x 1.0	10	86	5.6	10	M6 x 1.0	10	M10 x 1.0	Rc 1/8	NPT 1/8	G 1/8	50	
REAL25	39	10	M8 x 1.25	10	86	7	10	M6 x 1.0	11	M14 x 1.5	Rc 1/8	NPT 1/8	G 1/8	60	
REAL32	47.5	17	M10 x 1.5	15	100	9.2	12	M8 x 1.25	11.5	M20 x 1.5	Rc 1/8	NPT 1/8	G 1/8	70	
REAL40	56	14	M10 x 1.5	15	136	9.2	12	M8 x 1.25	10.5	M20 x 1.5	Rc 1/4	NPT 1/4	G 1/4	90	


\* PA dimensions are for split from center.

Model	PB	PW	Q	QW	RW	S	Т	TT	ta	tb	w	z
REAL15	70	95	90	30	15	77	12.5	22.5	0.5	1.0	92	112
REAL20	90	120	105	40	28	88	16.5	25.5	_	_	117	130
REAL25	100	130	105	50	22	88	16.5	25.5	0.5	1.0	127	130
REAL32	120	160	121	60	33	102	18.5	28.5	0.5	1.0	157	149
RFAL40	140	190	159	84	35	138	20.5	35.5	1.0	1.0	187	194



# REAL Series Auto Switch Mounting

# **Auto Switch Proper Mounting Position (Detection at Stroke End)**

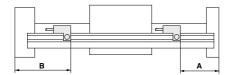

(mm)

Auto switch		A dimension			B dimension	
Bore size (mm)	D-A73/A80	D-A72 D-A7□H/A80H D-A73C/A80C D-F7□/J79 D-F7□W/J79W D-J79C D-F7□V/F7□WV D-F7BA D-F79F	D-F7NT	D-A73/A80	D-A72 D-A7□H/A80H D-A73C/A80C D-F7□/J79 D-F7□W/J79W D-J79C D-F7□W/F7□WV D-F7BA D-F79F	D-F7NT
10	58	58.5	63.5	45	44.5	39.5
15	65	65.5	70.5	47	46.5	41.5
20	76	76.5	81.5	54	53.5	48.5
25	76	76.5	81.5	54	53.5	48.5
32	92	92.5	97.5	57	56.5	51.5
40	130	130.5	135.5	64	63.5	58.5

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

#### **Operating Range**

(mm)

Auto switch model		Bore size (mm)										
Auto switch model	10	15	20	25	32	40						
D-A7□, A8□	6	6	6	6	6	6						
D-F7□, J7□, F79F	3	4	3	3	3	3.5						

<sup>\*</sup>Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately  $\pm 30\%$  dispersion)

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to pages 1341 to 1435.

	р	-, · - · · · · · · · · · · · · · · · · ·	
Auto switch type	Model	Electrical entry (Fetching direction)	Features
Solid state	D-F7NT	Grommet (In-line)	With timer

For solid state auto switches, auto switches with a pre-wired connector are also available.
 Refer to pages 1410 and 1411 for details.

There may be the case it will vary substantially depending on an ambient environment.



# **REAL** Series Specific Product Precautions

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

Operation

# **⚠** Warning

 Be aware of the space between the plates and the slide block.

Take sufficient care to avoid getting your hands or fingers caught when the cylinder is operated.

Do not apply a load to a cylinder which is greater than the allowable value stated in the "Model Selection" pages.

It may cause malfunction.

- Consult with SMC when the cylinder is operated in an environment in which the cylinder is exposed to cutting fluid or water, or the cylinder sliding part lubrication deteriorates.
- When applying grease to the cylinder, use the grease already used for the product. Contact SMC, grease packs are available.

Mounting

# **⚠** Caution

 Avoid operation with the external slider fixed to the mounting surface.

The cylinder should be operated with the plates fixed to the mounting surface.

Make sure that the cylinder mounting surface has a flatness of 0.2 mm or less.

If the flatness of a workpiece is not appropriate, it may adversely affect the operation since two guide shafts will be twisted. Furthermore, the increase of the sliding resistance and early abrasion of bearings may shorten the service life.

The cylinder mounting surface must have a flatness of 0.2 mm or less, and the cylinder must be mounted so as to be smoothly operated with a minimum operating pressure (0.18 MPa or less) for a full stroke.

#### **Disassembly and Maintenance**

# **⚠** Warning

 Use caution, the attractive force of the magnets is very strong.

When removing the external slider and piston slider from the cylinder tube for maintenance, etc., handle with caution since the magnet installed in each slider has a very strong attractive force.

# **⚠** Caution

 Use caution when taking off the external slider, since the piston slider will be directly attracted to it.

When removing the external slider or piston slider from the cylinder tube, first force the sliders out of their magnetically coupled positions, and then remove them individually when there is no longer any holding force. If they are removed while still magnetically coupled, they will be directly attracted to one another and will not come apart.

2. Do not disassemble the magnetic components (piston and external sliders).

This may cause a loss of holding force and malfunction.



# Linear Guide Type Single Axis/Double Axes


REAH/REAHT Series

Single Axis: Ø10, Ø15, Ø20, Ø25


Double Axes: Ø25, Ø32




# REAH Series Model Selection

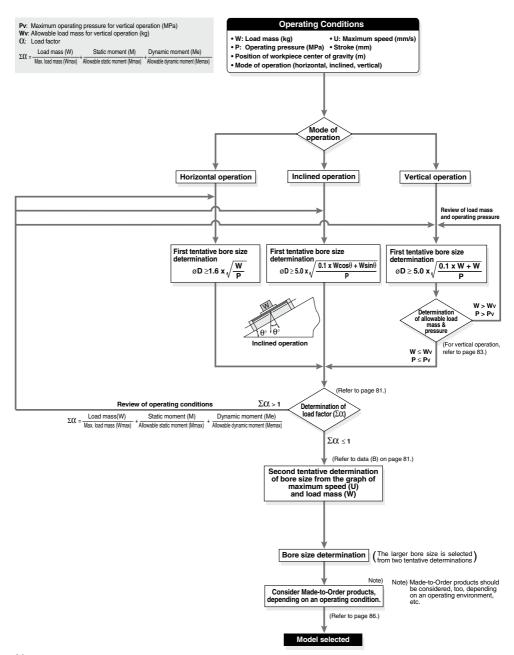

The load mass allowable moment differs depending on the workpiece mounting method, cylinder mounting orientation and piston speed. In making a determination of usability, do not allow the sum ( $\Sigma O(n)$ ) of the load factors (O(n)) for each mass and moment to exceed "1".

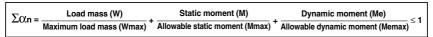

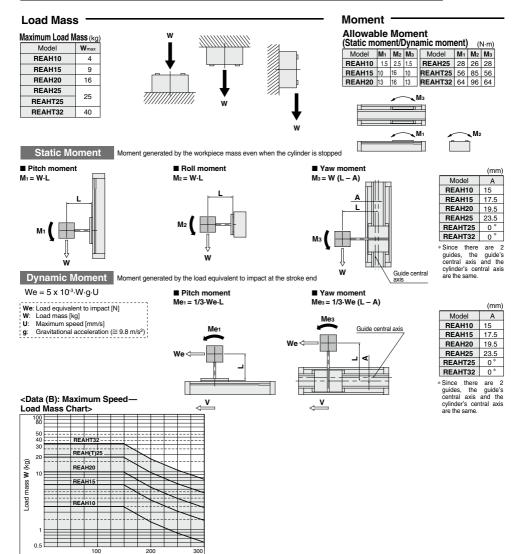

Maximum speed U (mm/s)

# **REAH** Series

# Selection Calculation

The selection calculation finds the load factors ( $\Omega$ n) of the items below, where the total ( $\Sigma\Omega$ n) does not exceed 1.

# $\sum \Omega \ln = \Omega_1 + \Omega_2 + \Omega_3 \le 1$

Item	Load factor $\alpha$ n	Note
1. Max. load mass	O(1 = W/Wmax	Review W.
1. Wax. IOau mass	C(1 = VV/VVIIIax	Wmax is the maximum load mass.
2. Static moment	O(2 = M/Mmax	Review M <sub>1</sub> , M <sub>2</sub> , M <sub>3</sub> .
2. Static moment	Ove = IVI/IVIIIIax	Mmax is the allowable moment.
3. Dynamic moment	O(3 = Me/Memax	Review Me1, Me3.
3. Dynamic moment	Cos = IVIe/IVIerriax	Memax is the allowable moment.
		U: Maximum speed

# **Calculation Example**

Operating Conditions -

Cylinder: REAH15

Mounting: Horizontal wall mounting type


Maximum speed: U = 300 [mm/s]


Load mass: W = 1 [kg] (Except mass of arm section)

Item


 $L_1 = 200 [mm]$ 

L2 = 200 [mm]

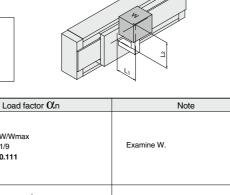

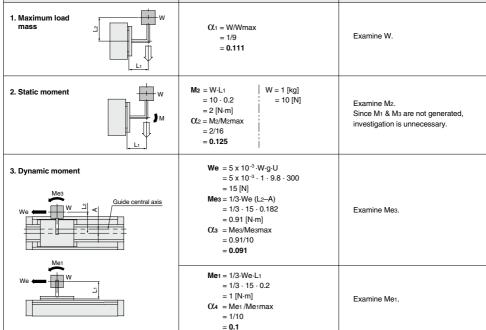

**SMC** 

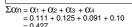


<sup>= 0.427</sup> Can be used base on  $\Sigma \alpha n = 0.427 \le 1$ 

# **Table Deflection Amount**


#### Displacement of Table due to Pitch Moment Load




#### Displacement of Table due to Roll Moment Load

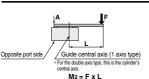

# Displacement of Table due to Yaw Moment Load

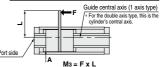


Note) Deflection: Displacement of section A when force acts on section F

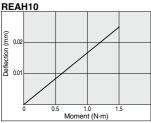





REAH10 0.03 Deflection (mm) 0.01 Moment (N·m)

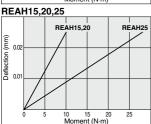





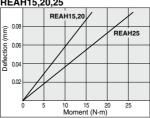


REAH15,20,25

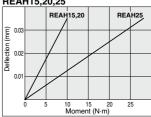

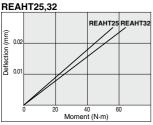

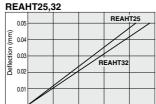

Moment (N·m)

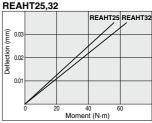

Note) Deflection when a moment other than the above is applied can be specified by extending the lines in the graphs above.

# Vertical Operation

When using in vertical operation, prevention of workpiece dropping due to breaking of the magnetic coupling should be considered. The allowable load mass and maximum operating pressure should be as shown in the table below. When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the

Model	Allowable load mass <b>Wv</b> (kg)	Maximum operating pressure <b>Pv</b> (MPa)
REAH10	2.7	0.55
REAH15	7.0	0.65
REAH20	11.0	0.65
REAH25	18.5	0.65
REAHT25	18.5	0.65
REAHT32	30.0	0.65

middle-stroke, use an external stopper to secure accurate positioning

# Intermediate Stop

The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or a return from an intermediate stop using an external stopper, etc.

### **Cushion Stroke**

Model	Stroke (mm)
REAH10	20
REAH15	25
REAH20	30
REAH25	30
REAHT25	30
REAHT32	30

# **REAH** Series


# Stroke Adjustment

The adjustment bolt is adjusted to the optimum position for smooth acceleration and deceleration at the time of shipment, and should be operated at the full stroke. When stroke adjustment is necessary, the maximum amount of adjustment on one side is 2 mm. (Do not adjust more than 2 mm, as it will not be possible to obtain smooth acceleration and deceleration.)

Do not adjust based on the stopper's movement, as this can cause cylinder damage.

#### Stroke adjustment method

Loosen the round head Phillips screws, and remove the top covers and dust covers (4 pcs.). Then loosen the hexagon nut, and after performing the stroke adjustment from the plate side with a hexagon wrench, retighten and secure the hexagon nut.

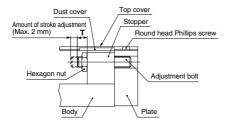

# Adjustment Bolt Position (at the time of shipment), Hexagon Nut Tightening Torque


Model	T (mm)	Tightening torque (N·m)
REAH10	7	
REAH15	7	1.67
REAH20	7	
REAH25	9	
REAHT25	9	3.14
REAHT32	9	

After adjusting the stroke, replace the top covers and dust covers. Tighten the round head Phillips screws for securing the top covers with a torque of 0.58 N·m.

# Sine Rodless Cylinder **Linear Guide Type REAH** Series

Single Axis: Ø10, Ø15, Ø20, Ø25/Double Axes: Ø25, Ø32

### How to Order

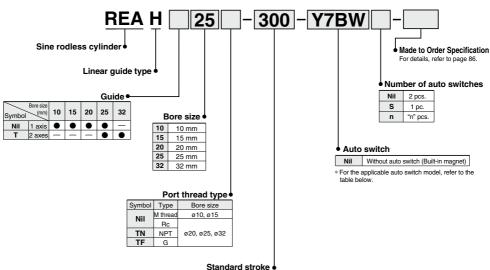

Refer to "Standard Stroke" on page 86.

Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches.

ſ				light			Load volta	age	Auto swit	oh model	Lead wire le	ngth	(m)*				
	Type	Special function	Electrical entry	ndicator	Wiring (Output)		DC	AC	Auto Swit	cirinodei	0.5	3	5	Pre-wired connector	Applic	Applicable load	
L			Citily	luģ	(Output)		DC	DO AO		In-line	(Nil)	(Nil) (L) (Z)		CONTRECTOR			
					3-wire (NPN)		5 V, 12 V		Y69A	Y59A	•	•	0	0	IC		
۱	a.E	_			3-wire (PNP)		3 V, 12 V		Y7PV	Y7P	•	•	0	0	circuit		
۱	ig ta				2-wire		12 V		Y69B	Y59B	•	•	0	0	_	Relay,	
۱	Solid state auto switch	Di	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	_	Y7NWV	Y7NW	•	•	0	0	IC	PLC	
ı	훘웈	Diagnostic indication (2-color indicator)			3-wire (PNP)				Y7PWV	Y7PW	•	•	0	0	circuit	PLC	
۱	, a	(2-color indicator)			2-wire		12 V		Y7BWV	Y7BW	•	•	0	0			
		Water resistant (2-color indicator)			2-wire		12 V		_	Y7BA**	_	•	0	0			
	Reed auto switch		Grommet	Yes	3-wire (NPN equivalent)	_	5 V	_	-	<b>Z</b> 76	•	•	_	_	IC circuit	_	
۱	to Be	_	Gioillillet		2-wire	24 V	12 V	100 V	_	Z73	•	•	•	_	_	Relay,	
۱	an			_	Z-WIFE	24 V	5 V,12 V	100 V or less	_	Z80	•	•	<b>—</b>	_	IC circuit	PLC	

- \*\* Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance.
- Consult with SMC regarding water resistant types with the above model numbers.
- \* Lead wire length symbols: 0.5 m-----Nil (Example) Y7BW
  - 3 m······L (Example) Y7BWL 5 m·····Z (Example) Y7BWZ
- · Since there are other applicable auto switches than listed, refer to page 93 for details · For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.
- \* Auto switches are shipped together (not assembled).



\* Solid state auto switches marked with "O" are produced upon receipt of order.

# **REAH** Series



# Symbol Air cushion (Magnet type)

# Made to Order

Made to Order: Individual Specifications (For details, refer to page 122.)

Symbol	Specifications
-X168	Helical insert thread specifications

# Made to Order Specifications

Click here for details

Symbol	Specifications
-XB10	Intermediate stroke (Using exclusive body)

# **Specifications**

Bore size (mm)	10	15	20	25	32
Fluid			Air		
Action			ouble actin	ıg	
Maximum operating pressure			0.7 MPa		
Minimum operating pressure	0.2 MPa				
Proof pressure	1.05 MPa				
Ambient and fluid temperature	e -10 to 60°C (No freezing)				
Piston speed (Max.) Note)	70 to 300 mm/s				
Lubrication		Not re	Not required (Non-lube)		
Stroke length tolerance	0 to 1.8 mm				
Piping	Centralized piping type				
Piping port size	M5 x 0.8 Rc 1/8				
Holding force (N)	53.9	137	231	363	588

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the slide block moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

# **Standard Stroke**

Bore size (mm)	Number of axes	Standard stroke (mm)	Maximum manufacturable stroke (mm)
10		150, 200, 300	500
15		150, 200, 300, 400, 500	750
20	1 axis	200, 300, 400, 500, 600	1000
25		200, 300, 400, 500, 600, 800	4000
25	2 axes	200, 300, 400, 500, 600, 800, 1000	1200
32	2 axes	200, 300, 400, 500, 600, 800, 1000	1500

Note 1) Stroke exceeding the standard stroke will be available upon request for special.

Note 2) Intermediate strokes other than made-to-order (refer to -XB10) are available as special.

# Weight

								(kg)
NA1 - 1			5	Standard s	troke (mm	1)		
Model	150	200	300	400	500	600	800	1000
REAH10	1.2	1.3	1.6	_	_	_	_	_
REAH15	2.5	2.7	3.2	3.6	4.1	_	_	_
REAH20	_	3.5	4.0	4.4	4.9	5.4	_	_
REAH25	_	5.3	6.0	6.6	7.3	8.0	9.4	_
REAHT25	_	6.2	7.3	8.3	9.4	10.4	12.5	14.6
REAHT32	_	9.6	10.7	11.9	13.0	14.2	16.5	18.8


# **Theoretical Output**

							(N)
Bore size	Piston area		Op	erating pre	essure (MF	Pa)	
(mm)	(mm²)	0.2	0.3	0.4	0.5	0.6	0.7
10	78	15	23	31	39	46	54
15	176	35	52	70	88	105	123
20	314	62	94	125	157	188	219
25	490	98	147	196	245	294	343
32	804	161	241	322	402	483	563

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)



# Construction: ø10, ø15

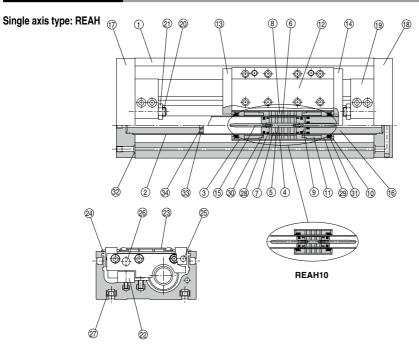

#### Component Parts

0011	ponent i arts		
No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodized
2	Cylinder tube	Stainless steel	
3	External slider tube	Aluminum alloy	
4	Shaft	Stainless steel	
5	Piston side yoke	Rolled steel plate	Zinc chromated
6	External slider side yoke	Rolled steel plate	Zinc chromated
7	Magnet A	_	
8	Magnet B	_	
9	Piston	Aluminum alloy	Chromated
10	Spacer	Rolled steel plate	Nickel plated
11	Space ring	Aluminum alloy	Chromated (Except REAH10)
12	Slide table	Aluminum alloy	Hard anodized
13	Side plate A	Aluminum alloy	Hard anodized
14	Side plate B	Aluminum alloy	Hard anodized
15	Cushion ring	Stainless steel	
16	Internal stopper	Aluminum alloy	Anodized
17	Plate A	Aluminum alloy	Hard anodized

#### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
10	REAH10-PS	Set of nos. above (29, 30, 31), (32), (33, 34) Note 1) Note 2)
15	REAH15-PS	Set of nos. above (%) (%) (3) (3) (3) (3) (4) Note 1)

Note 1) It may be difficult to replace the cushion seal 34.

Note 2) For replacement of wear ring A 28 of Ø10, please consult with SMC. \* Seal kit includes a grease pack (ø10: 5 g and 10 g, ø15: 10 g). Order with the following part number when only the grease pack is needed.

For ø10 grease pack part no.: GR-F-005  $(5\ g)$  For external sliding part GR-S-010 (10 g) For tube interior For ø15 grease pack part no.: GR-S-010 (10 g)

#### omponent Parts

COIII	ponent Parts		
No.	Description	Material	Note
18	Plate B	Aluminum alloy	Hard anodized
19	Stopper	Aluminum alloy	Anodized
20	Adjustment bolt	Chromium molybdenum steel	Nickel plated
21	Hexagon nut	Carbon steel	Nickel plated
22	Linear guide		
23	Top cover	Aluminum alloy	Hard anodized
24	Dust cover	Special resin	
25	Magnet (for auto switch)	_	
26	Parallel pin	Carbon steel	Nickel plated
27	Square nut for body mounting	Carbon steel	Nickel plated (Accessory)
28*	Wear ring A	Special resin	
29*	Wear ring B	Special resin	
30*	Piston seal	NBR	
31 *	Scraper	NBR	
32*	O-ring	NBR	
33*	O-ring	NBR	
34*	Cushion seal	NBR	
34*	Cushion seal		


Note 1) Seal kit includes (28) to (34). Order the seal kit, based on each bore size. Note 2) Square nut for body mounting (27): 4 pieces



# **REAH** Series

Construction: ø20, ø25

# Single axis type: REAH

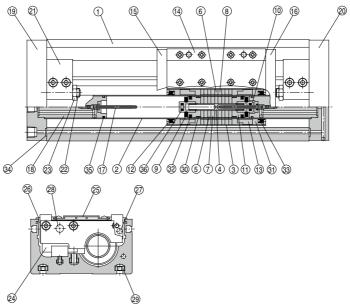

Component Parts

Con	iponent Parts		
No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodized
2	Cylinder tube	Stainless steel	
3	External slider tube	Aluminum alloy	
4	Shaft	Stainless steel	
5	Piston side yoke	Rolled steel plate	Zinc chromated
6	External slider side yoke	Rolled steel plate	Zinc chromated
7	Magnet A	_	
8	Magnet B	_	
9	Bumper	Urethane rubber	
10	Cushion seal holder	Aluminum alloy	Chromated
11	Piston	Aluminum alloy	Chromated
12	Spacer	Rolled steel plate	Nickel plated
13	Space ring	Aluminum alloy	Chromated
14	Slide table	Aluminum alloy	Hard anodized
15	Side plate A	Aluminum alloy	Hard anodized
16	Side plate B	Aluminum alloy	Hard anodized
17	Cushion ring	Stainless steel	
18	Internal stopper	Aluminum alloy	Anodized

Replacement Parts: Seal Kit

riopiacomoni i artor coarrat					
Bore size (mm)	Kit no.	Contents			
20		Set of nos. above			
25	REAH25-PS	39, 31, 32, 33, 34, 35, 36			

Note) It may be difficult to replace the cushion seal 36.


Order with the following part number when only the grease pack is needed. Grease pack part no.: GR-S-010 (10 g) **Component Parts** 

Com	ponent Parts		
No.	Description	Material	Note
19	Plate A	Aluminum alloy	Hard anodized
20	Plate B	Aluminum alloy	Hard anodized
21	Stopper	Aluminum alloy	Anodized
22	Adjustment bolt	Chromium molybdenum steel	Nickel plated
23	Hexagon nut	Carbon steel	Nickel plated
24	Linear guide		
25	Top cover	Aluminum alloy	Hard anodized
26	Dust cover	Special resin	
27	Magnet (for auto switch)	_	
28	Parallel pin	Carbon steel	Nickel plated
29	Square nut for body mounting	Carbon steel	Nickel plated (Accessory)
30 *	Wear ring A	Special resin	
31 *	Wear ring B	Special resin	
32*	Piston seal	NBR	
33 *	Scraper	NBR	
34 *	O-ring	NBR	
35 *	O-ring	NBR	
36 *	Cushion seal	NBR	

Note 1) Seal kit includes 3 to 3. Order the seal kit, based on each bore size. Note 2) Square nut for body mounting 3: 4 pieces

<sup>\*</sup> Seal kit includes a grease pack (10 g).

# Construction: ø25, ø32

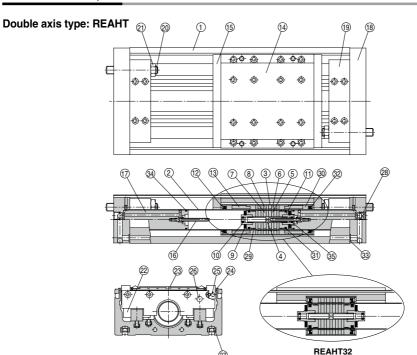

#### Component Parts

Com	Component Parts					
No.	Description	Material	Note			
1	Body	Aluminum alloy	Hard anodized			
2	Cylinder tube	Stainless steel				
3	External slider tube	Aluminum alloy				
4	Shaft	Stainless steel				
5	Piston side yoke	Rolled steel plate	Zinc chromated			
6	External slider side yoke	Rolled steel plate	Zinc chromated			
7	Magnet A	_				
8	Magnet B	_				
9	Bumper	Urethane rubber				
10	Cushion seal holder	Aluminum alloy	Chromated			
11	Piston	Aluminum alloy	Chromated			
12	Spacer	Rolled steel plate	Nickel plated			
13	Space ring	Aluminum alloy	Chromated (Except REAHT32)			
14	Slide table	Aluminum alloy	Hard anodized			
15	Side plate	Aluminum alloy	Hard anodized (Except REAHT32)			
	Combine since	Brass	Electroless nickel plated (REAHT32)			
16	Cushion ring	Stainless steel	REAHT25			
17	Internal stopper	Aluminum allov	Anodized			

# Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
25		Set of nos. above
32	REAHT32-PS	(29, 30, 30, 32, 33, 34, 35)

Note) It may be difficult to replace the cushion seal 35.

\* Seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is needed.

Grease pack part no.: GR-S-010 (10 g)

#### Component Parts

No.	Description	Material	Note
18	Plate	Aluminum alloy	Hard anodized
19	Stopper	Aluminum alloy	Anodized
20	Adjustment bolt	Chromium molybdenum steel	Nickel plated
21	Hexagon nut	Carbon steel	Nickel plated
22	Linear guide		
23	Top cover	Aluminum alloy	Hard anodized
24	Dust cover	Special resin	
25	Magnet (for auto switch)	-	
26	Parallel pin	Carbon steel	Nickel plated
27	Square nut for body mounting	Carbon steel	Nickel plated (Accessory)
28	Hexagon socket head taper plug	Carbon steel	Nickel plated
29*	Wear ring A	Special resin	
30 *	Wear ring B	Special resin	
31 *	Piston seal	NBR	
32 *	Scraper	NBR	
33 *	O-ring	NBR	
34 *	O-ring	NBR	
35 *	Cushion seal	NBR	


Note 1) Seal kit includes ③ to ③. Order the seal kit, based on each bore size. Note 2) Square nut for body mounting ②: 4 pieces



# **REAH** Series


# Dimensions: Ø10

# Single axis type: REAH

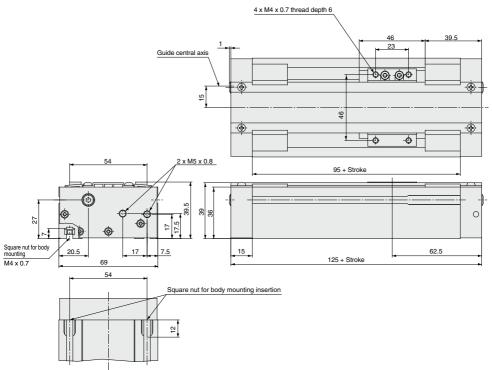

**Dimensions:** Ø15, Ø20, Ø25

# Single axis type: REAH

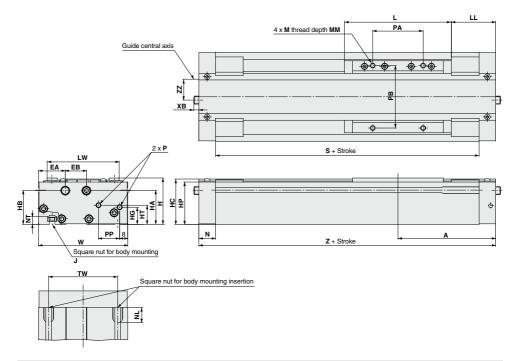

Model	Α	EA	EB	н	HA	НВ	HC	HG	HP	HT	J	L	LL	LW	М	MM
REAH15	97	26.5	21	46	33.5	33.5	45	17	42	19	M5 x 0.8	106	44	71.5	M5 x 0.8	8
REAH20	102.5	26.5	22	54	42.5	41.5	53	16	50	23.5	M5 x 0.8	108	48.5	75.5	M5 x 0.8	8
REAH25	125	29	24	63	46	46	61.5	25	58.5	28	M6 x 1.0	138	56	86	M6 x 1.0	10


Model	N	NL	NT		P		PA	РВ	PP		TW	w	ХВ	7	ZZ
Wodei	IN	NL	INI	Nil	TN	TF	PA	PB	PP	3	I W	l w	ΛD		22
REAH15	16.5	15	8	M5 x 0.8	_	_	50	62	21	161	65	88.5	_	194	17.5
REAH20	18	15	8	Rc 1/8	NPT 1/8	G 1/8	50	65	23	169	70	92.5	_	205	19.5
REAH25	20.5	18	9	Rc 1/8	NPT 1/8	G 1/8	65	75	27	209	75	103	9.5	250	23.5

**SMC** 

# **REAH** Series

Dimensions: Ø25, Ø32

Double axis type: REAHT

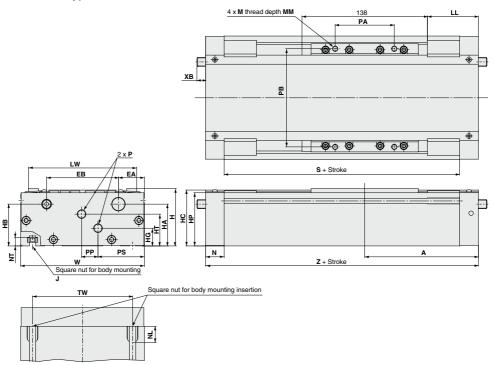


Model	Α	EA	EB	Н	HA	НВ	нс	HG	HP	HT	J	LL	LW	M	MM	N
REAHT25	125	28.5	79	63	46	46	61.5	19.5	58.5	35	M6 x 1.0	56	119	M6 x 1.0	10	20.5
REAHT32	132.5	30	90	75	52.5	57.5	72.5	25	69.5	43	M8 x 1.25	63.5	130	M8 x 1.25	12	23

Model	NL	NT		Р	P PA PB		DD.	PP	PS		TW	w	хв	
iviodei	NL	INI	Nil	TN	TF	PA	rD.	FF	F3	3	I VV	٧V	AD.	
REAHT25	18	9	Rc 1/8	NPT 1/8	G 1/8	65	108	18	51	209	110	136	9.5	250
REAHT32	22.5	12	Rc 1/8	NPT 1/8	G 1/8	66	115	14	61	219	124	150	2	265

# REAH Series Auto Switch Mounting

# Auto Switch Proper Mounting Position (Detection at Stroke End)

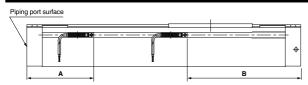

# **Auto Switch Proper Mounting Position**

Auto switch		Α			В				
model  Cylinder model	D-Z7□ D-Z80	D-Y7□W D-Y7□WV	D-Y5  D-Y6  D-Y7P  D-Y7PV	D-Z7□ D-Z80	D-Y7□W D-Y7□WV	D-Y5  D-Y6  D-Y7P  D-Y7PV			
REAH10		65.5		59.5					
REAH15		72		122					
REAH20		77.5		127.5					
REAH25		86			164				
REAHT25		86		164					
REAHT32		82			183				

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.


#### **Operating Range**

Operating hange	е					(mm)						
	Bore size (mm)											
Auto switch model		RE/	AHT									
	10	10 15 20			25	32						
D-Z7□, Z8□	8	6	6	6	6	9						
D-Y5□, Y6□, Y7□	6	5	5	5	5	6						

 $<sup>\</sup>ast$  Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately  $\pm 30\%$  dispersion)

#### **Auto Switch Lead Wire Containment Groove**

On models REAH20 and REAH25 a groove is provided on the side of the body (one side only) to contain auto switch lead wires. This should be used for placement of wiring.

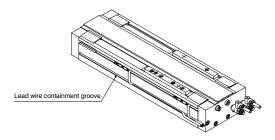

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to pages 1341 to 1435.

	-	· -	
Auto switch type	Model	Electrical entry (Fetching direction)	Features
Solid state	D-Y7G, Y7H	Grommet (In-line)	Normally closed
•			

<sup>\*</sup> For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1410 and 1411 for details.

There may be the case it will vary substantially depending on an ambient environment.



# **REAH Series Specific Product Precautions**

Be sure to read this before handling the products. Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### Mounting

# 

 The interior is protected to a certain extent by the top cover, however, when performing maintenance, etc., take care not to cause scratches or other damage to the cylinder tube, slide table or linear guide by striking them or placing objects on them.


Cylinder bores are manufactured to precise tolerances, so that even a slight deformation may cause faulty operation.

Because the slider is supported by precision bearings, take care not to apply strong impacts or excessive moments to the table when loading a workpiece.

### 3. Mounting of the cylinder body

The body is mounted using the square nuts, which are included, in the two T-slots on the bottom of the body. Refer to the table below for mounting bolt dimensions and tightening torque.

Model		REAH10	REAH15	REAH20	REAH25	REAHT25	REAHT32
Bolt	Thread size	M4 x 0.7	M5 x 0.8		M6 >	M8 x 1.25	
dimensions	Dimension t	L-7	L-	8	L-	L-12	
Tightening torque	N⋅m	1.37	2.6	65	4	.4	13.2

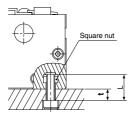

#### Operation

# 

 The unit can be used with a direct load within the allowable range, but when connecting to a load which has an external guide mechanism, careful alignment is necessary.

Since variation of the shaft center increases as the stroke becomes longer, a connection method should be devised which allows for this displacement.

- Since the guide is adjusted at the time of shipment, unintentional movement of the adjustment setting should be avoided.
- Please contact SMC before operating in an environment where there will be contact with cutting chips, dust (paper debris, lint, etc.) or cutting oil (gas oil, water, warm water, etc.).
- Do not operate with the magnetic coupling out of position.

In case the magnetic coupling is out of position, push the external slider back into the correct position by hand at the end of the stroke (or correct the piston slider with air pressure).



# **Direct Mount Type**


### **REBR** Series

ø**15**, ø**25**, ø**32** 



#### **REBR** Series

### **Model Selection**

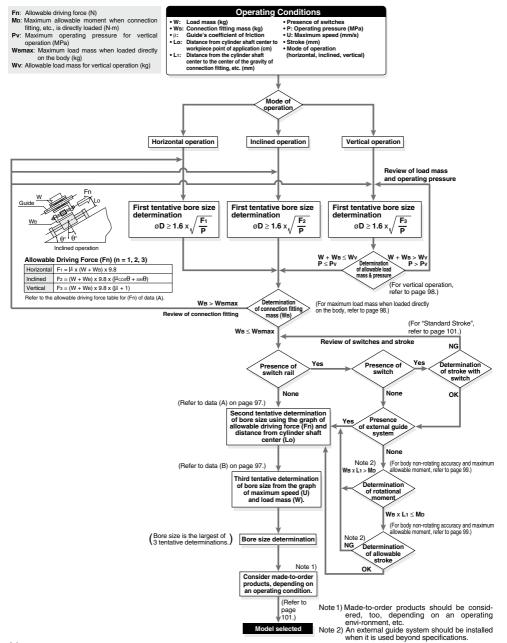


#### Selection Method

Selection Procedures


① Find the drive resisting force Fn (N) when


<Data (A): Distance from Cylinder Shaft Center -

- moving the load horizontally.
- ② Find the distance **Lo** (cm) from the point of the load where driving force is applied, to the center of the cylinder shaft.
- 3 Select a bore size from Lo and Fn in Data A.

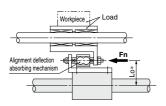

#### —Allowable Driving Capacity>

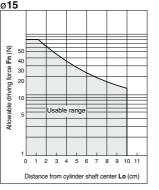


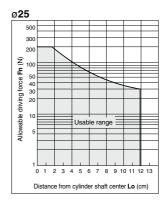


#### Selection Example

Given a load drive resisting force of  ${\bf Fn}=100$  (N) and a distance from the cylinder shaft center to the load application point of  ${\bf Lo}=8$  cm, find the intersection point by extending upward from the horizontal axis of data (A) where the distance from the shaft center is 8 cm, and then extending to the side, find the allowable driving force on the vertical axis. Models suitable to satisfy the requirement of 100 (N) are REBR32.

 Distance from cylinder shaft center, Lo, is the moment working point between the cylinder and the load.

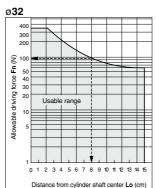


#### <Data (B): Maximum Speed ——Load mass Chart>

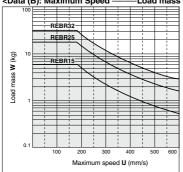


#### Cylinder Self-weight Deflection

When the cylinder is mounted horizontally, deflection appears due to its own weight as shown in the data, and the longer the stroke, the greater the amount of variation in the shaft centers. Therefore, a connection method should be considered which allows for this variation as shown in the drawing.

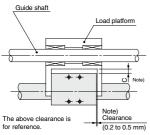

Note)Referring to the self-weight deflection in the graph below, provide clearance so that the cylinder does not touch the mounting surface or the load section, and is able to operate smoothly within the minimum operating pressure range for a full stroke.

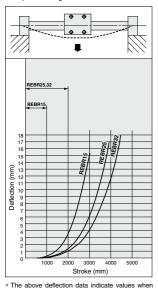


 The above deflection data indicate values when the external slider has moved to the middle of the stroke.

#### **Vertical Operation**

The load should be guided by a ball type bearing (LM guide, etc.). If a slide bearing is used, sliding resistance will increase due to the load mass and moment, and this can cause malfunction.

When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middle-stroke, use an external stopper to secure accurate positioning.

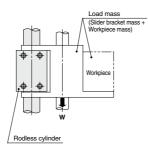


Bore size (mm)	Model	Allowable load mass <b>Wv</b> (kg)	Maximum operating pressure <b>Pv</b> (MPa)	
15	REBR15	7.0	0.65	
25	REBR25	18.5	0.65	
32	REBR32	30.0	0.65	

Note) Use caution, since the magnetic coupling may be dislocated if it is used over the maximum operating pressure.

#### Maximum Load Mass when Loaded Directly on Body

When the load is applied directly to the body, it should be no greater than the maximum values shown in the table below.

Model	Maximum load mass WBmax (kg)
REBR15	1.0
REBR25	1.2
REBR32	1.5

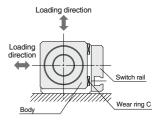

#### Intermediate Stop

The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or return from an intermediate stop using an external stopper, etc.


#### **Cushion Stroke**

Model	Stroke (mm)	
REBR15	25	
REBR25	30	
REBR32	30	

#### Body Non-rotating Accuracy and Max. Allowable Moment (With switch rail) (Reference values)

Reference values for non-rotating accuracy and maximum allowable moment at stroke end are indicated below

Bore size (mm)	Non-rotating accuracy	Maximum allowable moment Mo (N·m)	Note 2) Allowable stroke (mm)
15	4.5	0.15	200
25	3.7	0.25	300
32	3.1	0.40	400

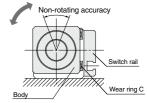


- Note 1) Avoid operations where rotational torque (moment) is applied. In such a case, the use of an external
- guide is recommended.

  Note 2) The above reference values will be satisfied within the allowable stroke ranges. However, caution is necessary because as the stroke becomes longer the inclination (rotation angle) within the stroke can be expected to increase.
- Note 3) When a load is applied directly to the body, the loaded mass should be no greater than the allowable load mass on page 98.

# Sine Rodless Cylinder / Direct Mount Type **REBR** Series Ø15, Ø25, Ø32

#### **How to Order**

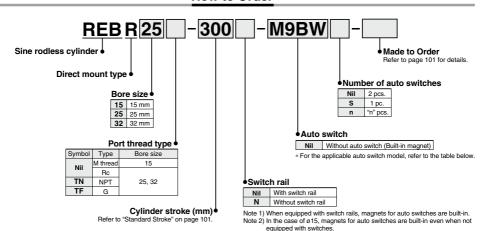

#### Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches.

		Electrical	ight	\A(:-:		Load volta	age	A	Lead wire length (m)			(m)	Pre-wired											
Туре	Special function	entry	Indicator light	Wiring (Output)	DC		AC	Auto switch model	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	connector	Applical	ble load									
_				3-wire (NPN)		5 V, 12 V		M9N	•	•	•	0	0	IC circuit										
switch	_			3-wire (PNP)		5 V, 12 V		M9P	•	•	•	0	0	IC CIICUII										
SW				2-wire	1	12 V	1	M9B	•	•	•	0	0	_										
auto	Di contra di contra di			3-wire (NPN)	N)	EV 10.V	5 V. 12 V	,]	M9NW	•	•	•	0	0	IC circuit	Delen								
	Diagnostic indication (2-color indicator)		Yes	3-wire (PNP)	24 V	3 V, 12 V	I –	M9PW	•	•	•	0	0		Relay, PLC									
state	(2-color indicator)		ľ	2-wire	-wire (NPN) 5 V. 12 V	1		12 V	1	M9BW	•	•	•	0	0	_	1							
d S				3-wire (NPN)		5 V 10 V	1	M9NA*1	0	0	•	0	0	IC circuit										
Solid	Water resistant (2-color indicator)			3-wire (PNP)		5 V, 12 V	5 V, 12 V							3	3 V, 12 V	3 V, 12 V	J V, 12 V	M9PA*1	0	0	•	0	0	IC CIICUII
	(2 color iridicator)			2-wire		12 V		M9BA*1	0	0	•	0	0	_										
Reed auto switch		Crommot	, se	3-wire (NPN equivalent)	_	5 V	_	A96	•	_	•	_	_	IC circuit	_									
to Be	_	— Grommet	ľ	2-wire	24 V	12 V	100 V	A93	•	•	•	•	_	_	Relay,									
a		ž	2-wire	24 V	12 V	100 V or less	A90	•	_	•	_	_	IC circuit	PLC										

- \*1 Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.
- \* Solid state auto switches marked with "O" are produced upon receipt of order.
- \* Lead wire length symbols: 0.5 m ...... Nil (Example) M9NW

  - 1 m..... M (Example) M9NWM 3 m.... L (Example) M9NWL 5 m.... Z (Example) M9NWZ
- \* Since there are other applicable auto switches than listed, refer to page 104 for details.
- \* For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.
- \* Auto switches are shipped together (not assembled).



#### **Specifications**







	Click here for details					
Symbol Specifications		Specifications				
	-XC57 With Floating Joint					

Bore size (mm)	15	25	32		
Fluid	Air				
Proof pressure	1.05 MPa				
Maximum operating pressure	0.7 MPa				
Minimum operating pressure	0.18 MPa				
Ambient and fluid temperature	-10 to 60°C (No freezing)				
Piston speed (Max.) Note)	50 to 600 mm/s				
Lubrication	Not required (Non-lube)				
Stroke length tolerance (mm)	0 to 250 st: $^{+1.0}_{0}$ , 251 to 1000 st: $^{+1.4}_{0}$ , 1001 st and up to: $^{+1.8}_{0}$				
Holding force (N)	137 363 588				

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the body moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

#### **Standard Stroke**

Bore size (mm)	Standard stroke (mm)	Maximum manufacturable stroke (mm)	Maximum stroke with switch (mm)
15	150, 200, 250, 300, 350, 400 450, 500	1000	750
25	200, 250, 300, 350, 400, 450	2000	1500
32	500, 600, 700, 800	2000	1300

Note) Intermediate stroke is available in 1 mm increments.

#### Weight

				(kg)
Item	Bore size (mm)	15	25	32
Basic weight	REBR□ (with switch rail)	0.277	0.660	1.27
(for 0 st)	REBR□-□N (without switch rail)	0.230	0.580	1.15
Additional weight per each 50 mm of stroke (when equipped with switch rail)		0.045	0.083	0.113
Additional weight per each 50 mm of stroke (when not equipped with switch rail)		0.020	0.050	0.070


- Cylinder stroke -------500 (st)
   0.660 + 0.083 x 500 ÷ 50 = 1.49 kg






#### **REBR** Series

#### Construction: Ø15, Ø25, Ø32

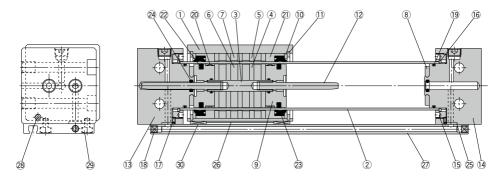

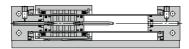

#### REBR15

#### **Component Parts**

No.	Description	Material	Note	
1	Body	Aluminum alloy	Hard a	nodized
2	Cylinder tube	Stainless steel		
3	Shaft	Stainless steel		
4	Piston side yoke	Rolled steel plate	Zinc ch	romated
5	External slider side yoke	Rolled steel plate	Zinc ch	romated
6	Magnet A	_		
7	Magnet B	_		
8	Bumper	Urethane rubber	Except REBR15	
9	Piston	Aluminum alloy	Chromated	
10	Spacer	Rolled steel plate	Nickel plated	
11	Retaining ring	Carbon tool steel	Phosphate coated	
12	Cushion ring	Stainless steel	REBR15, 25	Compound
-12	Cusilion ring	Brass	REBR32	nickel plated
13	End cover A	Aluminum alloy	Hard anodized	
14	End cover B	Aluminum alloy	Hard a	nodized
15	Attachment ring	Aluminum alloy	Hard anodized	
16	Type C retaining ring	Hard steel wire material	Nickel plated (REBR15)	
10	for axis	Stainless steel	REBI	R25, 32
17	Hexagon socket head set screw	Chromium steel	Nickel plated	
18	Hexagon socket head plug	Chromium steel	Nicke	l plated
19	Cylinder tube gasket	NBR		

#### **Component Parts**

No.	Description	Material	Note
20	Wear ring A	Special resin	
21	Wear ring B	Special resin	
22	Piston seal	NBR	
23	Scraper	NBR	
24	Cushion seal	NBR	
25	Switch rail gasket	NBR	
26	Magnetic shielding plate	Rolled steel plate/Chromated	
27	Switch rail	Aluminum alloy/Clear anodized	
28	Magnet	_	
29	Hexagon socket head cap screw	Chromium steel/Nickel plated	
30	Wear ring C	Special resin	


#### Replacement Parts: Seal Kit

Bore size (mm)	Kit no.	Contents
15	REBR15-PS	A set of (19, 20, 21, 22, 23, 24,
25	REBR25-PS	25, 30 listed above
32	REBR32-PS	a, se listed above

Note) Cushion seal @ may be difficult to be replaced.

Seal kit includes a grease pack (10 g).
 Order with the following part number when only the grease pack is needed.
 Grease pack part no.: GR-S-010 (10 g)

#### **Switch Rail Accessory Kit**

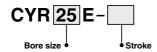

#### Switch Rail Accessory Kit


Bore size (mm)	Kit no.	Contents
15	CYR15E-□	About no fin fin
25	CYR25E-□	Above nos. 26, 27, 28, 29, 30
32	CYR32E-□	₩,₩

Note 1)  $\square$  indicates the stroke.

Note 2) ø15 has internal magnets in the body.



#### Dimensions: Ø15, Ø25, Ø32

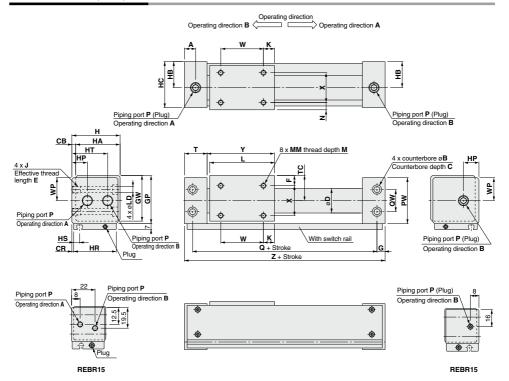

																		(mm)
Model	Α	В	С	СВ	CR	D	F	G	GP	GW	Н	HA	НВ	HC	HP	HR	HS	HT
REBR15	12	8	4.2	2	0.5	17	8	7	33	31.5	32	30	17	31	_	30	8.5	_
REBR25	12.5	9.5	5.2	3	1	27.8	8.5	10	44	42.5	44	41	23.5	43	14.5	41	6.5	33.5
REBR32	19.5	11	6.5	3	1.5	35	10.5	16	55	53.5	55	52	29	54	20	51	7	39
Model	J	¢Ε	K	L	LD	M	М	М	N	F	•	PW	Q	QW	Т	TC	W	WP
REBR15	M5 x (	0.8 x 7	14	53	4.3	5	M4 :	k 0.7	6	M5 :	k 0.8	32	84	18	21	17	25	_
REBR25	M6 x	1 x 8	15	70	5.6	6	M5 :	k 0.8	6.5	1.	/8	43	105	20	25.5	22.5	40	21.5
REBR32	M8 x 1.	25 x 10	13	76	7	7	M6	x 1	8.5	1.	/8	54	116	26	33	28	50	27


Model	Х	Y	Z
REBR15	18	54.5	98
REBR25	28	72	125
RFRR32	35	79	148

**SMC** 

### REBR Series

### **Auto Switch Mounting**

#### Auto Switch Proper Mounting Position (Detection at Stroke End)

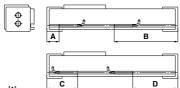

#### Auto Switch Proper Mounting Position a15, a25, a32

×	913, 923, 902									
	Auto switch		4	В		(		D		
E	model Bore size	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	D-A9□	D-M9□ D-M9□W D-M9□A	
	15	19.5	23.5	78.5	74.5	_	_	58.5	62.5	
	25	23	27	102	98	46	42	79	83	
	32	31.5	35.5	116.5	112.5	54.5	50.5	93.5	87.5	

Note 1) Auto switches cannot be installed in Area C in the case of ø15.

Note 2) Adjust the auto switch after confirming the operating conditions in the actual setting.

~2E	~22
ays.	(0:32

02 <b>5</b> , 03	023, 032 (mm)							
Auto switch	Α	В	С	D				
model Bore size	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W D-Y7BA	D-Z7	D-Z7	D-Z7□ D-Z80 D-Y59□ D-Y7P D-Y7□W D-Y7BA				
25	22	103	47	78				
32	30.5	117.5	55.5	92.5				

Note ) Adjust the auto switch after confirming the operating conditions in the actual setting.

#### **Operating Range**

			(mm)			
Auto switch model	Bore size					
Auto switch model	15	25	32			
D-A9□	8	7.5	8			
D-M9□W D-M9□	4.5	5.5	4.5			
D-M9□A						
D-Z7□/Z80	_	9	9			
D-Y5□/Y7P/Y7□W/Y7BA	_	7	6			


\* Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately  $\pm 30\%$  dispersion)

There may be the case it will vary substantially depending on an ambient environment

#### **Auto Switch Specifications**

		(mm)
	Auto switch model	Bore size
		ø25, ø32
	D-A9□ D-M9□ D-M9□W D-M9□A	BMG2-012

D-A9\(\text{M9}\(\text{M9}\)\(\text{W}\)

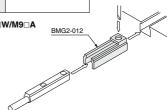

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to pages 1341 to 1435.

	, 1 0				
Auto switch type	Model	Electrical entry (Fetching direction)	Features	Applicable bore size	
Reed	D-Z73, Z76	Grommet (In-line)	_		
need	D-Z80	Grommer (in-line)	Without indicator light		
	D-Y59A, Y59B, Y7P		_	ø25, ø32	
Solid state	D-Y7NW, Y7PW, Y7BW	Grommet (In-line)	Diagnostic indication (2-color indicator)	)	
	D-Y7BA	1	Water resistant (2-color indicator)		

\* For solid state auto switches, auto switches with a pre-wired connector are also available. Refer to pages 1410 and 1411 for details.

\* Normally closed (NC = b contact) solid state auto switches (D-M9□E(V)/Y7G/Y7H) are also available. Refer to pages 959 and 961 for details



# **REBR** Series Specific Product Precautions

Be sure to read this before handling the products.

Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### Mounting

#### 

 Take care to avoid nicks or other damage on the outside surface of the cylinder tube.

This can lead to a damage of the scraper and the wear ring, which in turn can cause malfunction.

2. Use caution to the rotation of the external slider.

Rotation should be controlled by connecting it to another shaft (linear guide, etc.).

Do not operate with the magnetic coupling out of position.


If the magnetic coupling is out of position, push the external slider by hand (or the piston slider with air pressure) back to the proper position at the stroke end.


- The cylinder is mounted with bolts through the mounting holes in the end covers. Be sure they are tightened securely.
- Be sure that both end covers are secured to the mounting surface before operating the cylinder.

Avoid operation with the external slider secured to the surface.

6. Do not apply a lateral load to the external slider.

When a load is mounted directly to the cylinder, variations in the alignment of each shaft center cannot be offset, which results in the generation of a lateral load that can cause malfunction. The cylinder should be operated using a connection method which allows for shaft alignment variations and deflection due to the cylinder's own mass. A drawing of a recommended mounting is shown in Fig. (2).

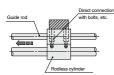

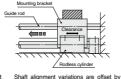

Variations in the load and cylinder shaft alignment cannot be offset and may result in a malfunction.

providing clearance between the mounting bracket and cylinder. Moreover, the mounting bracket is extended above the cylinder shaft center, so that the cylinder is not subjected to moment.

Fig. (1) Incorrect mounting

Fig. (2) Recommended mounting


#### Use caution regarding the allowable load mass when operating in a vertical direction.

The allowable load mass when operating in a vertical direction (reference values on page 98) is determined by the model selection method. However, if a load greater than the allowable value is applied, the magnetic coupling may break and there is a possibility of dropping the load. When using this type of application, please contact SMC regarding the operating conditions (pressure, load, speed, stroke, frequency, etc.).

#### Disassembly and Maintenance

#### **⚠** Caution

1. Special tools are necessary for disassembly.

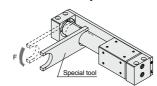

Special Tool Number

Part no.	Applicable bore size (mm)
CYRZ-V	15
CYRZ-W	25, 32




# Linear Guide Type Single Axis/Double Axes REBH/REBHT Series

Single Axis: Ø15, Ø25 Double Axes: Ø25, Ø32




#### **REBH** Series

### **Model Selection**

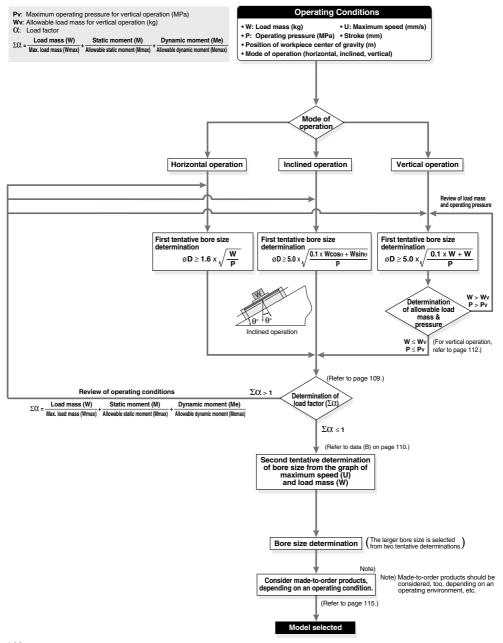

The load mass allowable moment differs depending on the workpiece mounting method, cylinder mounting orientation and piston speed. In making a determination of usability, do not allow the sum ( $\Sigma\Omega$ n) of the load factors ( $\Omega$ n) for each mass and moment to exceed "1".

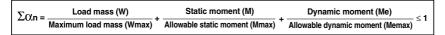

#### Caution on Design 2

#### **Load Mass**

REBH25

REBHT25


REBHT32


 Maximum Load Mass
 (kg

 Model
 Wmax

 REBH15
 9

25

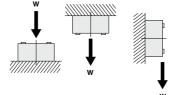

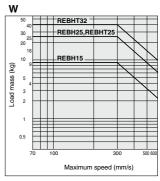



<Graph (1)>


#### Moment

# Allowable Moment (Static moment/Dynamic moment) (N·m)

Model M<sub>2</sub> Мз REBH15 10 16 10 REBH25 28 26 28 REBHT25 56 85 56 REBHT32 64 64

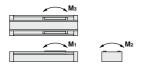

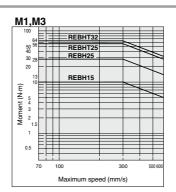

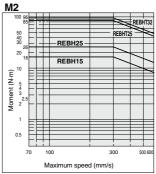



<Graph (2)>


<Graph (3)>

#### **REBH** Series

Static Moment Moment generated by the workpiece mass even when the cylinder is stopped

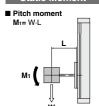

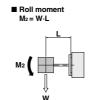

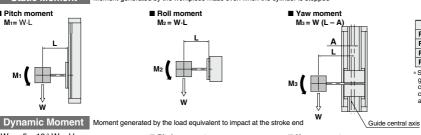


	(mm)
Model	Α
REBH15	17.5
REBH25	23.5
REBHT25	0*
REBHT32	0*

\*Since there are 2 guides, the guides' central axis and the cylinder's central axis are the same.


#### We = $5 \times 10^{-3} \cdot W \cdot q \cdot U$

We	: Load equivalent to impact [N]
w	: Load mass [kg]
U	: Maximum speed [mm/s]
g	: Gravitational acceleration (9.8 m/s²)



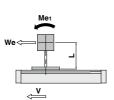




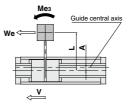

	(mm)
Model	Α
REBH15	17.5
REBH25	23.5
REBHT25	0*
REBHT32	0*

\*Since there are 2 guides, the guides' central axis and the cylinder's central axis are the same.

#### <Data (B): Maximum speed--Load Mass Chart>

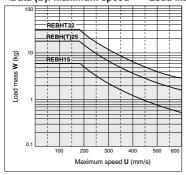

#### Selection Calculation -

The selection calculation finds the load factors ( $\alpha n$ ) of the items below, where the total ( $\Sigma \alpha n$ ) does not exceed 1.

$\overline{\Sigma \alpha_n}$	<u>- Ω₁</u>	+ Ω2	+ <b>Ω</b> 3<	1

Item	Load factor $\alpha$ n	Note
1. Max. load mass	Q1 = W/Wmax	Review W.
1. Max. Ioau mass	CAT = W/WITIAX	Wmax is the maximum load mass.
2. Static moment	C(2 = M/Mmax	Review M <sub>1</sub> , M <sub>2</sub> , M <sub>3</sub> .
2. Static moment	CV2 = IV/IVIIIIAX	Mmax is the allowable moment.
3. Dynamic moment	C(3 = Me/Memax	Review Me1, Me3.
3. Dynamic moment	OS = We/Weillax	Memax is the allowable moment.

U: Maximum speed

#### Calculation Example

#### - Operating Conditions -


Cylinder: REBH15

Mounting: Horizontal wall mounting type

Maximum speed: **U** = 500 [mm/s] Load mass: W = 1 [kg] (excluding mass of arm section)

L1 = 200 [mm]

L2 = 200 [mm]

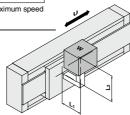

Item	Load factor (Xn	Note
1. Maximum load mass	C/.1 = W/Wmax = 1/3 = 0.111 = 0.333	Examine W. (For Wmax, find the value in <graph (1)=""> when U = 500 mm/s.)</graph>
2. Static moment	M2 = W·L1	Examine M2. Since M1 & M3 are not generated, investigation is unnecessary.
3. Dynamic moment  We Guide central axis  Me:	We = 5 x 10 <sup>-3</sup> · W·g·U = 5 x 10 <sup>-3</sup> · 1 · 9.8 · 500 = 25 [N] Me3 = 1/3·We (L2 − A) = 1/3 · 25 · 0.182 = 1.52 [N·m] C/3 = Me3/Mesmax = 1.52/6 = 0.25	Examine Mes. (For Memax, find the value in <graph (2)=""> when U = 500 mm/s.)</graph>
We W	Me1 = 1/3·We·L1 = 1/3·25·0.2 = 1.6 [N·m] C/.4 = Me1 /Me1max = 1.6/6 = 0.27	Examine Mer. (For Memax, find the value in <graph (2)=""> when U = 500 mm/s.)</graph>

 $\Sigma \Omega n = \Omega 1 + \Omega 2 + \Omega 3 + \Omega 4$ 

= 0.333 + 0.125 + 0.25 + 0.27

= 0.978 ≤ 1


And it is possible to use.

#### **Table Deflection Amount**


#### Displacement of Table due to Pitch Moment Load



#### Displacement of Table due to Roll Moment Load

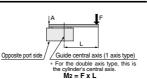


#### Displacement of Table due to Yaw Moment Load

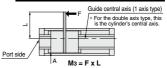



Note) Deflection: Displacement of section A when force acts on section F

#### **REBH15,25**

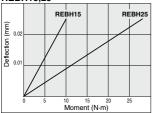



#### **REBH15,25**

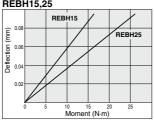

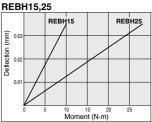




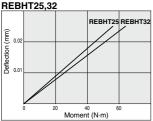

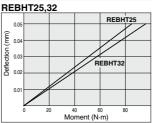

**REBHT25.32** 

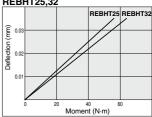

Note) Deflection when a moment other than the above is applied can be specified by extending the lines in the graphs above.

#### **Vertical Operation**

When using in vertical operation, prevention of workpiece dropping due to breaking of the magnetic coupling should be considered. The allowable load mass and maximum operating pressure should be as shown in the table below. When the cylinder is mounted vertically or sidelong, sliders may move downwards due to the self-weight or workpiece mass. If an accurate stopping position is required at the stroke end or the middlestroke, use an external stopper to secure accurate positioning.

Model	Allowable load mass Wv (kg)	Maximum operating pressure Pv (MPa)			
REBH15	7.0	0.65			
REBH25 18.5		0.65			
REBHT25 18.5		0.65			
REBHT32 30.0		0.65			

#### Intermediate Stop

The cushion effect (smooth start-up, soft stop) exists only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) cannot be obtained in an intermediate stop or a return from an intermediate stop using an external stopper, etc.

#### **Cushion Stroke**

Model	Stroke (mm)
REBH15	25
REBH25	30
REBHT25	30
REBHT32	30


#### Stroke Adjustment

The adjusting bolt is adjusted to the optimum position for smooth acceleration and deceleration at the time of shipment, and should be operated at the full stroke. When stroke adjustment is necessary, the maximum amount of adjustment on one side is 2 mm. (Do not adjust more than 2 mm, as it will not be possible to obtain smooth acceleration and deceleration.)

Do not adjust based on the stopper's movement, as this can cause cylinder damage.

#### Stroke adjustment method

Loosen the round head Phillips screws, and remove the top covers and dust covers (4 pcs.). Then loosen the hexagon nut, and after performing the stroke adjustment from the plate side with a hexagon wrench, retighten and secure the hexagon nut.

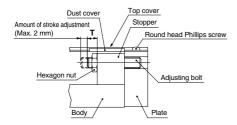

#### Adjusting Bolt Position (at the time of shipment), Hexagon Nut Tightening Torque

Model	T (mm)	Tightening torque (N·m)
REBH15	7	1.67
REBH25	9	
REBHT25	9	3.14
REBHT32	9	


After adjusting the stroke, replace the top covers and dust covers. Tighten the round head Phillips screws for securing the top covers with a torque of 0.58 N·m.

# Sine Rodless Cylinder / Linear Guide Type

# **REBH** Series

Single Axis: Ø15, Ø25 / Double Axes: Ø25, Ø32

#### **How to Order**

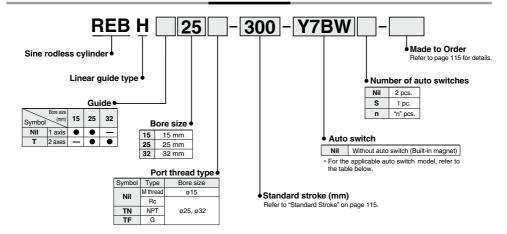

#### Applicable Auto Switches/Refer to pages 1341 to 1435 for further information on auto switches.

			light			Load volt	age	Auto swite	ah maadal	Lead wire le	ngth	(m)*														
Type	Special function	Electrical entry	ndicator	Wiring		DC	AC	Auto Swite	crimodei	0.5	3	5	Pre-wired connector	Applic	cable load											
		entry	ligi	(Output)	DC AC Perpendicular		In-line	(Nil) (L)	(Z)	COLLINECTOL																
				3-wire (NPN)		5 V. 12 V		Y69A	Y59A	•	•	0	0													
ی ج	_			3-wire (PNP)		3 V, 12 V		Y7PV	Y7P	•	•	0	0	IC circuit												
Solid state auto switch				i[			2-wire	24 V	12 V	Y69B	Y59B	•	•	0	0	_										
S S	Disensatia indication	Grommet	/es	3-wire (NPN)	24 V 5 V 40 V	24 V	24 V		24 V	24 V	5 1/ 40 1/	4 V 5 V 10 V	V	V	V	5 V, 12 V	5 V, 12 V	_	Y7NWV	Y7NW	•	•	0	0	IC circuit	Relay, PLC
등육	Diagnostic indication (2-color indicator)							l´ [	ļ^	3-wire (PNP)	3-wire (PNP)	3-wire (PNP)		]	5 V, 12 V			3 V, 12 V	Y7PWV	Y7PW	•	•	0	0	IC CIICUIL	
o ≅	(2-color indicator)			2-wire	40.1/	12 V								40.14	40.1/				Y7BWV	Y7BW	•	•	0	0		
	Water resistant (2-color indicator)			∠-wire	∠-wire			12 V		_	Y7BA**	_	•	0	0	_										
Reed auto switch		Grommet	res	3-wire (NPN equivalent)	_	5 V	_	-	<b>Z</b> 76	•	•	_	_	IC circuit	_											
5 B	_	Gioinnet	_	2-wire	24 V	12 V 100	100 V	_	Z73	•	•	•	_	_	Delay DLC											
ani			_	∠-wire	~4 V	5 V, 12 V	100 V or less	_	Z80	•	•	_	_	IC circuit	Relay, PLC											

<sup>\*\*</sup> Water resistant type auto switches can be mounted on the above models, but in such case SMC cannot guarantee water resistance. Consult with SMC regarding water resistant types with the above model numbers.

\* Lead wire length symbols: 0.5 m ....... Nii (Example) Y59A 3 m ...... L (Example) Y59AL 5 m ..... Z (Example) Y59AZ

- · Since there are other applicable auto switches than listed, refer to page 120 for details
- For details about auto switches with pre-wired connector, refer to pages 1410 and 1411.
- \* Auto switches are shipped together (not assembled)

<sup>\*</sup> Solid state auto switches marked with "O" are produced upon receipt of order.

#### **Specifications**





Symbol	Specifications
-X168	Helical insert thread specifications

#### Symbol Specifications -XB10 Intermediate stroke (Using exclusive body)

Made to Order Specifications	
Click here for details	

(For details, refer to page 122.)

Bara siza (mm)	15	25	32		
Bore size (mm)	10	25	32		
Fluid		Air			
Maximum operating pressure		0.7 MPa			
Minimum operating pressure		0.2 MPa			
Proof pressure	1.05 MPa				
Ambient and fluid temperature	-10 to 60°C (No freezing)				
Piston speed (Max.) Note)	70 to 600 mm/s				
Lubrication	Not required (Non-lube)				
Stroke length tolerance		0 to 1.8 mm			
Piping	Centralized piping type				
Piping port size	M5 x 0.8 Rc <sup>1</sup> / <sub>8</sub>				
Holding force (N)	137 363 588				

Note) Piston speed above indicates the maximum speed. It takes approximately 0.5 seconds (for one side) after the slide table moves from the stroke end until it goes through the cushion stroke, while it takes approximately 1 second for both sides.

#### Standard Stroke

Bore size (mm)	Number of axes	Standard stroke (mm)	Maximum manufacturable stroke (mm)
15	1 axis	150, 200, 300, 400, 500	750
25	I axis	200, 300, 400, 500, 600, 800	1200
25	2 axes	200, 300, 400, 500, 600, 800, 1000	1200
32	2 8865	200, 300, 400, 500, 600, 800, 1000	1500

Note 1) Stroke exceeding the standard stroke will be available upon request for special.

#### Weight

								(kg)
NA1-1			Standa	ırd stroke (	(mm)			
Model	150	200	300	400	500	600	800	1000
REBH15	2.5	2.7	3.2	3.6	4.1	_	_	_
REBH25		5.3	6.0	6.6	7.3	8.0	9.4	_
REBHT25	_	6.2	7.3	8.3	9.4	10.4	12.5	14.6
REBHT32	I -	9.6	10.7	11.9	13.0	14.2	16.5	18.8

#### **Theoretical Output**

							(N)
Bore size	Piston area		Op	erating pre	essure (MF	Pa)	
(mm)	(mm²)	0.2	0.3	0.4	0.5	0.6	0.7
15	176	35	52	70	88	105	123
25	490	98	147	196	245	294	343
32	804	161	241	322	402	483	563

Note) Theoretical output (N) = Pressure (MPa) x Piston area (mm²)




Note 2) Intermediate strokes other than made-to-order (refer to -XB10) are available as special.

#### **REBH** Series

#### Construction: ø15, ø25

#### Single axis type: REBH

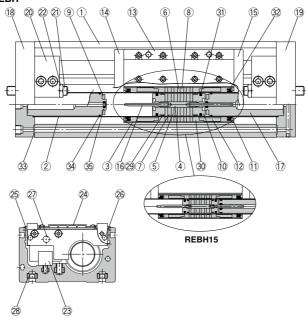

#### **Component Parts**

••••	ipononii i anto		
No.	Description	Material	Note
1	Body	Aluminum alloy	Hard anodized
2	Cylinder tube	Stainless steel	
3	External slider tube	Aluminum alloy	
4	Shaft	Stainless steel	
5	Piston side yoke	Rolled steel plate	Zinc chromated
6	External slider side yoke	Rolled steel plate	Zinc chromated
7	Magnet A	_	
8	Magnet B	_	
9	Bumper	Urethane rubber	Except REBH15
10	Piston	Aluminum alloy	Chromated
11	Spacer	Rolled steel plate	Nickel plated
12	Space ring	Aluminum alloy	Chromated
13	Slide table	Aluminum alloy	Hard anodized
14	Side plate A	Aluminum alloy	Hard anodized
15	Side plate B	Aluminum alloy	Hard anodized
16	Cushion ring	Stainless steel	Compound electroless nickel plated
17	Internal stopper	Aluminum alloy	Anodized
18	Plate A	Aluminum alloy	Hard anodized

Com	ponent Parts		
No.	Description	Material	Note
19	Plate B	Aluminum alloy	Hard anodized
20	Stopper	Aluminum alloy	Anodized
21	Adjusting bolt	Chromium molybdenum steel	Nickel plated
22	Hexagon nut	Carbon steel	Nickel plated
23	Linear guide		
24	Top cover	Aluminum alloy	Hard anodized
25	Dust cover	Special resin	
26	Magnet (for auto switch)	_	
27	Parallel pin	Carbon steel	Nickel plated
28	Square nut for body mounting	Carbon steel	Nickel plated (Accessory)
29	Wear ring A	Special resin	
30	Wear ring B	Special resin	
31	Piston seal	NBR	
32	Scraper	NBR	
33	O-ring	NBR	
34	O-ring	NBR	
35	Cushion seal	NBR	

Note) Square nut for body mounting 28: 4 pieces

#### Replacement Parts/Seal Kit


	10,000	
Bore size (mm)	Kit no.	Contents
15	REBH15-PS	Set of nos. above 29, 30,
25	REBH25-PS	31, 32, 33, 34, 35

Note) Cushion seal 35 may be difficult to be replaced.

 <sup>\*</sup> Seal kit includes a grease pack (10 g).
 Order with the following part number when only the grease pack is needed.
 Grease pack part no.: GR-S-010 (10 g).

Construction: ø25, ø32

#### Double axis type: REBHT

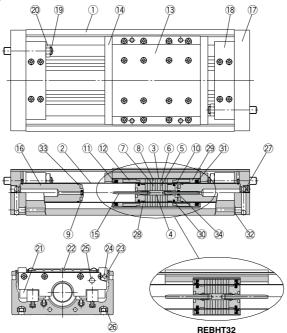

#### Component Parts

0011	iponent i arts				
No.	Description	Material	No	ote	
1	Body	Aluminum alloy	Hard a	nodized	
2	Cylinder tube	Stainless steel			
3	External slider tube	Aluminum alloy			
4	Shaft	Stainless steel			
5	Piston side yoke	Rolled steel plate	Zinc ch	romated	
6	External slider side yoke	Rolled steel plate	Zinc ch	romated	
7	Magnet A	_			
8	Magnet B	_			
9	Bumper	Urethane rubber			
10	Piston	Aluminum alloy	Chromated		
11	Spacer	Rolled steel plate	Nickel plated		
12	Space ring	Aluminum alloy	Chromated (Ex	cept REBHT32)	
13	Slide table	Aluminum alloy	Hard a	nodized	
14	Side plate	Aluminum alloy	Hard anodized (E	except REBHT32)	
15	Cushion ring	Stainless steel	REBHT25	Compound	
15	Cusinon ring	Brass	REBHT32 electrole		
16	Internal stopper	Aluminum alloy	Anodized		
17	Plate	Aluminum alloy	Hard a	nodized	

#### Replacement Parts/Seal Kit

Bore size (mm)	Kit no.	Contents
25	REBHT25-PS	Set of nos. above 28, 29,
32	REBHT32-PS	30, 31, 32, 33, 34

Note) Cushion seal 34 may be difficult to be replaced. \* Seal kit includes a grease pack (10 g).

Order with the following part number when only the grease pack is needed. Grease pack part no.: GR-S-010 (10 g)

#### Component Parts


	ponent Parts		
No.	Description	Material	Note
18	Stopper	Aluminum alloy	Anodized
19	Adjusting bolt	Chromium molybdenum steel	Nickel plated
20	Hexagon nut	Carbon steel	Nickel plated
21	Linear guide		
22	Top cover	Aluminum alloy	Hard anodized
23	Dust cover	Special resin	
24	Magnet (for auto switch)	_	
25	Parallel pin	Carbon steel	Nickel plated
26	Square nut for body mounting	Carbon steel	Nickel plated (Accessory)
27	Hexagon socket head taper plug	Carbon steel	Nickel plated
28	Wear ring A	Special resin	
29	Wear ring B	Special resin	
30	Piston seal	NBR	
31	Scraper	NBR	
32	O-ring	NBR	
33	O-ring	NBR	
34	Cushion seal	NBR	

Note) Square nut for body mounting 26: 4 pieces

#### **REBH** Series

Dimensions: Ø15, Ø25

Single axis type: REBH

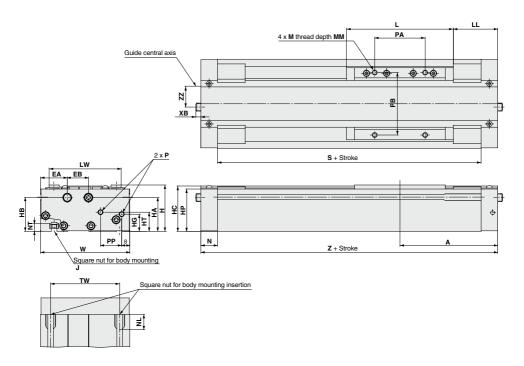


Model	Α	EA	EB	Н	HA	НВ	нс	HG	HP	HT	J	L	LL	LW	M	MM
REBH15	97	26.5	21	46	33.5	33.5	45	17	42	19	M5 x 0.8	106	44	71.5	M5 x 0.8	8
REBH25	125	29	24	63	46	46	61.5	25	58.5	28	M6 x 1.0	138	56	86	M6 x 1.0	10

Model	N	NL	NT	Р	PA	РВ	PP	S	TW	W	ХВ	Z	ZZ
REBH15	16.5	15	8	M5 x 0.8	50	62	21	161	65	88.5	_	194	17.5
REBH25	20.5	18	9	1/8	65	75	27	209	75	103	9.5	250	23.5

#### Dimensions: Ø25, Ø32

#### Double axis type: REBHT

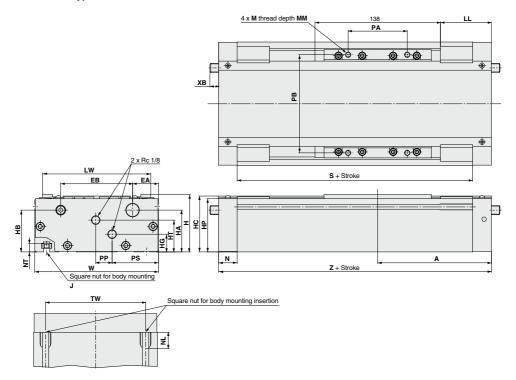


Model	Α	EA	EB	Н	HA	НВ	нс	HG	HP	HT	J	LL	LW	М	MM	N
REBHT25	125	28.5	79	63	46	46	61.5	19.5	58.5	35	M6 x 1.0	56	119	M6 x 1.0	10	20.5
REBHT32	132.5	30	90	75	52.5	57.5	72.5	25	69.5	43	M8 x 1.25	63.5	130	M8 x 1.25	12	23

Model	NL	NT	PA	РВ	PP	PS	s	TW	W	ХВ	Z
REBHT25	18	9	65	108	18	51	209	110	136	9.5	250
REBHT32	22.5	12	66	115	14	61	219	124	150	2	265

**SMC** 

# REBH Series Auto Switch Mounting

#### Proper Auto Switch Mounting Position (Detection at stroke end)

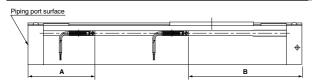

#### **Proper Auto Switch Mounting Position**

p						
Auto switch	A dimension			B dimension		
model  Cylinder model	D-Z7□ D-Z80	D-Y7□W D-Y7□WV	D-Y5□ D-Y6□ D-Y7P D-Y7PV	D-Z7□ D-Z80	D-Y7□W D-Y7□WV	D-Y5□ D-Y6□ D-Y7P D-Y7PV
REBH15	72			122		
REBH25	86			164		
REBHT25	86		164			
REBHT32	82		183			

Note) Adjust the auto switch after confirming the operating conditions in the actual setting.

#### **Operating Range**


(mm)

	Bore size (mm)				
Auto switch model	REBH		REBHT		
	15	25	25	32	
D-Z7□/Z8□	6	6	6	9	
D-Y5□/Y6□/Y7□	5	5	5	6	

<sup>\*</sup> Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion)

#### **Auto Switch Lead Wire Containment Groove**

On model REBH25 a groove is provided on the side of the body (one side only) to contain auto switch lead wires. This should be used for placement of wiring.

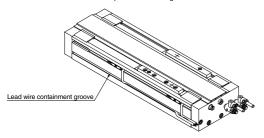

Other than the models listed in "How to Order", the following auto switches are applicable.

For detailed specifications, refer to pages 1341 to 1435.

\* Normally closed (NC = b contact) solid state auto switches (D- Y7G/Y7H types) are also available. Refer to page 1362 for details.

There may be the case it will vary substantially depending on an ambient environment.



# **REBH** Series Specific Product Precautions

Be sure to read this before handling the products.

Refer to page 9 for safety instructions and pages 10 to 19 for actuator and auto switch precautions.

#### Mounting

#### 

 The interior is protected to a certain extent by the top cover, however, when performing maintenance, etc., take care not to cause scratches or other damage to the cylinder tube, slide table or linear guide by striking them or placing objects on them.


Cylinder bores are manufactured to precise tolerances, so that even a slight deformation may cause faulty operation.

Because the slider is supported by precision bearings, take care not to apply strong impacts or excessive moments to the table when loading a workpiece.

3. Mounting of the cylinder body.

The body is mounted using the square nuts, which are included, in the two T-slots on the bottom of the body. Refer to the table below for mounting bolt dimensions and tightening torque.

Model		REBH15	REBH25	REBHT25	REBHT32
Bolt	Thread size		M6:	x 1.0	M8 x 1.25
dimensions	Dimension t	L-8	L	-9	L-12
Tightening torque	N⋅m	2.65	4	.4	13.2

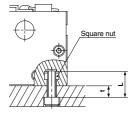

#### Operation

#### **⚠** Caution

 The unit can be used with a direct load within the allowable range, but when connecting to a load which has an external guide mechanism, careful alignment is necessary.

Since variation of the shaft center increases as the stroke becomes longer, a connection method should be devised which allows for this displacement.

- Since the guide is adjusted at the time of shipment, unintentional movement of the adjustment setting should be avoided.
- Please contact SMC before operating in an environment where there will be contact with cutting chips, dust (paper debris, lint, etc.) or cutting oil (gas oil, water, warm water, etc.).
- Do not operate with the magnetic coupling out of position.

In case the magnetic coupling is out of position, push the external slider back into the correct position by hand at the end of the stroke (or correct the piston slider with air pressure).



#### **REA/REB** Series

### Made to Order: Individual Specifications 1

Please contact SMC for detailed dimensions, specifications and lead times.



# 1 Helical Insert Thread Specifications -X168

REA REAS REAL Bore size - Stroke - X168 REAH Helical insert thread specifications

The standard mounting threads have been changed to helical insert specifications.

#### **Specifications**

Applicable series	REA/REAS/REAL/REAH/REBH
Bore size	REA: ø25 to ø63 REAS/REAL: ø20 to ø40 REAH: ø20 to ø32 REBH: ø25, ø32

The mounting thread positions and size are the same as standard.




REA Bore size - Stroke - X206

Additional moving element mounting taps

Mounting taps have been added on the surface opposite the standard positions

#### **Specifications**

Applicable series	REA
Bore size	ø25 to ø63

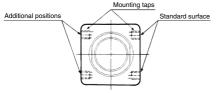

\*Dimensions are the same as the standard product.

# 3 Non-lubricated Exterior Specifications Symbol -X210

REA Bore size - Stroke - X210


Non-lubricated exterior specifications

Suitable for environments where oil is not tolerated. A scraper is not installed. A separate version -X324 (with a felt dust seal) is available in cases in which dust, etc. is dispersed throughout the environment.


#### **Specifications**

Applicable series		REA/REAS
Bore size	REA	ø25 to ø63
	REAS	ø10 to ø40

#### Construction

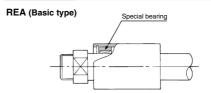


REAS (Slider type)

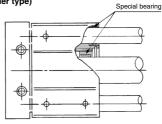


#### **REA/REB** Series

# Made to Order: Individual Specifications 2 Please contact SMC for detailed dimensions, specifications and lead times.



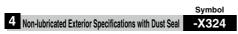

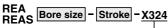

Non-lubricated exterior specifications with dust seal


Non-lubricated exterior type with a felt dust seal on the cylinder body.

#### **Specifications**


Applicable series		REA/REAS
Bore size	REA	ø25 to ø63
	REAS	ø10 to ø40

#### Construction

#### REA (Basic type)

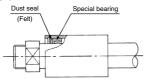

#### REAS (Slider type)

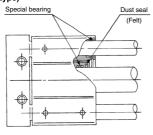



REAS Bore size - Stroke - X431

Auto switch rails on both side faces (With 2 pcs.)

This auto switch is effective in the case of short strokes.

#### Specifications

Applicable series	REAS
Bore size	ø10 to ø40
	Switch rail
<b>→</b> • · · • · · · · · · · · · · · · · · ·	•

Switch rail

