
# **5 Port Solenoid Valve**

# SV1000/2000/3000/4000 Series

Rubber Seal

The connection cable and various units for PLC connection in PC wiring systems have been discontinued by the manufacturer. Therefore, while they can no longer be provided, the valve manifold (manifold with built-in valves) can still be ordered. For details, refer to the **Web Catalog**.

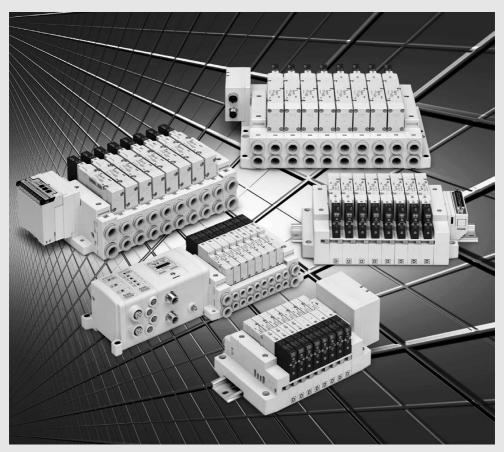

**Connector Type Manifold** 


# Connector Type Manifold SV1000/2000/3000/4000 Series

■ The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.

The SV Series employs a multi-connector instead of the current lead wires for internal. By connecting each block with a connector, changes to manifold stations are greatly simplified.

## Connector wiring diagram

For both serial and parallel wiring, additional manifold blocks are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

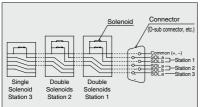





Service life of 50 million cycles or more (Based on SMC life test conditions)


# ■ Cassette base type manifold (For SV1000/2000)

Cassette base type manifolds offer the ultimate in flexibility.

Manifold sections can be added using a simple release mechanism.

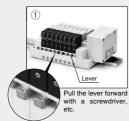

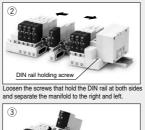

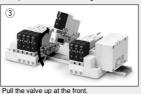

Power consumption: 0.6 W (Current: 25 mA, 24 VDC)

# ■ Tie-rod base manifold (For SV1000/2000/3000/4000)

Current tie-rod base type manifolds are also available.

34 pins connector allows up to 16 stations with double solenoids.

(Refer to the tie-rod base manifold exploded view on page 114.)

■ A relay output module control of devices up is available for to 110 VAC, 3 A.



20

The standard product is CE/UKCAcompliant and UL-standard.





## **■** EX500 Series: Gateway-type, serial transmission system

- IP67 compliant (Gateway unit and input manifold are compliant with IP65.)
- No. of input/output point: 128 points (Output 64 points, Input 64 points)
- Controls up to 4 branches with 32 I/O per branch
- A single cable from the gateway provides both signal and power for each branch, eliminating the need for separate power connections for each manifold.

## **■** EX250 Series: Integrated-type (for I/O), serial transmission system • IP67 compliant (compliant with IP40.) • No. of input/output point: 64 points (Output 32 points, Input 32 points) • Double solenoid allows up to 16 stations (up to 32 solenoids).

## ■ Interface regulator SV1000, 2000, 3000. 4000 series

P port regulation, A port regulation and B port regulation are selectable, depending on an application.

Able to set the pressure arbitrarily for each station of the manifold just by inserting between manifold base and valve.




## Increased moisture and dust resistance.

- Enclosure against foreign matters and water is conforming to IP67 \*. Can be used in an atmosphere where the valve or manifold is exposed by water, etc. directly.
  - (\* Based on IEC60529)

(Refer to the catalog contents for details, as some types of connectors do not meet these standards.)

## 4 position dual 3 port valves available for the SV1000/2000 series

- Two 3 port valves built into a single valve body.
- · A and B ports can be individually controlled.
- Three combinations are available: [N.C./N.C.]. [N.O./N.O.]. and [N.C./N.O.].
- Mixed mounting with 5 port valves is also possible.
- Labels are attached to indicate A and B side functions, using the same color as the manual override.

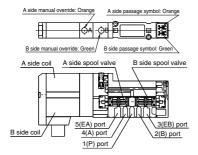

			Syn	nhol
Model	A side	B side	SV1000 series	SV2000 series
SV1A00	N.C. valve	N.C. valve	4(A) 2(B)  725(1) 2 725(1) 3 (EB)	4(A) 2(B)  75(EA) 1(P) 3(EB)
SV1B00	N.O. valve	N.O. valve	4(A) 2(B)  75(EA) 1(P) 3(EB)	4(A) 2(B)  5(EA) 1(P) 3(EB)
SV1C00	N.C. valve	N.O. valve	4(A) 2(B)  75(EA) 1(P) 3(EB)	4(A) 2(B)  5(EA) 1(P) 3(EB)

<sup>\*</sup> External pilot specifications is not available for 4 position dual 3 port valves.



# INDEX SV Series Manifold Variations

Serial Wiring	Serial Wiring Valve Manifold Common Specifications P. 24				
	EX500 Gateway De	ecentraliza	d System 2	Manifold specifications	P. 28
	IP67 compliant	Joentranze	Applicable series	Tie wad been manifold	1.20
				Number of output points: 32 points	
	EX250 Integrate	d-type (Fo	r I/O) Seria	I Transmission System	P. 41
received	IP67 (partly IP40) co	ompliant	Applicable series	5V1000/5V2000/5V3000	
	EX600 Integrate	d-type (Fo	or I/O) Seria	Number of input/output points: Each 32 points     Transmission System	P. 47
- 8:000	IP67 compliant		Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000	
				Digital input/output: Max. 144 inputs/144 outputs     Analog input: Max. 18 channels	
e a company	EX260 Integrate	d-type (Fo	or Output) S	Valve output: 32 outputs     Gerial Transmission System	P. 57
	IP67 (partly IP40) co		Applicable series	Tie-rod base manifold	
1111111		•		SV1000/SV2000/SV3000  Number of output points: 16 points	
GGGGGGGGG	EX126 Integra	ated-type (F	or Output) S	erial Transmission System	P. 63
	IP67compliant		Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000	
		EX120	Integrated-type	Number of output points: 16, 32 points     (For Output) Serial Transmission System	P.69
Cococo Cococo				Cassette base manifold SV1000/SV2000	
APPEN.			Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000	
				Number of output points: 16 points	
- Consequence					
Color	1111				
		_			
Parallel Wiring	For Circular Con	nector			P.79
	IP67 compliant		A li lul i	Cassette base manifold SV1000/SV2000	
			Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000	
	D-sub Cor	nnector		Number of connectors: 26 pins	P.89
0000	and a			Cassette base manifold SV1000/SV2000	
	111111		Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000	
	00000000			Number of connectors: 25 pins     MIL-C-24308 Conforming to JIS-X-5101	
	FI	lat Ribbon	Cable Con		P.99
	A Committee		A P I I	Cassette base manifold SV1000/SV2000	
			Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000	
	- 60,000			Number of connectors: 26, 20, 10 pins     With strain relief Conforming to MIL-C-83503	
	- B	Single V	alve/Sub-pl	ate [IP67 compliant]	P.126
		IP67 compliant	Applicable series	SV1000/SV2000/SV3000/SV4000	



• With waterproof M12 connector

Made to Order Specifications

P.134

# Valve Manifold Common Specifications

# SV Series (E CH CAU'US

## Cassette base manifold



 Changing the number of stations can be easily done by lever operation.

## **Manifold Specifications**

Ap	oplicable series	SV1000	SV2000
Manifold type	ре	Stacking type case	sette base manifold
1 (P: SUP),	3/5 (E: EXH) type	Common	SUP, EXH
Valve statio	ns (maximum)	18 stations	20 stations
Max. number	er of solenoids	18 points	26 points
	1(P), 3/5(E) port	C8, N9	C10, N11
Port size	4(A), 2(B) port	C3, C4, C6	C4, C6, C8
	4(A), 2(D) port	N1, N3, N7	N3, N7, N9

## Flow Rate Characteristics

	Port size		Flow rate characteristics					
Model	1, 5, 3	4, 2	1→4/2 (P→A/B)				4/2→3/5 (A/B→E)	
	(P,EA,EB)	(A,B)	C[dm3/(s-bar)]	b	Cv	C[dm <sup>3</sup> /(s·bar)]	b	Cv
SS5V1-16	C8	C6	0.89	0.22	0.22	0.98	0.21	0.23
SS5V2-16	C10	C8	2.3	0.28	0.50	2.7	0.18	0.56

Note) The value is for manifold base with 5 stations and individually operated 2 position type.

## Tie-rod base manifold



 34 pins connector allows up to 16 stations with double solenoids.

## Manifold Specifications

iamora opcomoanorio							
Applicable series		SV1000	SV2000	SV3000	SV4000		
Manifold type		Tie-rod base manifold					
1 (P: SUP), 3/5 (E: E	XH) type		Common	SUP, EXH			
Valve stations (maximum)		20 stations					
Max. number of sol	enoids	32 points					
	1(P), 3/5(E) port	C8, N9	C10, N11	C12, N11	C12, N11,03		
Port size	4(A), 2(B) port	C3, C4, C6	C4, C6, C8	C6, C8, C10	C8, C10, C12		
	4(A), 2(B) port	N1, N3, N7	N3, N7, N9	N7, N9, N11	N9, N11, 02, 03		

## Flow Rate Characteristics

	Port	size		Flow rate characteristics				
Model 1, 5, 3		4, 2	1→4/2 (P→A/B)			4/2→3/5 (A/B→E)		
	(P,EA,EB)	(A,B)	C [dm <sup>3</sup> /(s-bar)]	b	Cv	C[dm3/(s-bar)]	b	Cv
SS5V1-10	C8	C6	0.98	0.26	0.24	1.1	0.35	0.28
SS5V2-10	C10	C8	2.1	0.20	0.46	2.4	0.18	0.48
SS5V3-10	C12	C10	4.2	0.22	0.91	4.3	0.21	0.93
SS5V4-10	C12	C12	6.2	0.19	1.3	7.0	0.18	1.6

Note) The value is for manifold base with 5 stations and individually operated 2 position type.

## Enclosure of Manifold Variations (Common for cassette base and tie-rod base)

Enclosure of Marinola Variations (Common for Cassette base and the roa base)				
Enclosure (Based on IEC60529)				
IP67 Note 1)				
IP67				
IP67 (partly IP40)				
IP67				
IP20				
IP67				
Dusttight (IP40)				
Dusttight (IP40)				

Note 1) Enclosure of a gateway unit is IP65.

## SV Series Solenoid Valve Specifications



Made to Order Specifications (For details, refer to page 134.)

## Symbol

## SV1000/2000/3000/4000



(EA)5 1 3(EB)

3 position closed center

### SV1000/2000/3000 SV4000










(P)

(EA)5 1 3(EB)

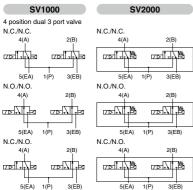

\* SV3000 and 4000 are not available with 4 position dual 3 port valve.

Fluid			Air	
Internal pilot Operating	2 position single 4 position dual 3 port valve		0.15 to 0.7	
pressure range	2 position	on double	0.1 to 0.7	
(MPa)	3 position	on	0.2 to 0.7	
External pilot	Operation	ng pressure range	-100 kPa to 0.7	
Operating pressure range (MPa)	2 positio 3 positio	on single, double on	0.25 to 0.7	
Ambient and	fluid ter	nperature (°C)	-10 to 50 (No freezing.)	
frequency	2 position single, double 4 position dual 3 port valve		5	
(Hz)	3 position		3	
Manual over	ride		Non-locking push type	
wandar over	iue		Push-turn locking slotted type	
Pilot exhaust	method	Internal pilot	Common exhaust type for main and pilot valve	
		External pilot	Pilot valve individual exhaust	
Lubrication			Not required	
Mounting ori	entation		Unrestricted	
Impact/Vibra	tion resi	stance (ms²)	150/30	
Enclosure			IP67 (Based on IEC60529)	
Coil rated voltage			24 VDC, 12 VDC	
Allowable voltage fluctuation		ctuation	±10% of rated voltage	
Power consumption			0.6 (With indicator light: 0.65)	
Surge voltag	e suppr	essor	Zener diode	
Indiator light			LED	

Note) Impact resistance:

No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial penol) Vibration resisitance: No malfunction occured in a one-sweep test between 45 and 2000

Hz. Test was perfored at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

## Response Time

	Type of actuation	Response time (ms) (at the pressure of 0.5 MPa)					
ı	Type of actuation	SV1000	SV2000	SV3000	SV4000		
	2 position single	11 or less	25 or less	28 or less	40 or less		
	2 position double	10 or less	17 or less	26 or less	40 or less		
	3 position	18 or less	29 or less	32 or less	82 or less		
Į	4 position dual 3 port valve	15 or less	33 or less	_	_		

Note) Based on dynamic performance test, JIS B 8419: 2010. (Coil temperature: 20°C, at rated voltage)

## Weight

Series	Type of actuation	Weight (g)
	Single solenoid	66
SV1000	Double solenoid	71
371000	3 position	73
	4 position dual 3 port	71
	Single solenoid	74
SV2000	Double solenoid	78
342000	3 position	83
	4 position dual 3 port	78
	Single solenoid	99
SV3000	Double solenoid	102
	3 position	110
	Single solenoid	186
SV4000	Double solenoid	190
	3 position	211

Note) Weight of solenoid valve only.



# **Gateway-type Serial Transmission System**

# **EX500** Series

## IP67 compliant



## EX500 Gateway Decentralized System 2 P.28

Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

- Number of output points: 32 points
- . Connected to the SI unit of the EX500


## EX500 (Gateway Decentralized System 2 (128 Points)) **Serial Transmission System**

# SV Series

# 

## **How to Order Manifold**

## Tie-rod base

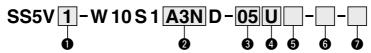

## Series

1	SV1000
2	SV2000
3	SV3000

## SI unit (Number of outputs, Output polarity.) Max. number of valve stations. Protocol)

0	Without SI unit
A3N	32 outputs Note 1) 3),
7.0	2 to 16 stations (20 stations Note 2))

Note 1) 16 outputs can be set by switching the built-in setting switch.

Note 2) ( ): Maximum number of stations for mixed single and double wiring.

Note 3) When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

## 3 Valve stations

Symbol	Stations	Note
02	2 stations	
- i	- :	Double wiring Note 1)
16	16 stations	
02	2 stations	Considered Invest Note 2)
:	- :	Specified layout Note 2) (Available up to 32 solenoids)
20	20 stations	(Available up to 32 solellolus)

Note 1) Double wiring: single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

## SI unit part no. EX500-S103

## P. E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

## SUP/EXH block assembly

	O O O I / EXTI BIOOK GOODINBIY		
	Nil	Internal pilot	
	S	Internal pilot, Built-in silencer Note)	
	R	External pilot	
	RS	External pilot, Built-in silencer Note)	

Note) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## **Mounting**

Wideling		
Nil Direct mounting		Direct mounting
	D	With DIN bracket, DIN rail with standard length
	D0	With DIN bracket, without DIN rail
	D3 Note)	With DIN bracket, DIN rail for 3 stations
	- i	:
	D20 Note)	With DIN bracket, DIN rail for 20 stations

Note) Specify a longer rail than the length of valve stations.

\* If the DIN rail must be mounted without an SI unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to page 123.

## A. B port size

	10 0.20		
Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8	
C4	ø4 One-touch fitting	One-touch	SV1000
C6	ø6 One-touch fitting	fitting	
C4	ø4 One-touch fitting	ø10	
C6	ø6 One-touch fitting	One-touch	SV2000
C8	ø8 One-touch fitting	fitting	
C6	ø6 One-touch fitting	ø12	
C8	ø8 One-touch fitting	One-touch	SV3000
C10	ø10 One-touch fitting	fitting	
M Note)	A, B port mixed		

## Inch cizo

IIICII 3	SIZE		
Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting	ø5/16"	
N3	ø5/32" One-touch fitting	One-touch	SV1000
N7	ø1/4" One-touch fitting	fitting	
N3	ø5/32" One-touch fitting	ø3/8"	
N7	ø1/4" One-touch fitting	One-touch	SV2000
N9	ø5/16" One-touch fitting	fitting	
N7	ø1/4" One-touch fitting	ø3/8"	
N9	ø5/16" One-touch fitting	One-touch	SV3000
N11	ø3/8" One-touch fitting	fitting	
M Note)	A. B port mixed		

Note) Indicate the sizes on the manifold specification sheet.

\* The X and PE port size of external pilot type [R, RS] are ø4 (mm) or ø5/32" (inch) for the SV1000/2000 series, and ø6 (mm) or ø1/4" (inch) for the SV3000 series.


\* A separate GW unit and communication cable are required

For details about the EX500 series, refer to the Web Catalog.



## **How to Order Manifold Assembly**


## Example

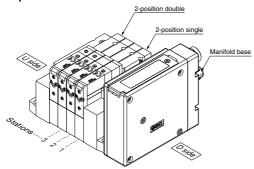

SS5V1-W10S1A3ND-04B-C6-----1 set (Manifold base part number) \* SV1100-5FU---·····2 sets (2-position single part number) \* SV1200-5FU---.....2 sets (2-position double part number) The asterisk denotes the symbol for assembly.

- Prefix it to the part numbers of the valve etc.
- The valve arrangement is numbered as the 1st station from the D side. · Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

## **How to Order Valves**

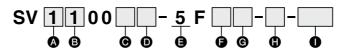

## A Series

1	SV1000
2	SV2000
3	SV3000

## Type of actuation

•	pe or actuation
1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
	4-position dual 3-port valve (N.C./N.C.)
B Note)	4-position dual 3-port valve (N.O./N.O.)
C Note)	4-position dual 3-port valve (N.C./N.O.)

Note) Select the SV1000 or SV2000 series for the 4-position dual 3-port valve.

\* Select the internal pilot type for the 4-position dual 3-port valve.

## Pilot type

Nil	Internal pilot
R	External pilot

## Back pressure check valve

Nil	None
K	Built-in

- \* Built-in back pressure check valve type is applicable to the SV1000 series only.
- \* The product with a back pressure check valve is not available for 3-position valves.


Note) Refer to Specific Product Precautions 2 on page 136.

## Rated voltage

_	
5	24 VDC

•	gilladige voltage auppressor
U	With light/surge voltage suppressor
R	Without light, with surge voltage suppressor

## Manual override

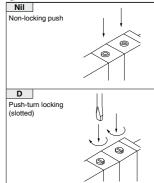

## Manifold block

If stations are to be added, order the product with manifold block.

(For details, refer to page 119.)

## Made to Order


Nil	_
	Main valve fluororubber specification (For details, refer to page 134.)




## SV Series


## Dimensions: SV1000 Series for EX500 Gateway Decentralized System 2 (128 points)

## Tie-rod base manifold

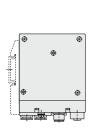

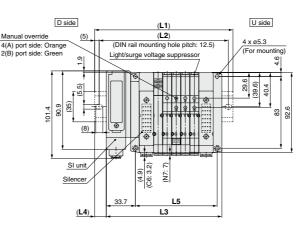



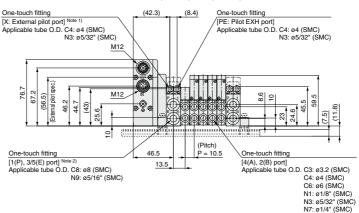

Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions. Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.


L: DIN Rail Overall Length

n: Stations


L_n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

## Dimensions: SV2000 Series for EX500 Gateway Decentralized System 2 (128 Points)

## Tie-rod base manifold

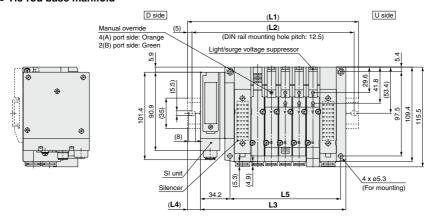

(Station 1) ----- (Station n)

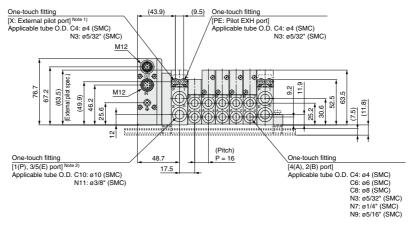

Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L:	DIN	Rail	Overall	Length


٠.	Statione	

L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368


## SV Series

## Dimensions: SV3000 Series for EX500 Gateway Decentralized System 2 (128 points)

## Tie-rod base manifold

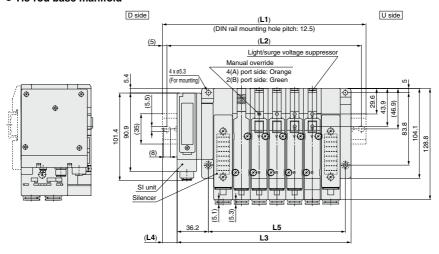

(Station 1) ----- (Station n)

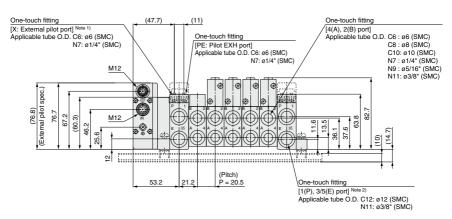

Note 1) External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

Note 2) When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

L: DIN Rail Overall Leng	τn
--------------------------	----


n: St	ations
-------	--------

L_n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	185.5	210.5	235.5	248	273	298	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5
L2	162.5	175	200	225	237.5	262.5	287.5	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	512.5	525
L3	139.7	160.2	180.7	201.2	221.7	242.2	262.7	283.2	303.7	324.2	344.7	365.2	385.7	406.2	426.7	447.2	467.7	488.2	508.7
L4	16.5	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

# Integrated-type (For I/O) Serial Transmission System

# EX250 Series

## IP67 (partly IP40) compliant

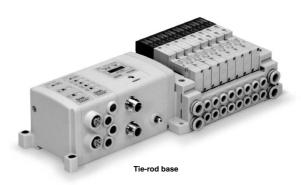


Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

• Number of inputs/outputs points: 32 points each

## EX250 Integrated-type (For I/O) **Serial Transmission System**

# SV Series (E CA CAN US

## How to Order Manifold

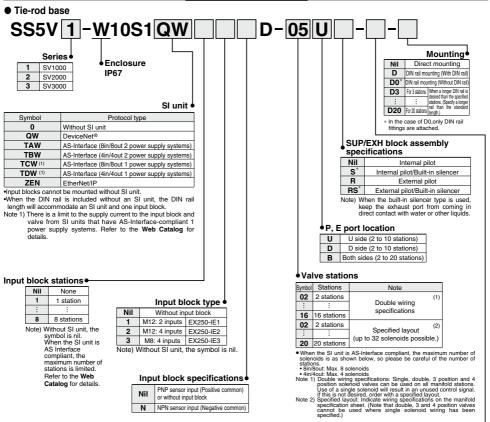

## Input block specifications

<u> </u>	•
Nil	PNP sensor input (Positive common) or without input block
N	NPN sensor input (Negative common)

ι, В р	ort size (m	netric)	A, B	port size (	inch)

Symbol	Protocol type	Solenoid part not.
QW	DeviceNet®	EX250-SDN1
TAW	AS-Interface (8in/8out 2 power supply systems)	EX250-SAS3
TBW	AS-Interface (4in/4out 2 power supply systems)	EX250-SAS5
TCW	AS-Interface (8in/8out 1 power supply systems)	EX250-SAS7
TDW	AS-Interface (4in/4out 1 power supply systems)	EX250-SAS9
ZEN	EtherNet/IP	EX250-SEN1

Catalog for details.

SI Unit Part No.

Symbol	A, B port	P, E port	Applicable series		Symbol	A, B port	P, E port	Applicable series				
C3	One-touch fitting for ø3.2				N1	One-touch fitting for ø1/8"						
C4	One-touch fitting for ø4	One-touch	SV1000		SV1000		SV1000		N3	One-touch fitting for ø5/32"	One-touch	SV1000
C6	One-touch fitting for ø6	fitting for ø8			N7	One-touch fitting for ø1/4"	fitting for ø5/16"					
C4	One-touch fitting for ø4				N3	One-touch fitting for ø5/32"						
C6	One-touch fitting for ø6	One-touch fitting for ø10	SV2000		N7	One-touch fitting for ø1/4"	One-touch	SV2000				
C8	One-touch fitting for ø8	Intuing for \$10			N9	One-touch fitting for ø5/16"	fitting for ø3/8"					
C6	One-touch fitting for ø6				N7	One-touch fitting for ø1/4"						
C8	One-touch fitting for ø8	One-touch fitting for ø12		N9	One-touch fitting for ø5/16"	One-touch fitting for ø3/8"	SV3000					
C10	One-touch fitting for ø10	illung for Ø 12			N11	One-touch fitting for ø3/8"	Illurig for Ø3/8					
M	A, B ports mixed				M	A, B ports mixed						

In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

Refer to the Web Catalog and the Operation Manual for the details of EX250 Integrated-type Serial Transmission System. Please download the Operation Manual via our website, https://www.smcworld.com.




<sup>\*</sup> Port sizes of X, PE port for external pilot specifications (R, RS) are ø4 (metric), ø5/32" (inch) for SV1000/2000 and ø6 (metric) and ø1/4" (inch) for SV3000.

## **How to Order Manifold Assembly**


## Ordering example (SV1000)

Manifold

SS5V1-W10S1QW11ND-05B-C6 (1 set)

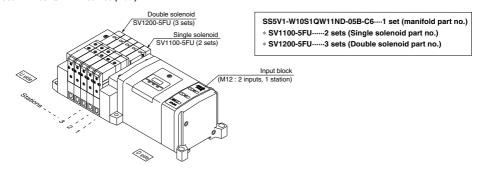

## **How to Order Valve**

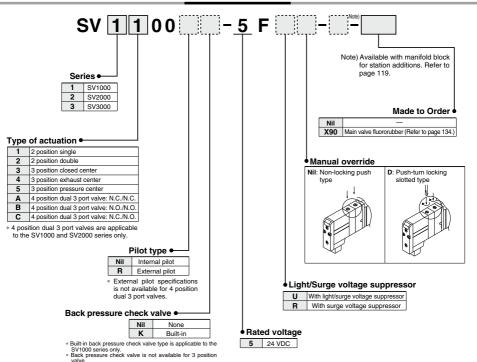


Note) Refer to Specific Product Precautions 2 on page 136.



## Dimensions: SV1000 Series for EX250 Integrated-type (For I/O) Serial Transmission System

- Tie-rod base manifold: SS5V1-W10S1□□□□D-Stations (S, R, RS)-
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

## (With 2 input blocks)

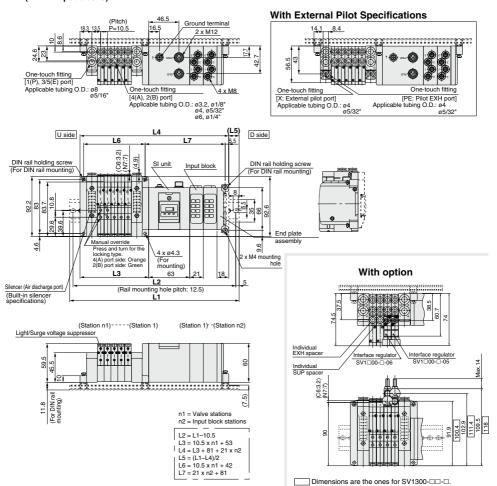


Input block (n1) Stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373
1	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398
2	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5
3	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5
4	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498
7	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523
8	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5


## Dimensions: SV2000 Series for EX250 Integrated-type (For I/O) Serial Transmission System


● Tie-rod base manifold: SS5V2-W10S1□□□□D-Stations (S, R, RS) C6, N7 (-D)

(With 2 input blocks)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

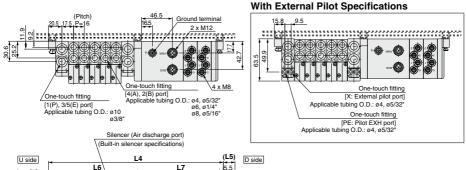

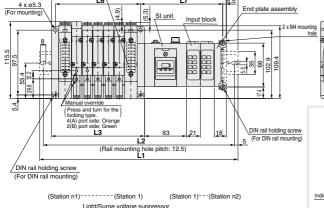

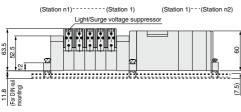

# n1 = Valve stations n2 = Input block stations


With option

## L1: DIN Rail Overall Length

Input block Stations (n2)	ons n1) 2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5
1	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498	510.5
2	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498	510.5	535.5
3	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548
4	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	548	560.5	573
5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	473	485.5	498	510.5	535.5	548	560.5	585.5	598
6	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5
7	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5	523	535.5	560.5	573	585.5	610.5	623	635.5
8	373	385.5	398	423	435.5	448	460.5	485.5	498	510.5	535.5	548	560.5	573	598	610.5	623	648	660.5

L2 = L1 - 10.5 L3 = 16 x n1 + 60 L4 = L3 + 81 + 21 x n2 L5 = (L1 - L4) /2 L6 = 16 x n1 + 48 L7 = 21 x n2 + 81.5


## Dimensions: SV3000 Series for EX250 Integrated-type (For I/O) Serial Transmission System

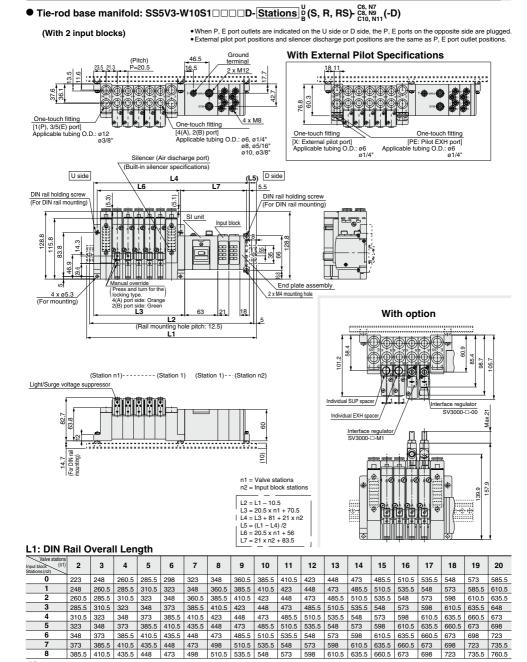

# Integrated-type (For I/O) Serial Transmission System

# **EX600** Series

## IP67 compliant

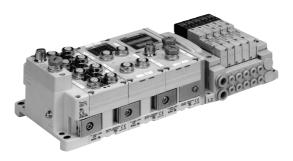

Tie-rod base

## Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

- Digital input/output: Max. 144 inputs/144 outputs
- · Analog input: Max. 18 channels
- Valve output: 32 outputs


Refer to the **Web Catalog** and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System.

Please download the Operation Manual via our website, https://www.smcworld.com

# 

When I/O Unit EX600-D□□E or EX600-D□□F are selected, enclosure is IP40.
Refer to page 141 for details.

How to Order

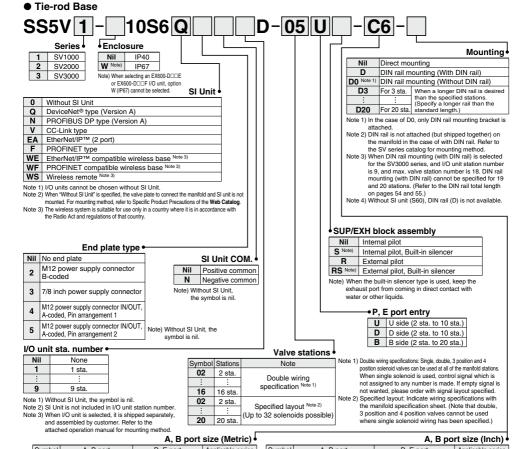

Symbol	A, b port	P, E port	Applicable series
C3	ø3.2 One-touch fitting		
C4	ø4 One-touch fitting	ø8 One-touch fitting	SV1000
C6	ø6 One-touch fitting		
C4	ø4 One-touch fitting		
C6	ø6 One-touch fitting	ø10 One-touch fitting	SV2000
C8	ø8 One-touch fitting		
C6	ø6 One-touch fitting		
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV3000


C10 ø10 One-touch fitting
M A, B port mixed

Symbol	A, B port	P, E port	Applicable series
N1	ø1/8" One-touch fitting		
N3	ø5/32" One-touch fitting	ø5/16" One-touch fitting	SV1000
N7	ø1/4" One-touch fitting		
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV2000
N9	ø5/16" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV3000
N11	ø3/8" One-touch fitting		
M	A, B port mixed		


In the case of Mixed specifications (M), indicate separately with the manifold specification sheet

Regarding the X and PE port size of External pilot type (R), and X port size of External pilot/Built-in silencer type (RS), ø4 (mm) and ø5/32" (inch) for the SV1000/2000 series, ø6 (mm) and, ø1/4" (inch) for the SV3000 series.

## How to Order Manifold Assembly (Example)

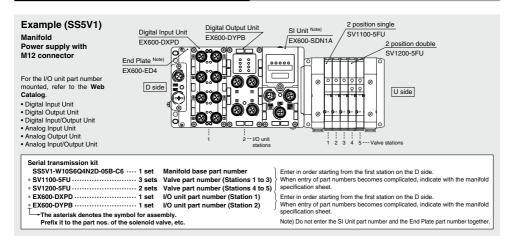


## **How to Order Valves**

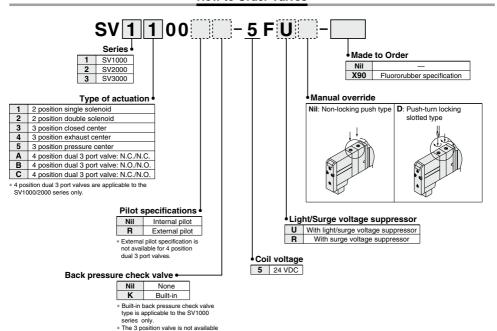


with the back pressure check valve.

## **SV** Series

## **Dimensions: SV1000 Series**

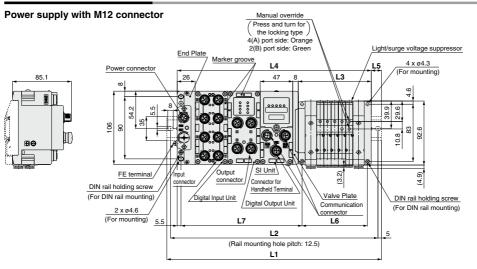

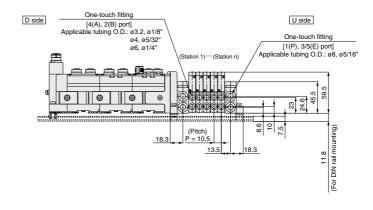



L2 = L1 - 10.5 L3 = 10.5 x n1 + 53 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 L6 = 10.5 x n1 + 42 L7 = 47 x n2 + 81

50

Valve I/O stations unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	348	348	360.5	373
1	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423
2	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473
3	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	435.5	448	460.5	473	485.5	498	498	510.5
4	373	385.5	398	398	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5
5	423	435.5	435.5	448	460.5	473	485.5	498	498	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5
6	460.5	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5
7	510.5	523	535.5	548	560.5	560.5	573	585.5	598	610.5	623	623	635.5	648	660.5	673	685.5	698	698
8	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	723	735.5	748
9	610.5	623	623	635.5	648	660.5	673	685.5	685.5	698	710.5	723	735.5	748	760.5	760.5	773	785.5	798

## **Dimensions: SV1000 Series**

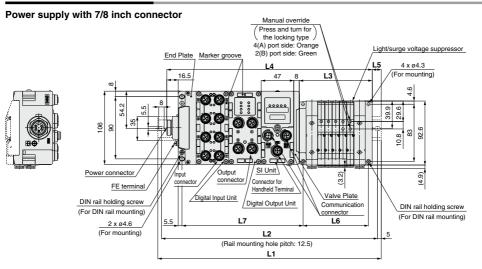

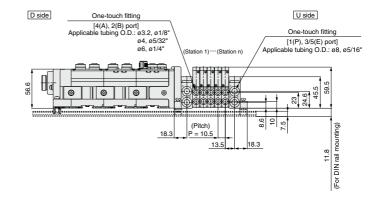



L2 = L1 - 10.5 L3 = 10.5 x n1 + 53 L4 = L3 + 97.5 + 47 x n2 L5 = (L1 - L4)/2 L6 = 10.5 x n1 + 42 L7 = 47 x n2 + 81

Valve I/O stations unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5	385.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5
2	298	310.5	310.5	323	335.5	348	360.5	373	373	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5
3	348	348	360.5	373	385.5	398	410.5	410.5	423	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5
4	385.5	398	410.5	423	435.5	435.5	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573
5	435.5	448	460.5	473	473	485.5	498	510.5	523	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623
6	485.5	498	498	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673
7	535.5	535.5	548	560.5	573	585.5	598	598	610.5	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	698	710.5	723	735.5	748	760.5	760.5
9	623	635.5	648	660.5	660.5	673	685.5	698	710.5	723	723	735.5	748	760.5	773	785.5	798	798	810.5

## **SV** Series

## **Dimensions: SV2000 Series**

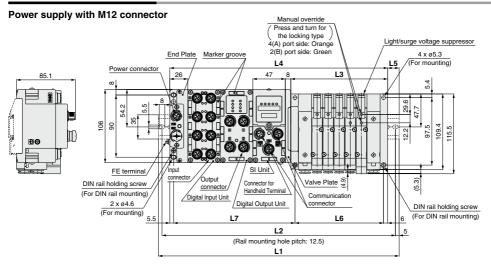


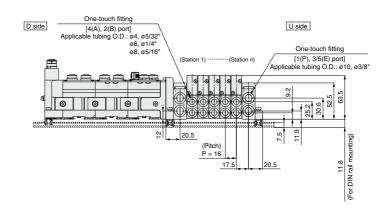


L2 = L1 - 10.5 L3 = 16 x n1 + 60 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 L6 = 16 x n1 + 48 L7 = 47 x n2 + 81.5

Valve I/O stations unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	198	223	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5
1	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5
2	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5
3	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5
4	385.5	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673
5	435.5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723
6	485.5	498	510.5	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773
7	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823
8	573	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5
9	623	635.5	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5

## **Dimensions: SV2000 Series**

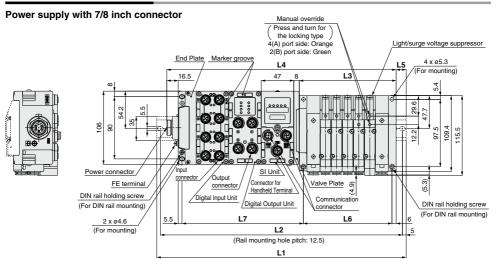

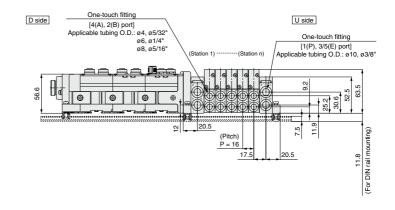



L2 = L1 - 10.5 L3 = 16 x n1 + 60 L4 = L3 + 97.5 + 47 x n2 L5 = (L1 - L4)/2 L6 = 16 x n1 + 48 L7 = 47 x n2 + 81.5

Valve I/O stations unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	548
2	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	673	698
5	448	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748
6	498	523	535.5	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	798	823	835.5
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5
9	648	660.5	673	685.5	710.5	723	735.5	748	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5

## **SV** Series

## **Dimensions: SV3000 Series**

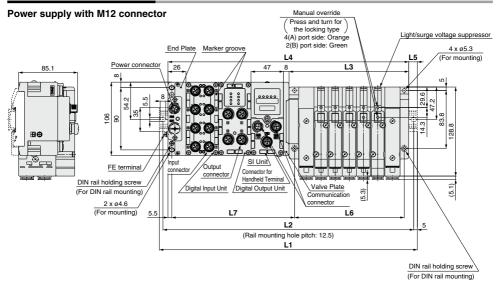

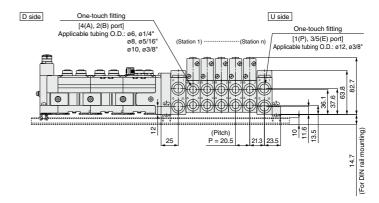



L2 = L1 - 10.5 L3 = 20.5 x n1 + 70.5 L4 = L3 + 81 + 47 x n2 L5 = (L1 - L4)/2 L6 = 20.5 x n1 + 56 L7 = 47 x n2 + 83.5

Valve I/O stations unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	223	248	260.5	285.5	298	323	348	360.5	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	585.5
1	273	285.5	310.5	335.5	348	373	398	410.5	435.5	448	473	498	510.5	535.5	560.5	573	598	623	635.5
2	310.5	335.5	360.5	373	398	423	435.5	460.5	485.5	498	523	535.5	560.5	585.5	598	623	648	660.5	685.5
3	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548	573	585.5	610.5	635.5	648	673	685.5	710.5	735.5
4	410.5	435.5	448	473	498	510.5	535.5	548	573	598	610.5	635.5	660.5	673	698	723	735.5	760.5	773
5	460.5	473	498	523	535.5	560.5	585.5	598	623	635.5	660.5	685.5	698	723	748	760.5	785.5	810.5	823
6	498	523	548	560.5	585.5	610.5	623	648	673	685.5	710.5	735.5	748	773	785.5	810.5	835.5	848	873
7	548	573	598	610.5	635.5	648	673	698	710.5	735.5	760.5	773	798	823	835.5	860.5	873	898	923
8	598	623	635.5	660.5	685.5	698	723	735.5	760.5	785.5	798	823	848	860.5	885.5	910.5	923	948	973
9	648	660.5	685.5	710.5	723	748	773	785.5	810.5	835.5	848	873	885.5	910.5	935.5	948	973	_	_

## EX600 Series **SV** Series

## **Dimensions: SV3000 Series**

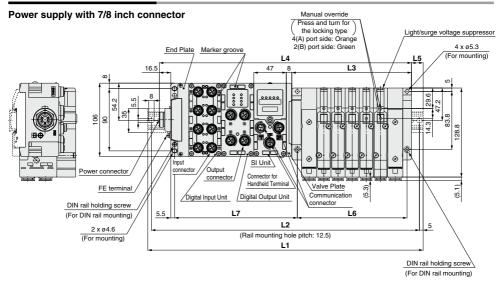

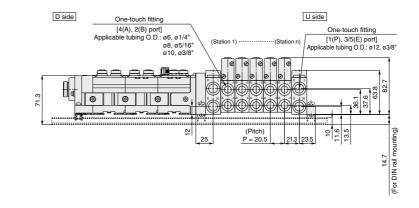


L2 = L1 - 10.5 L3 = 20.5 x n1 + 70.5 L4 = L3 + 97.5 + 47 x n2 L5 = (L1 - L4)/2 L6 = 20.5 x n1 + 56 L7 = 47 x n2 + 83.5

Valve I/O stations unit (n1) stations (n2)		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
0	235.5	260.5	285.5	298	323	335.5	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548	560.5	585.5	610.5
1	285.5	310.5	323	348	373	385.5	410.5	423	448	473	485.5	510.5	535.5	548	573	598	610.5	635.5	660.5
2	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5	560.5	573	598	623	635.5	660.5	685.5	698
3	385.5	398	423	435.5	460.5	485.5	498	523	548	560.5	585.5	610.5	623	648	660.5	685.5	710.5	723	748
4	423	448	473	485.5	510.5	523	548	573	585.5	610.5	635.5	648	673	698	710.5	735.5	760.5	773	798
5	473	498	510.5	535.5	560.5	573	598	623	635.5	660.5	673	698	723	735.5	760.5	785.5	798	823	848
6	523	535.5	560.5	585.5	598	623	648	660.5	685.5	710.5	723	748	760.5	785.5	810.5	823	848	873	885.5
7	573	585.5	610.5	623	648	673	685.5	710.5	735.5	748	773	798	810.5	835.5	860.5	873	898	910.5	935.5
8	610.5	635.5	660.5	673	698	723	735.5	760.5	773	798	823	835.5	860.5	885.5	898	923	948	960.5	985.5
9	660.5	685.5	698	723	748	760.5	785.5	810.5	823	848	860.5	885.5	910.5	923	948	973	985.5	_	_

# Integrated-type (For Output) Serial Transmission System

# EX260 Series

## IP67 (partly IP40) compliant

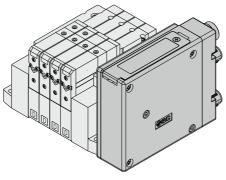

Tie-rod base

Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

• Number of outputs points: 16, 32 points each

## **Tie-rod Base:**

# **EX260 Integrated-type (For Output) Serial Transmission System**

# SV Series ( E LK . Thus C



## **How to Order Manifold**



\* Refer to Note 3) of the 2 SI unit specifications.

## 1 Series

	100
1	SV1000
2	SV2000
3	SV3000

## 2 SI Unit specifications

(output p	olarity, protocol,	number of outputs, comm	nunication	connector
Symbol (out Positive common (NPN)		Protocol	Number of outputs	Communication connector
(	)	Without	SI Unit	t
QA	QAN	DeviceNet®	32	M12
QB	QBN	Devicemen	16	WH2
NA	NAN		32	
NB	NBN	PROFIBUS	16	M12
NC	NCN	DP	32	Note 3)
ND	NDN		16	D-sub
VA	VAN	CC-Link	32	M12
VB	VBN	CC-LIIK	16	IVI I Z
DA	DAN	EtherCAT	32	M12
DB	DBN	EllielCAT	16	IVITZ
FA	FAN	PROFINET	32	M12
FB	FBN	THOTINE	16	IVITZ
EA	EAN	EtherNet/IP™	32	M12
EB	EBN	Luiciivel/IF	16	IVI I Z
Note 2)	GAN	Ethernet	32	M12
Note 2)	GBN	POWERLINK	16	IVI I Z

Note 1) DIN rail cannot be mounted without SI Unit. Note 2) Positive common (NPN) type is not applicble. Note 3) IP40 for the D-sub applicable communication connector specification.

(The manifold part number is "SS5V□-10S1NC/ND□D".) Note 4) For SI unit part number, refer to the table below.

## 3 Valve stations

## In case of the 32 Outputs SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	O IT II I Note 2)
:	- :	Specified layout Note 2) (Available up to 32 solenoid
20	20 stations	(Available up to 32 soleriolds)

## In case of the 16 Outputs SI unit

Symbol	Stations	Note
02	2 stations	
:		Double wiring Note 1)
08	8 stations	
02	2 stations	OKid I t Note 2)
:		Specified layout Note 2) (Available up to 16 solenoid
16	16 stations	(Available up to 16 soleriolus)

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations. Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications with the manifold specification sheet.
(Note that double, 3-position and

4-position valves cannot be used where single solenoid wiring has been specified.)

## P, E port location

<b>U</b> F, L	- port location
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

## 5 SUP/EXH block assembly specifications

Nil	Internal pilot
S Note)	Internal pilot/Built-in silencer
R	External pilot
RS Note)	External pilot/Built-in silencer

Note) When the built-in silencer type is used, keep the air outlet from coming in direct contact with water or other liquids.

## Mounting

<u>•</u>	January			
Nil		Direct mounting		
D	DIN rail	DIN rail mounting (With DIN rail)		
D0	DIN rail m	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	When a longer DIN rail is de-		
:	:	sired than the specified stations. (Specify a longer rail than the		
D20	For 20 stations	standard length.)		

If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. For the DIN rail part number, refer to page 123.

## 6 A, B port size (Metric size)

<b>O</b> A,	b port size (wetric size)		
Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	ø8	
C4	ø4 One-touch fitting	One-touch fitting	SV1000
C6	ø6 One-touch fitting	One-touch litting	
C4	ø4 One-touch fitting	ø10	
C6	ø6 One-touch fitting	One-touch fitting	SV2000
C8	ø8 One-touch fitting	One-touch litting	
C6	ø6 One-touch fitting	ø12	
C8	ø8 One-touch fitting	One-touch fitting	SV3000
C10	ø10 One-touch fitting	One-touch litting	
M	A, B	ports mixed	

## A, B port size (Inch size)

]	Symbol	A, B port	P, E port	Applicable series
1	N1	ø1/8" One-touch fitting	ø5/16"	
	N3	ø5/32" One-touch fitting	One-touch fitting	SV1000
	N7	ø1/4" One-touch fitting	One-touch hitting	
1	N3	ø5/32" One-touch fitting	ø3/8"	
	N7	ø1/4" One-touch fitting	One-touch fitting	SV2000
	N9	ø5/16" One-touch fitting	One-touch hitting	
1	N7	ø1/4" One-touch fitting	ø3/8"	
	N9	ø5/16" One-touch fitting	One-touch fitting	SV3000
	N11	ø3/8" One-touch fitting	One-touch fitting	
	M	A, B	ports mixed	

\* In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

\* The port sizes of X, PE ports for external pilot specifications (R, Rs) are ø4 (millimeters) or ø5/32" (inches) for the SV1000/2000 series, and ø6 (millimeters) or ø1/4" (inches) for the SV3000 series.

## EX260 SI unit part no.


Symbol	Protocol	Number of	Communication	SI unit	part no.
Syllibol	1 1010001	outputs	connector	+COM.	-COM.
QA	DeviceNet®	32	M12	EX260-SDN2	
QB	Devicemen	16	IVIIZ	EX260-SDN4	EX260-SDN3
NA		32	M12	EX260-SPR2	EX260-SPR1
NB	PROFIBUS	16	I WIIZ	EX260-SPR4	EX260-SPR3
NC	DP	32		EX260-SPR6	EX260-SPR5
ND		16	D-sub	EX260-SPR8	EX260-SPR7
VA	00111	32		EX260-SMJ2	EX260-SMJ1
VB	CC-Link	16	M12	EX260-SMJ4	EX260-SMJ3

## EX260 SI unit part no.


Symbol	Protocol	Number of	Communication	SI unit	part no.
Syllibol	1 1010001	outputs	connector	+COM.	-COM.
DA	EtherCAT	32	M12	EX260-SEC2	EX260-SEC1
DB	EllierCAT	16	IVITZ	EX260-SEC4	EX260-SEC3
FA	PROFINET	32	M12	EX260-SPN2	EX260-SPN1
FB	PHOFINE	16	IVIIZ	EX260-SPN4	EX260-SPN3
EA	EtherNet/	32	140	EX260-SEN2	EX260-SEN1
EB	IР™	16	M12	EX260-SEN4	EX260-SEN3
GA	Ethernet	32	140		EX260-SPL1
GB	POWERI INK	16	M12	_	FX260-SPL3



## **How to Order Manifold Assembly**

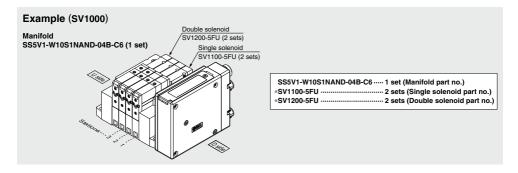

## **How to Order Valves**

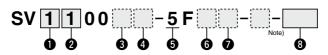

## Series

1	SV1000
2	SV2000
3	SV3000

## 2 Type of actuation

1	2-position single
2	2-position double
3	3-position closed center
4	3-position exhaust center
5	3-position pressure center
Α	4-position dual 3-port valve: N.C./N.C.
В	4-position dual 3-port valve: N.O./N.O.
С	4-position dual 3-port valve: N.C./N.O.

\* 4-position dual 3-port valves are applicable to the SV1000 and SV2000 series only.

## Pilot type

NII	Internal pilot
R	External pilot

\* External pilot specifications is not available for 4-position dual 3-port valves.

## 4 Back pressure check valve

Nil	None
K	Built-in

- \* Built-in back pressure check valve type is applicable to the SV1000 series only.
- \* Back pressure check valve is not available for 3-position valve.

Note) Refer to Specific Product Precautions 2 on page 136.

## Rated voltage

•	
5	24 VDC

## 6 Light/Surge voltage suppressor

U	With light/surge voltage suppressor
R	With surge voltage suppressor


## Made to Order

Nil	ı
X90	Main valve fluororubber (Refer to page 134.)

Note) Available with manifold block for station

additions. Refer to page 119.


## Manual override

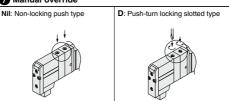


- · Refer to the Web Catalog for the dimensions of single SI unit.
- · Refer to the technical operation manual for details of SI unit.


## Dimensions: SV1000 Series for EX260 Integrated-type (For Output) Serial Transmission System

- Tie-rod base manifold: SS5V1-W10S1□□D-Stations B (S, R, RS)-C4, N3 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

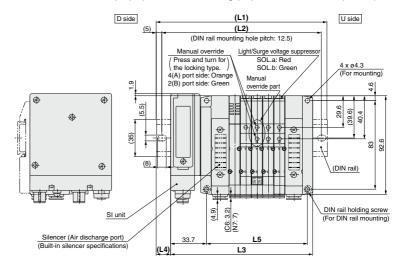



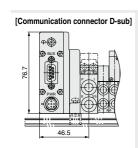

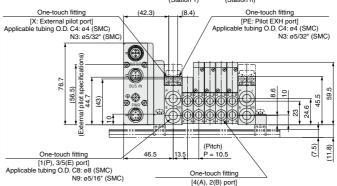


Applicable tubing O.D. C3: ø3.2 (SMC)
C4: ø4 (SMC)
C6: ø6 (SMC)
N1: ø1/8" (SMC)
N3: ø5/32" (SMC)


N7: ø1/4" (SMC)

L: DIN	L: DIN Rail Overall Length															Stations			
L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

## Dimensions: SV2000 Series for EX260 Integrated-type (For Output) Serial Transmission System

- Tie-rod base manifold: SS5V2-W10S1□□D-Stations  $\stackrel{U}{\stackrel{}{\stackrel{}{\stackrel{}{\stackrel{}}{\stackrel}}}{\stackrel{}{\stackrel{}}}}$  (S, R, RS)- $\stackrel{C3, N3}{\stackrel{C4, N7}{\stackrel{}{\stackrel}}}$  (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

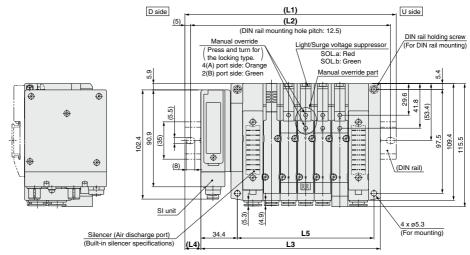

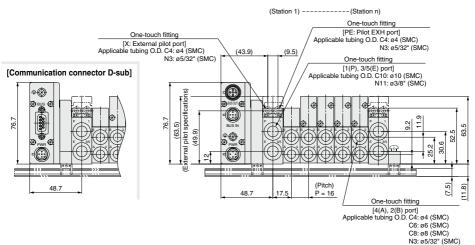

L	L: DIN Rail Overall Length n: Stations															Stations				
		2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
-	L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
	L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
	L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
	L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
	1.5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

N7: ø1/4" (SMC) N9: ø5/16" (SMC)


## **SV** Series

## Dimensions: SV3000 Series for EX260 Integrated-type (For Output) Serial Transmission System

- ullet Tie-rod base manifold: SS5V3-W10S1  $\Box$  D-Stations ullet (S, R, RS)- $egin{smallmatrix} C6, N7 \\ C8, N9 \\ C10, N11 \\ C10$ 
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.

9

• External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

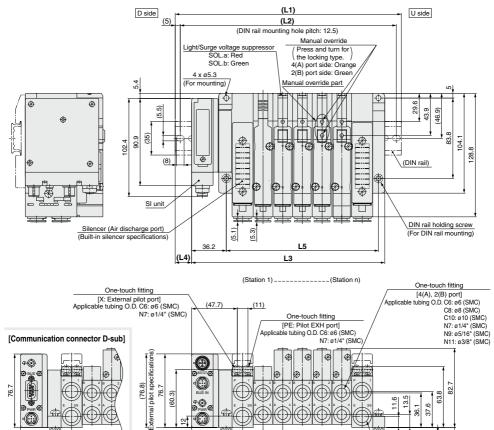

L: DIN	L: DIN Rail Overall Length n: Statio															Stations			
r u	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	185.5	210.5	235.5	248	273	298	310.5	335.5	348	373	398	410.5	435.5	460.5	473	498	523	535.5
L2	162.5	175	200	225	237.5	262.5	287.5	300	325	337.5	362.5	387.5	400	425	450	462.5	487.5	512.5	525
L3	139.7	160.2	180.7	201.2	221.7	242.2	262.7	283.2	303.7	324.2	344.7	365.2	385.7	406.2	426.7	447.2	467.7	488.2	508.7
L4	16.5	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

21.2

53.2

(Pitch)

P = 20.5

One-touch fitting
[1(P), 3/5(E) port]
Applicable tubing O.D. C12: ø12 (SMC)

N11: ø3/8" (SMC)


62

53.2

## Integrated-type (For Output) Serial Transmission System

## EX126 Series

#### IP67 compliant

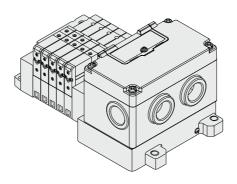


Applicable series Tie-rod base manifold SV1000/SV2000/SV3000

• Number of outputs points: 16 points

# **EX126 Integrated-type (For Output) Serial Transmission System**

**SV** Series


#### **How to Order**

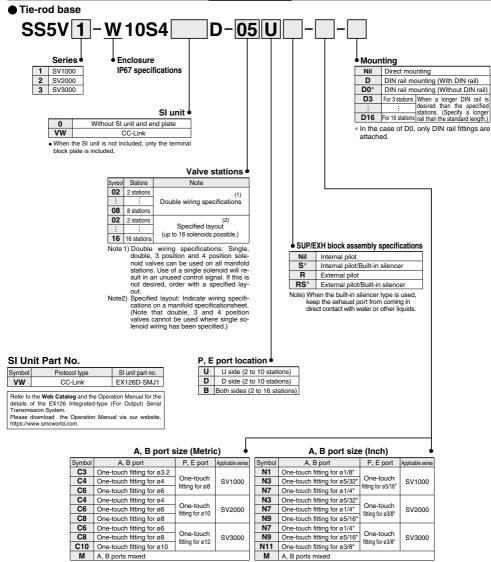


<sup>\*</sup> In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

<sup>\*</sup> Port sizes of X, PE port for external pilot specification (R, RS) are ø4 (metric), ø5/32" (inch) for SV1000/2000 and ø6 (metric) and ø1/4" (inch) for SV3000.

#### **How to Order Manifold Assembly**

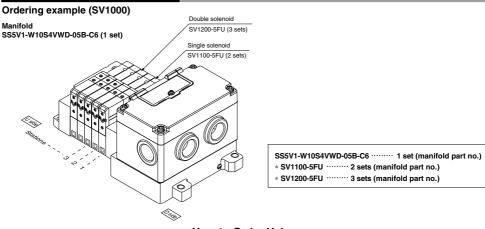

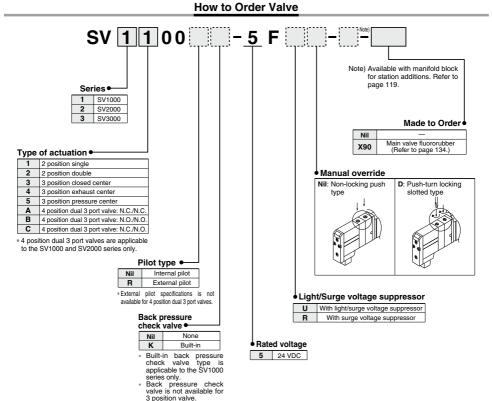


Note) Refer to Specific Product Precautions 2 on page 136.



#### Dimensions: SV1000 Series for EX126 Integrated-type (For Output) Serial Transmission System

● Tie-rod base manifold : SS5V1-W10S4 $\square$ D- $\underbrace{\text{Stations}}_{p}^{\text{U}}(S, R, RS)$ - $\underbrace{\text{C3, N1}}_{\text{C6, N7}}(-D)$ 

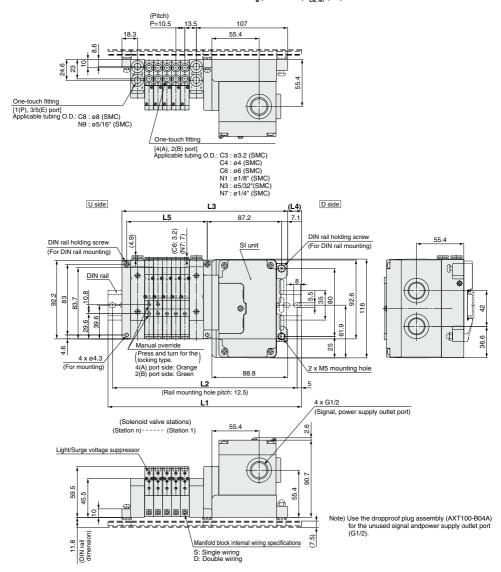


L Di	mens	ion												n: 9	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5
L2	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325
L3	162.8	173.3	183.8	194.3	204.8	215.3	225.8	236.3	246.8	257.3	267.8	278.3	288.8	299.3	309.8
L4	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

66

#### Dimensions: SV2000 Series for EX126 Integrated-type (For Output) Serial Transmission System

● Tie-rod base manifold : SS5V2-W10S4 D-Stations (S, R, RS)-C4, N3 (-D)

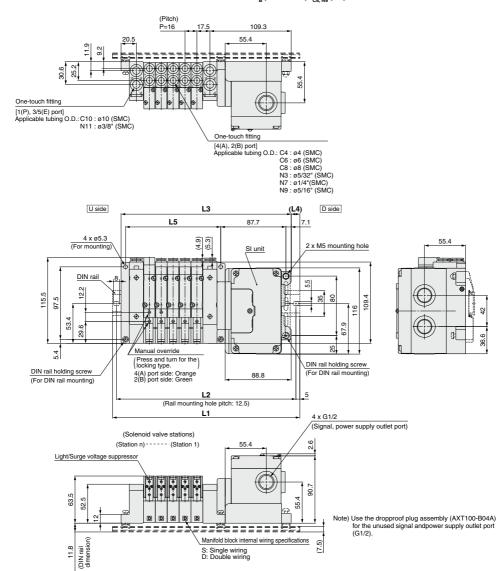


-	L Di	mens	ion												n:	Stations
ĺ	7	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
	L1	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
	L2	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
	L3	180.8	196.8	212.8	228.8	244.8	260.8	276.8	292.8	308.8	324.8	340.8	356.8	372.8	388.8	404.8
	L4	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5
	15	90	96	112	120	144	160	176	102	208	224	240	256	272	200	304

S: Single wiring D: Double wiring


#### Dimensions: SV3000 Series for EX126 Integrated-type (For Output) Serial Transmission System

● Tie-rod base manifold : SS5V3-W10S4 □ D-Stations © (S, R, RS)-CS.NY (-D)

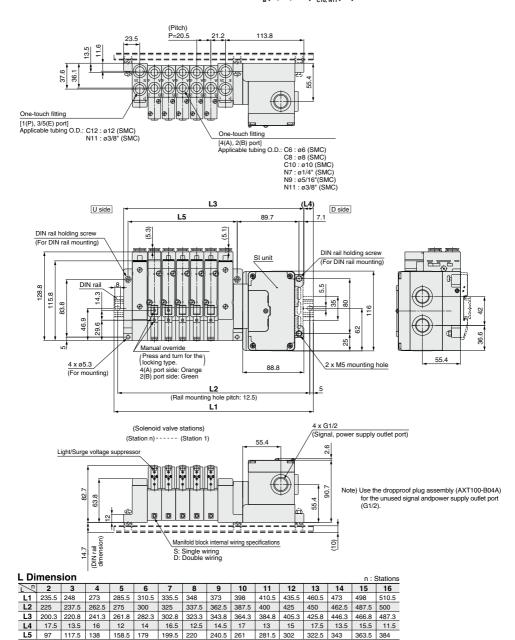

## **Integrated-type (For Output) Serial Transmission System**

## EX120 Series

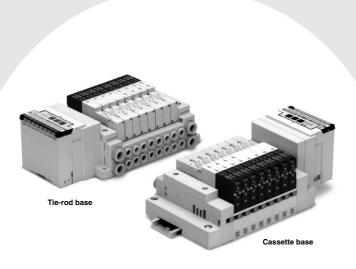


A - P - H 2	Cassette base manifold SV1000/SV2000
Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	Number of outputs points: 16 points

## EX120 Integrated-type (For Output) **Serial Transmission System**

SV Series

**(€** KK

#### **How to Order Manifold**

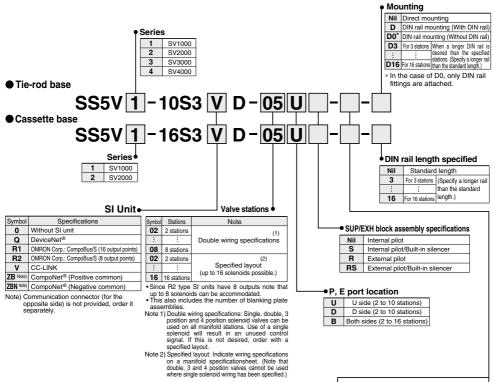

#### SI Unit Part No.

Symbol	Protocol type	SI unit part no.
Q	DeviceNet®	EX120-SDN1
R1	OMRON Corp.: CompoBus/S (16 output points)	EX120-SCS1
R2	OMRON Corp.: CompoBus/S (8 output points)	EX120-SCS2
V	CC-LINK	EX120-SMJ1
ZB	CompoNet® (Positive common)	EX120-SCM1
ZBN	CompoNet® (Negative common)	EX120-SCM3

Refer to the Web Catalog and the Operation Manual for the details of EX120 Integrated-type (For Output) Serial Transmission System.
Please download the Operation Manual via our website, https://www.smcworld.com


	A, B p	ort size (N	letric) 🖢		A, B	port size (	Inch)
Symbol	A, B port	P, E port	Applicable series	Symbol	A, B port	P, E port	Applicable serie
СЗ	One-touch fitting for ø3.2			N1	One-touch fitting for ø1/8"		
C4	One-touch fitting for ø4	One-touch	SV1000	N3	One-touch fitting for ø5/32"	One-touch	SV1000
C6	One-touch fitting for ø6	fitting for ø8		N7	One-touch fitting for ø1/4"	fitting for ø5/16"	
C4	One-touch fitting for ø4			N3	One-touch fitting for ø5/32"		
C6	One-touch fitting for ø6	One-touch fitting for ø10	SV2000	N7	One-touch fitting for ø1/4"	One-touch fitting for ø3/8"	SV2000
C8	One-touch fitting for ø8	illing for 8 TO		N9	One-touch fitting for ø5/16"	IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	
C6	One-touch fitting for ø6			N7	One-touch fitting for ø1/4"		
C8	One-touch fitting for ø8	One-touch fitting for ø12	SV3000	N9	One-touch fitting for ø5/16"	One-touch fitting for ø3/8"	SV3000
C10	One-touch fitting for ø10	IIIIIIII IOI Ø 12		N11	One-touch fitting for ø3/8"	IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	
C8	One-touch fitting for ø8			N9	One-touch fitting for ø5/16"	One-touch	
C10	One-touch fitting for ø10	One-touch fitting for ø12		N11	One-touch fitting for ø3/8"	fitting for ø3/8"	
C12	One-touch fitting for ø12	IIIIIIII IOI Ø 12		02N	NPT 1/4	NPT 3/8	SV4000
02	Rc 1/4	Rc 3/8	SV4000	03N	NPT 3/8	INF I 3/0	3 4 4 0 0 0
03	Rc 3/8	HC 3/8		02T	NPTF 1/4	NDTE 0/0	
02F	G 1/4	G 3/8		03T	NPTF 3/8	NPTF 3/8	
03F	G 3/8	G 3/8		M	A, B ports mixed		
M	A, B ports mixed						

In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

<sup>\*</sup> Port sizes of X, PE port for external pilot specification (R, RS) are ø4 (metric), ø5/32" (inch) for SV1000/2000 and ø6 (metric) and ø1/4" (inch) for SV3000/4000.




#### **How to Order Manifold Assembly**

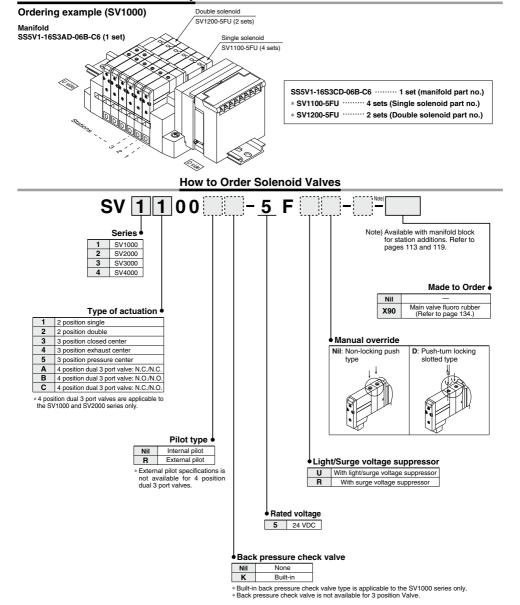

Note) Refer to Specific Product Precautions 2 on page 136.

#### Dimensions: SV1000 Series for EX120 Integrated-type (For Output) Serial Transmission System

- Cassette base manifold : SS5V1-16S3 D- Stations CS, R, RS)-C3, NT
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

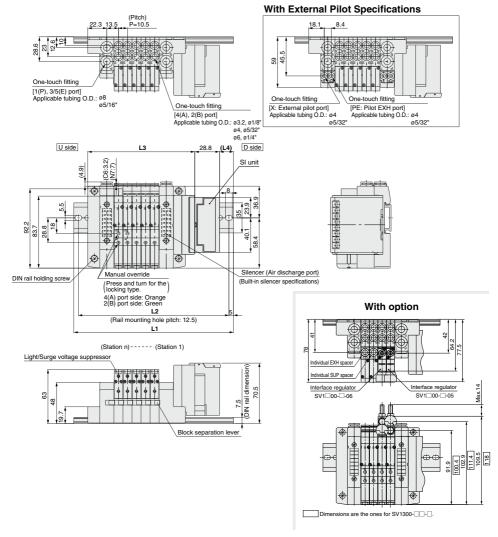


#### L Dimension

	Difference in a classical														
$\overline{\sum}$	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	92.9	103.4	113.9	124.4	134.9	145.4	155.9	166.4	176.9	187.4	197.9	208.4	218.9	229.4	239.9
L4	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5

#### Dimensions: SV2000 Series for EX120 Integrated-type (For Output) Serial Transmission System

- Cassette base manifold : SS5V2-16S3 D- Stations CS, R, RS)-C6, NT CS, NG
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

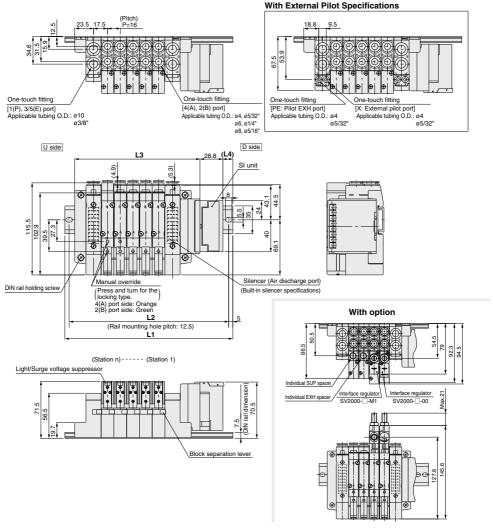


L Di	mens	ion												n : 8	Stations
<u>l</u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L2	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L3	108.9	124.9	140.9	156.9	172.9	188.9	204.9	220.9	236.9	252.9	268.9	284.9	300.9	316.9	332.9
L4	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5	12

#### Dimensions: SV1000 Series for EX120 Integrated-type (For Output) Serial Transmission System

#### ● Tie-rod base manifold : SS5V1-10S3 D- Stations CS, NI (-D)


When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

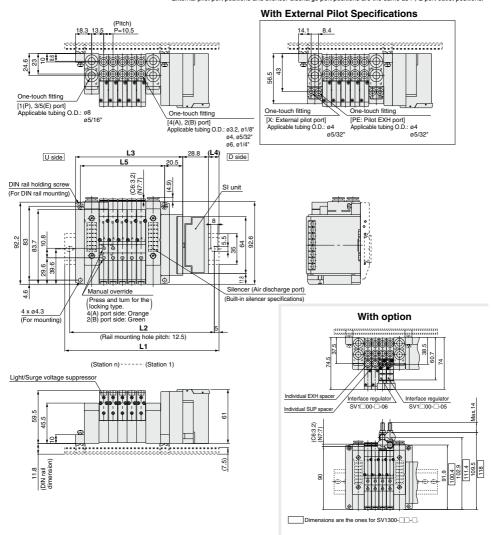

L DI	mens	ion												n:	Stations
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298
L2	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5
L3	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5	236
L4	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5	15.5	16.5
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210

#### Dimensions: SV2000 Series for EX120 Integrated-type (For Output) Serial Transmission System


- Tie-rod base manifold : SS5V2-10S3 D-Stations (S, R, RS)- C4, N3 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

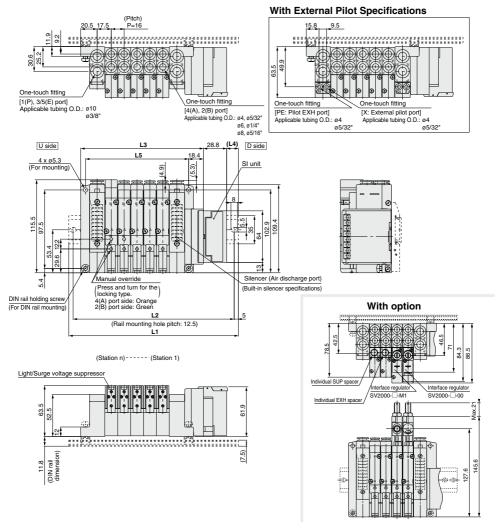

#### L Dimension n : Stations 16 11 13 15 L1 160.5 173 198 210.5 223 248 260.5 273 285.5 310.5 323 335.5 360.5 373 385.5 L2 150 162.5 187.5 200 212.5 237.5 250 262.5 275 300 312.5 325 350 362.5 375 L3 104.4 120.4 136.4 152.4 168.4 184.4 200.4 216.4 232.4 248.4 264.4 280.4 296.4 312.4 328.4 L4 12 14.5 17.5 14 16.5 17.5 16 14 13.5 16.5 13 15.5 12 15 13 L5 80 112 128 176 224 240 304


#### Dimensions: SV3000 Series for EX120 Integrated-type (For Output) Serial Transmission System

- Tie-rod base manifold : SS5V3-10S3 D- Stations (S, R, RS)-C6, N7 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

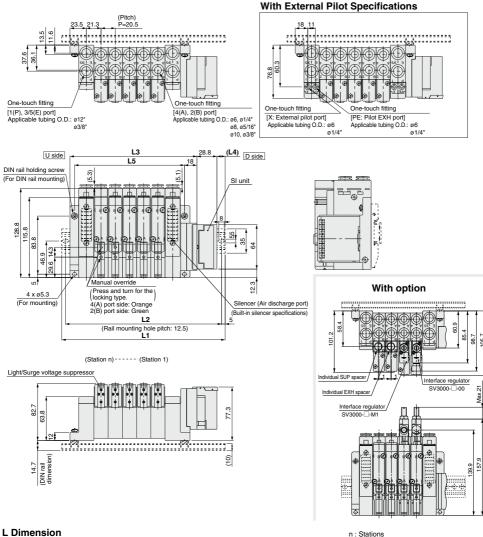

#### Dimensions: SV4000 Series for EX120 Integrated-type (For Output) Serial Transmission System

- ullet Tie-rod base manifold : SS5V4-10S3 $\Box$ D-Stations  $ullet^0_R$ (S, R, RS)- $ullet^{0.2}_{0.0}$ ( $ullet^{0.8}_{0.11}$ (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

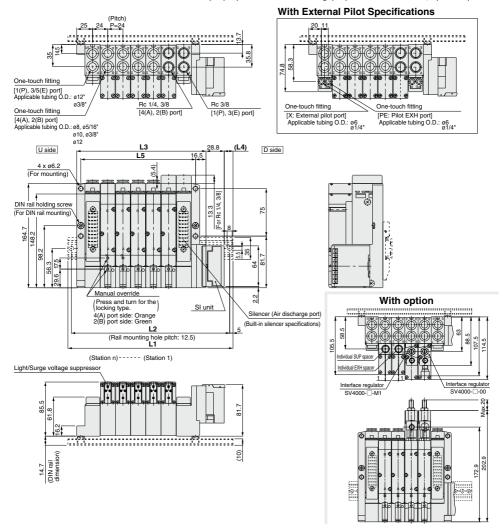


#### L Dimension

<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	448	473	498	523
L2	175	200	225	250	275	300	325	350	375	400	425	437.5	462.5	487.5	512.5
L3	132	156	180	204	228	252	276	300	324	348	372	396	420	444	468
L4	12.5	13	13.5	14	14.5	15	15.5	16	16.5	17	17.5	11.5	12	12.5	13
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445

n : Stations

## Circular Connector

#### IP67 compliant

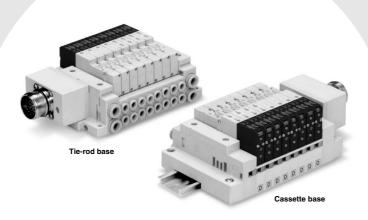


Amalianta ancian	Cassette base manifold SV1000/SV2000
Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	Number of connectors: 26 pins



## **Circular Connector** SV Series



#### How to Order Manifold

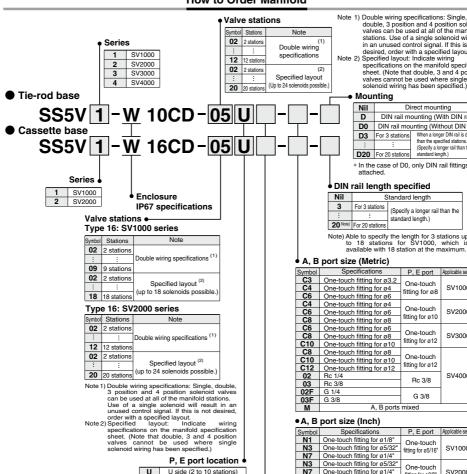

	· , _ p · · · · · · · · · · · · · · · · · ·
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

#### SUP/EXH block assembly specifications •

Nil	Internal pilot							
S*	Internal pilot/Built-in silencer							
R	External pilot							
RS*	External pilot/Built-in silencer							

Note) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

		double, 3 position and 4 position solenoid
		double, a position and 4 position solenoid
		valves can be used at all of the manifold
		stations. Use of a single solenoid will result
		in an unused control signal. If this is not
		desired, order with a specified layout.
е	2)	Specified layout: Indicate wiring
		specifications on the manifold specification
		sheet. (Note that double, 3 and 4 position

valves cannot be used where single solenoid wiring has been specified.)

Nil	Di	irect mounting										
D	DIN rail m	ounting (With DIN rail)										
D0	DIN rail mounting (Without DIN rail											
D3	For 3 stations	When a longer DIN rail is desired										
- :	-:	than the specified stations. (Specify a longer rail than the										
D20	For 20 stations											
* In the case of D0, only DIN rail fittings are												

Nil	S	Standard length												
3	For 3 stations	(Specify a longer rail than the												
- 1		standard length.)												
20 Note)	For 20 stations	otandara longan)												

Note) Able to specify the length for 3 stations up to 18 stations for SV1000, which is available with 18 station at the maximum.

Symbol	Specifications	P, E port	Applicable series		
C3	One-touch fitting for ø3.2	One-touch			
C4	One-touch fitting for ø4	fitting for ø8	SV1000		
C6	One-touch fitting for ø6	IIIIIII IOI 06			
C4	One-touch fitting for ø4	One-touch			
C6	One-touch fitting for ø6		SV2000		
C8	One-touch fitting for ø8	fitting for ø10			
C6	One-touch fitting for ø6	One-touch			
C8	One-touch fitting for ø8		SV3000		
C10	One-touch fitting for ø10	fitting for ø12			
C8	One-touch fitting for ø8				
C10	One-touch fitting for ø10	One-touch			
C12	One-touch fitting for ø12	fitting for ø12			
02	Rc 1/4	Bc 3/8	SV4000		
03	Rc 3/8	nu 3/8			
02F	G 1/4	G 3/8			
03F	G 3/8				
M	A, B ports	mixed			

● A, B	port size (Inch)				
Symbol	Specifications	P, E port	Applicable series		
N1	One-touch fitting for ø1/8"	One-touch			
N3	One-touch fitting for ø5/32"	fitting for ø5/16"	SV1000		
N7	One-touch fitting for ø1/4"	Inturing for borro			
N3	One-touch fitting for ø5/32"	One-touch			
N7	One-touch fitting for ø1/4"	fitting for ø3/8"	SV2000		
N9	One-touch fitting for ø5/16"	intaing for boro			
N7	One-touch fitting for ø1/4"	One-touch			
N9	One-touch fitting for ø5/16"	fitting for ø3/8"	SV3000		
N11	One-touch fitting for ø3/8"	illuling for \$570			
N9	One-touch fitting for ø5/16"	One-touch			
N11	One-touch fitting for ø3/8"	fitting for ø3/8"			
02N	NPT 1/4	NPT 3/8	SV4000		
03N	NPT 3/8	INF I 3/8	3 4 4 0 0 0		
02T	NPTF 1/4	NPTF 3/8	]		
03T	NPTF 3/8	141 11 3/0			
M	A, B ports	mixed			


- \*In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

  \*Port sizes of X, PE port for external pilot specification (R, RS) are e4(metric), e5/32 (nch) for SV1000/2000 and Ø6 (metric) and e1/4\*(inch) for SV3000/4000.



#### **How to Order Manifold Assembly**

#### Ordering example (SV1000)

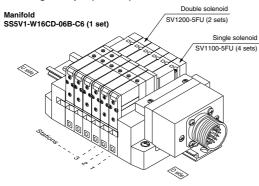


SS5V1-W16CD-06B-C6......1 set (Manifold part no.)

\* SV1100-5FU.....4 sets (Single solenoid part no.)

\* SV1200-5FU.....2 sets (Double solenoid part no.)

#### **How to Order Solenoid Valves**

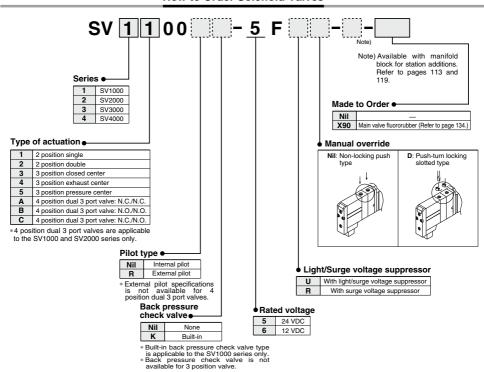

Note) Refer to Specific Product Precautions 2 on page 136.

#### **Manifold Electrical Wiring**

10C/16C Circular Conn	ector Type (26 pins)
Tem	ninal no. Polarity
Station 1 { \textstyle	(-) (+) (-) (+)
Station 2 { \frac{\frac{30\La}{50\La} \cdot 3}{\frac{30\La}{50\La} \cdot 4}	(-) (+) (-) (+)
Station 3 { Sol.a 6	(-) (+) (-) (+) (-) (+)
Station 4 { SOLb 8	
Station 5 Solb on Solb	(-) (+) (-) (+) (-) (+)
Station 6 ( SOLD 012	(-) (+) (-) (+)
Station 7 ( SOLb old	(-) (+) (-) (+)
Station 8 {	(-) (+) (-) (+)
Station 9	(-) (+) (-) (+)
Station 10 { Sola oig	(-) (+) (-) (+)
Station 11	(-) (+) (-) (+)
Sola 022 Station 12 {	(-) (+)
COM. o25 COM. o26	(+) (-) (+) (-)
	Positive Negative common common pecification specification


- This circuit has double wiring specifications for up to 12 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1→2→3→4, etc.
  Stations are counted from D side (connector side) as the 1st.
  Since solenoid valves do not have polarity, either the +COM or -COM can be used.

#### Usable No. of Solenoids

Model	Model								
Tie-rod base type 10	SV1000 to SV4000	24							
Cassette base type 16	SV1000	18							
Cassette base type 16	SV2000	24							


#### **Dimensions: SV1000 Series for Circular Connector**


- Cassette base manifold: SS5V1-W16CD-Stations B (S, R, RS) C3, N1 C4, N3 C6, N7
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

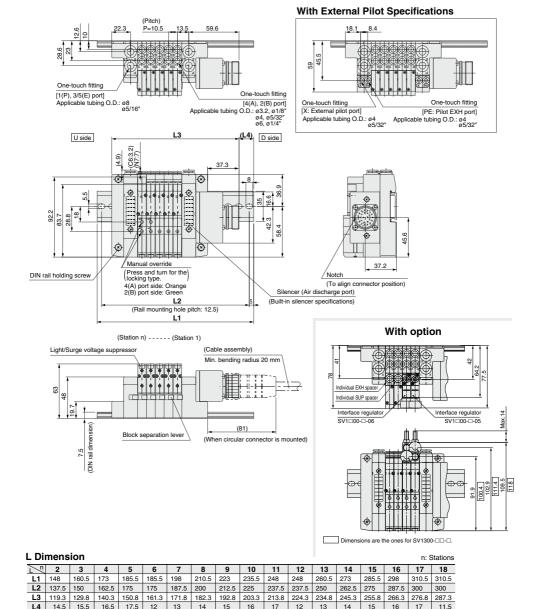



#### **Dimensions: SV2000 Series for Circular Connector**


- Cassette base manifold: SS5V2-W16CD-Stations D (S, R, RS) CS, N7 (CS, N9 CS, N9 CS,
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
     External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

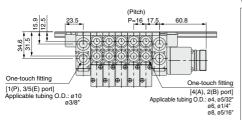

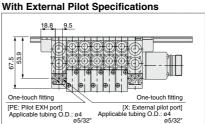

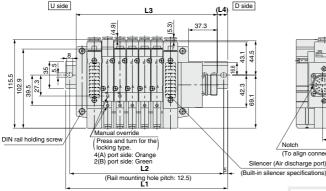

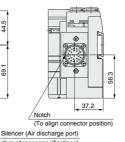

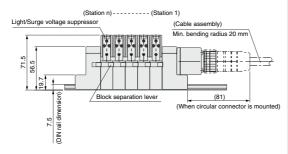

## With option Individual SUP space Interface regulator Individual EXH space SV2000-□-M1 SV2000-□-00 n: Stations

#### **L Dimension**


84

<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	185.5	198	210.5	223	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5	448
L2	150	175	187.5	200	212.5	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425	437.5
L3	135.3	151.3	167.3	183.3	199.3	215.3	231.3	247.3	263.3	279.3	295.3	311.3	327.3	343.3	359.3	375.3	391.3	407.3	423.3
L4	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5

#### **Dimensions: SV1000 Series for Circular Connector**

#### ● Tie-rod base manifold: SS5V1-W10CD-Stations D (S, R, RS)-C4, N3 (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

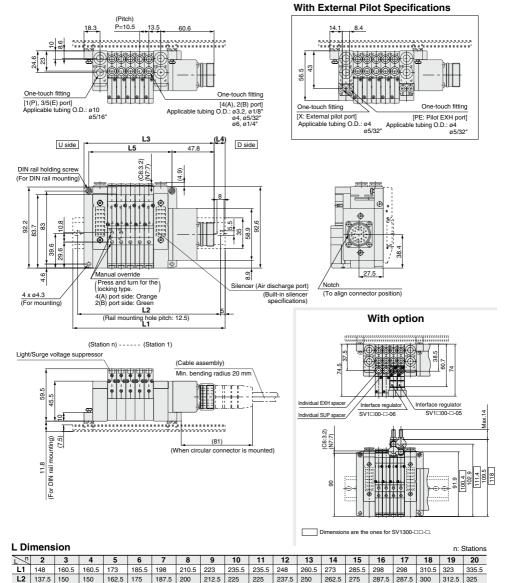

242.3

252.8 263.3 273.8

199.5 210 220.5 231 241.5 252

231.8

178.5

189.8 200.3 210.8 221.3

16.5 | 17.5 | 12.5 | 13.5 | 14.5 | 15.5 | 16.5 | 17.5 | 12 | 13 | 14 | 15

136.5 147

179.3

115.5 126

L3 116.3 126.8 137.3 147.8 158.3 168.8

**L4** 16 17

L5 63 73.5


11.5 | 12.5 | 13.5 | 14.5

94.5 105

284.3 294.8 305.3

#### **Dimensions: SV2000 Series for Circular Connector**

- Tie-rod base manifold: SS5V2-W10CD-Stations B (S, R, RS)-C6, N7 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

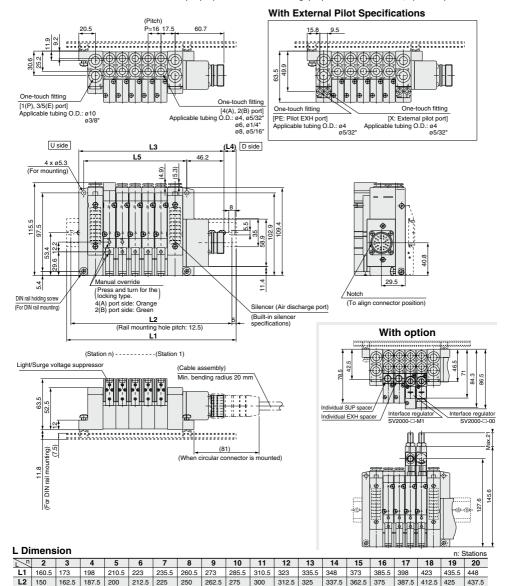

L3 132.2 148.2 164.2 180.2 196.2

14 | 12.5 | 17 | 15

80

112 | 128 | 144 | 160 | 176 | 192 | 208

276.2 292.2 308.2

240 256

324.2

340.2 356.2 372.2

16.5 | 14.5 | 13 | 17.5 | 15.5 | 14

288 304 320 336 352 368

388.2 404.2 420.2

244.2 260.2


212.2 228.2

13.5 | 11.5 | 16 | 14.5 | 12.5 | 17 | 15.5 | 13.5 | 12

#### **Dimensions: SV3000 Series for Circular Connector**

### ● Tie-rod base manifold: SS5V3-W10CD-Stations D (S, R, RS)-C6, N7 (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

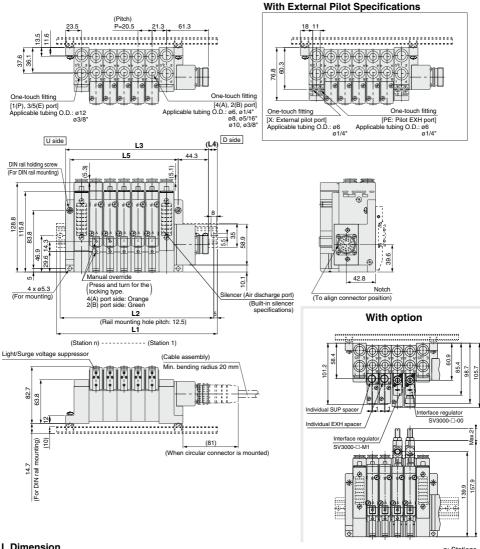


LD																Stations			
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	173	198	223	235.5	260.5	285.5	298	323	335.5	360.5	385.5	398	423	448	460.5	485.5	510.5	523	548
L2	162.5	187.5	212.5	225	250	275	287.5	312.5	325	350	375	387.5	412.5	437.5	450	475	500	512.5	537.5
L3	147.8	168.3	188.8	209.3	229.8	250.3	270.8	291.3	311.8	332.3	352.8	373.3	393.8	414.3	434.8	455.3	475.8	496.3	516.8
L4	12.5	15	17	13	15.5	17.5	13.5	16	12	14	16.5	12.5	14.5	17	13	15	17.5	13.5	15.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

#### **Dimensions: SV4000 Series for Circular Connector**

## Tie-rod base manifold: SS5V4-W10CD Stations B OS, R, RS OS, C12, N11 OS, C12,

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

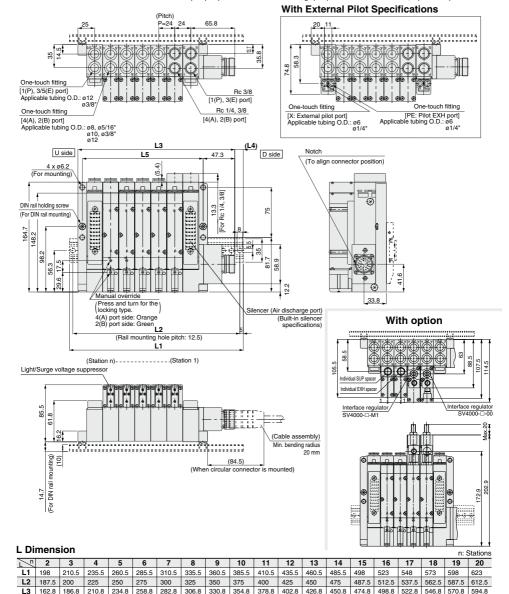

17.5 12

109 133 157 181 205 229 253 277 301

12.5 13

13.5 14

14.5 15

16.5 17


349 373

17.5 11.5 12 12.5 13 13.5 14

421 445 469 493 517 541

15.5 16

# **D-sub Connector**

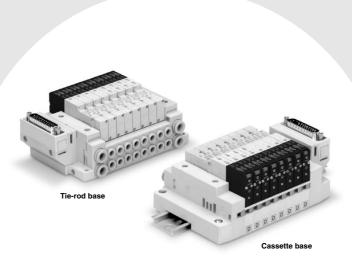


Amalianta ancian	Cassette base manifold SV1000/SV2000
Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	Number of connectors: 25 pins     MIL-C-24308 Conforming to JIS-X-5101

## **D-sub Connector** SV Series



#### How to Order Manifold

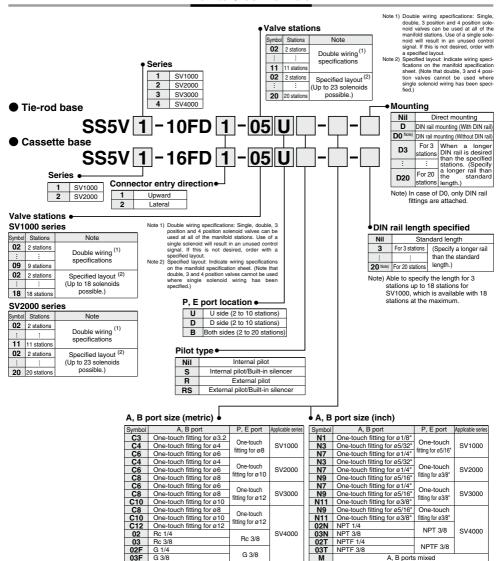

<sup>\*</sup> In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

M


90




A. B ports mixed

Port sizes of X, PE port for external pilot specifications (R, RS) are ø4 (metric), ø5/32" (inch) for SV1000/2000 and ø6 (metric) and ø1/4" (inch) for SV3000/4000.

#### **How to Order Manifold Assembly**

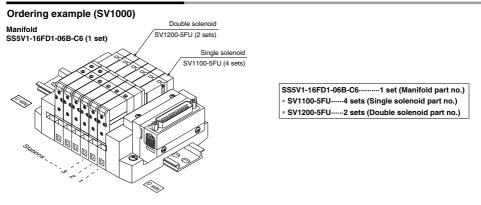

#### **How to Order Solenoid Valves**

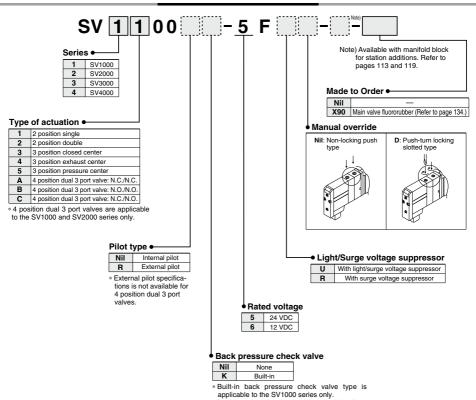


<sup>\*</sup> Back pressure check valve is not available for 3 position valve.

Note) Refer to Specific Product Precautions 2 on page 136.



#### **Manifold Electrical Wiring**

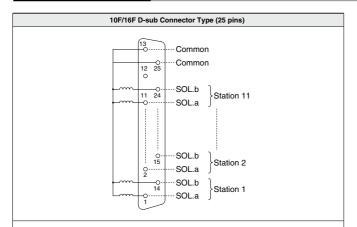


- •This circuit has double wiring specifications for up to 11 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL.A. Furthermore, when wiring is specified on the manifold specification sheet, connections are made without skipping any connectors, and signals A for single and A, B for double are in order 1 → 14 → 2 → 15, etc.
- Stations are counted from D side (connector side) as the 1st.
- Since solenoid valves do not have polarity, either the +COM or -COM can be used.

#### Usable No. of Solenoids

Couple Her of Colonelae											
Model	Max. no. of solenoids										
	SV1000										
Tie-rod base type 10	to	23									
	SV4000										
Cassatta basa tima 16	SV1000	18									
Cassette base type 16	SV2000	23									

#### Dimensions: SV1000 Series for D-sub Connector


- Cassette base manifold: SS5V1-16FD2-StationsD (S, R, RS)-C3, N1
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

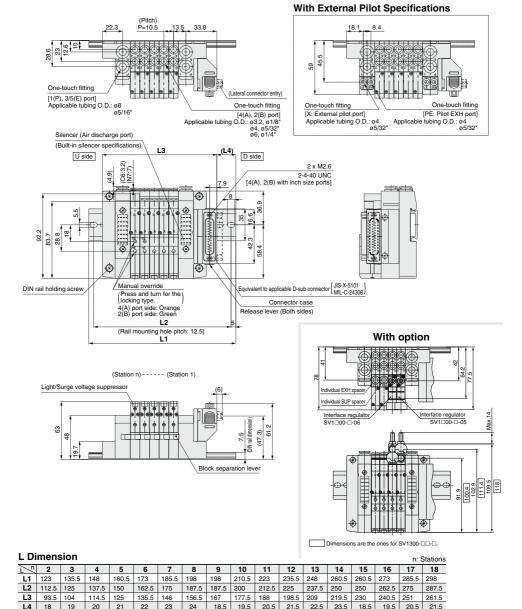



#### **Dimensions: SV2000 Series for D-sub Connector**


- Cassette base manifold: SS5V2-16FD½- Stations B (S, R, RS) C6, N7 (C8, N9 C8, N9 C8
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
     External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

#### (Pitch) Lateral connector entry) One-touch fitting One-touch fitting [1(P), 3/5(E) port] Applicable tubing O.D.: ø10 [4(A), 2(B) port] Applicable tubing O.D.: ø4, ø5/32 ø6, ø1/4" ø3/8 g8 g5/16

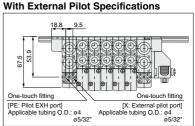

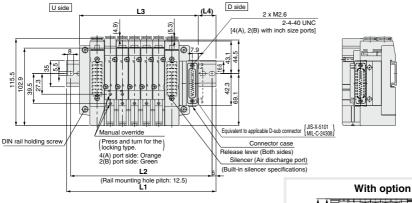

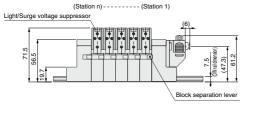

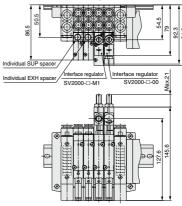


#### Dimension

LD	n: Station:															Stations			
$\overline{\mathbb{Z}}$	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
14	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22

#### **Dimensions: SV1000 Series for D-sub Connector**


- Tie-rod base manifold: SS5V1-10FD2 Stations D (S, R, RS)- C3, N1 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
     External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

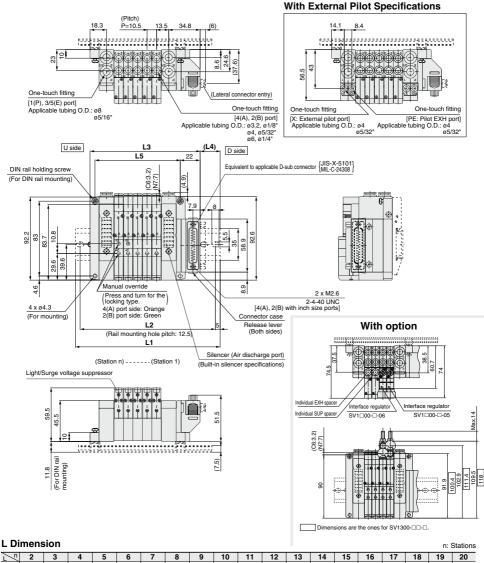


23	210.5	040 5										20
		210.5	223	235.5	235.5	248	260.5	273	285.5	298	310.5	310.5
12	200	200	212.5	225	225	237.5	250	262.5	275	287.5	300	300
85	174.5	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
22	21	21	22	23	18	19	20	21	22	23	24	18.5
57	147	147	157.5	168	178.9	189	199.5	210	220.5	231	241.5	252
85 22	174.5 21	174.5 21	185 22	195.5 23	206 18	216.5 19	227 20	237.5 21	2	248 22	248 258.5 22 23	248 258.5 269 22 23 24

#### **Dimensions: SV2000 Series for D-sub Connector**

- Tie-rod base manifold: SS5V2-10FD21 Stations B CS, R, RS)- C6, N3 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

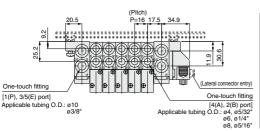


# With External Pilot Specifications 15.8 9.5 One-touch fitting PE: Pilot EXH port| Applicable tubing 0.D.: 04 e5/32" | PE: Pilot EXH port| | Applicable tubing 0.D.: 04 e5/32"

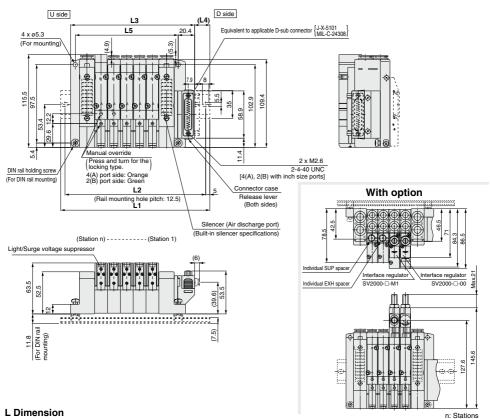

#### Dimensions: SV3000 Series for D-sub Connector


- Tie-rod base manifold: SS5V3-10FD2 Stations B (S, R, RS)- C6, N7 (C9, N1) (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
     External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

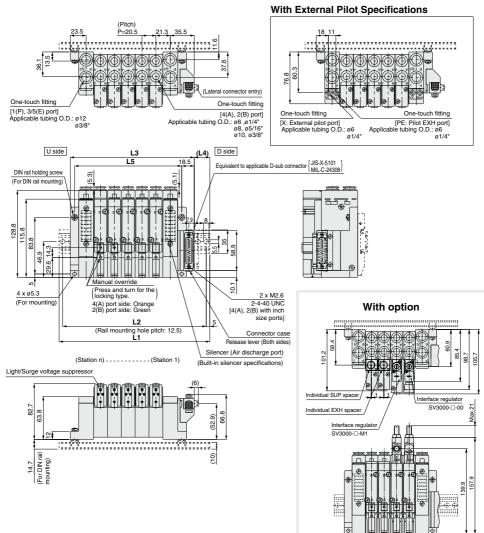


L Dimension n: Stations																			
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2	150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3	122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
L4	22.5	18.5	20.5	23	19	21	23.5	19.5	21.5	24	20	22	18	20.5	22.5	18.5	21	23	19
15	97	1175	138	158 5	170	100 5	220	240.5	261	281 5	302	322.5	3/13	363.5	384	404.5	425	445.5	466

#### **Dimensions: SV4000 Series for D-sub Connector**

- Tie-rod base manifold: SS5V4-10FD $_2^1$  Stations  $_B^0$  (S, R, RS)-  $_{03}^{02}$  ( $_{C10}^{C8}$ , N1 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

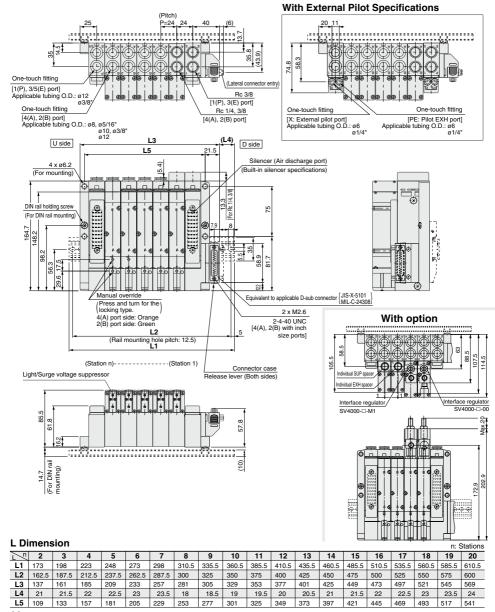


# Flat Ribbon Cable Connector

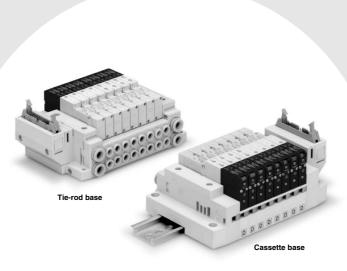

Analiashla assisa	Cassette base manifold SV1000/SV2000
Applicable series	Tie-rod base manifold SV1000/SV2000/SV3000/SV4000
	Number of connectors: 26, 20, 10 pins     With strain relief     Conforming to MIL-C-83503

# Flat Ribbon Cable Connector **SV Series** ( E CA CAN US

### **How to Order Manifold**

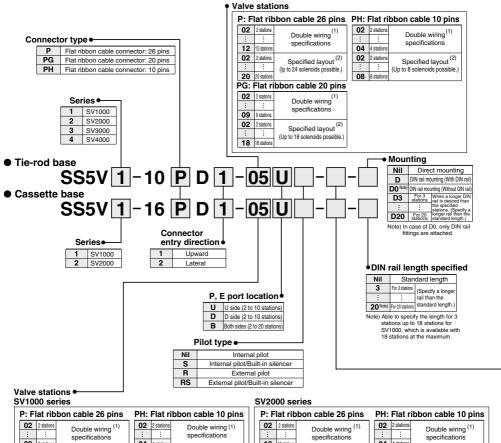

#### 09 9 stations 04 4 station 02 2 stations 02 2 stations Specified layout (2) Specified layout (2) (Up to 18 solenoids possible.) (Up to 8 solenoids possible.) 08 8 statio 18 18 station PG: Flat ribbon cable 20 pins 02 2 stations Double wiring (1) specifications

Note 1) Double wiring specifications: Single, double, 3 and 4 position solenoid valves can be
used on all manifold stations. Use of a single solenoid will result in an unused control
signal. If this is not desired, order with a specified layout.

Specified layout (2) (Up to 18 solenoids possible.)

): F	lat rib	bon cable 26 pins	PH:	Flat r	ibbon cable 10 pins
02	2 stations	Double wiring (1)	02	2 stations	Double wiring (1)
:	::	specifications	:	:	specifications
12	12 stations		04	4 stations	
02	2 stations	Specified layout (2)	02	2 stations	Specified layout (2)
:	:	(Up to 24 solenoids possible.)	:	1	(Up to 8 solenoids possible.)
20	20 stations		08	8 stations	
<u> </u>	<b>=</b> : :			_	
ru:	Flat r	ibbon cable 20 pins	i		
02	2 stations	· · · · · · · · · · · · · · · · · · ·	; 		
	_	Double wiring <sup>(1)</sup>			
	_	· · · · · · · · · · · · · · · · · · ·			
02 :	2 stations	Double wiring (1) specifications			
02 : 09	2 stations ÷ 9 stations	Double wiring <sup>(1)</sup>			


Note 2) Specified layout: Indicate wiring specifications on a manifold specification sheet.
(Note that double, 3 and 4 position valves cannot be used where single solenoid wiring has been specified.)



09 9 stations 02 2 stations

**18** 18 stations

### How to Order Valve Manifold Assembly

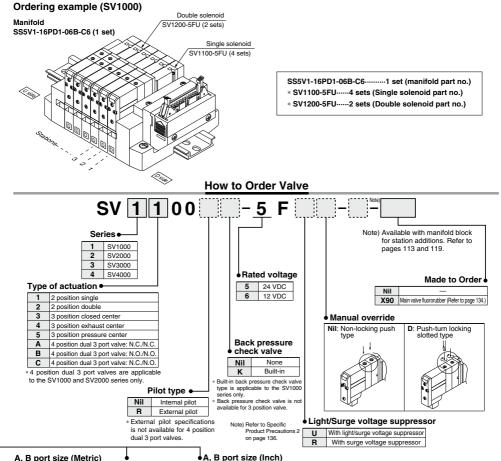

A, B p	ort size (Metric)	•		●A, B	port size (I
Symbol	A, B port	P, E port	Applicable series	Symbol	A, B po
C3	One-touch fitting for ø3.2			N1	One-touch fitti
C4	One-touch fitting for ø4	One-touch	SV1000	N3	One-touch fittir
C6	One-touch fitting for ø6	fitting for ø8		N7	One-touch fitti
C4	One-touch fitting for ø4			N3	One-touch fitting
C6	One-touch fitting for ø6	One-touch fitting for ø10	SV2000	N7	One-touch fitti
C8	One-touch fitting for ø8	Illuriy Ioi & Io		N9	One-touch fitti
C6	One-touch fitting for ø6			N7	One-touch fitti
C8	One-touch fitting for ø8	One-touch fitting for ø12	SV3000	N9	One-touch fitti
C10	One-touch fitting for ø10	Illuling for \$12		N11	One-touch fitti
C8	One-touch fitting for ø8			N9	One-touch fitti
C10	One-touch fitting for ø10	One-touch fitting for ø12		N11	One-touch fitti
C12	One-touch fitting for ø12	Illuling for \$12		02N	NPT 1/4
02	Rc 1/4	D- 0/0	SV4000	03N	NPT 3/8
03	Rc 3/8	Rc 3/8		02T	NPTF 1/4
02F	G 1/4	0.0/0		03T	NPTF 3/8
03F	G 3/8	G 3/8		M	

A, B ports mixed


1	Symbol	A, D port	i , L poit	Applicable 36163		
1	N1	One-touch fitting for ø1/8"				
ı	N3	One-touch fitting for ø5/32"	One-touch	SV1000		
ı	N7	One-touch fitting for ø1/4"	fitting for ø5/16"			
1	N3	One-touch fitting for ø5/32"				
ı	N7	One-touch fitting for ø1/4"	One-touch fitting for ø3/8"	SV2000		
	N9	One-touch fitting for ø5/16"	Illing for \$576			
1	N7	One-touch fitting for ø1/4"				
ı	N9	One-touch fitting for ø5/16"	One-touch fitting for ø3/8"	SV3000		
	N11	One-touch fitting for ø3/8"	itting for 95/6			
1	N9	One-touch fitting for ø5/16"	One-touch			
ı	N11	One-touch fitting for ø3/8"	fitting for ø3/8"			
ı	02N	NPT 1/4	NPT 3/8	SV4000		
ı	03N	NPT 3/8	INF I 3/0	344000		
ı	02T	NPTF 1/4	NPTF 3/8			
ı	03T	NPTF 3/8	NPTF 3/8			
	M	A, B port	s mixed			
1						

P F port Applicable series

<sup>\*</sup> In the case of mixed specifications (M), indicate separately on the manifold specification sheet.

\* Port sizes of X, PE port for external pilot specification (R, RS) are ø4 (metric), ø5/32" (inch) for SV1000/2000 and ø6(metric) and ø1/4\* (inch) for SV3000/4000

### Manifold Electrical Wiring

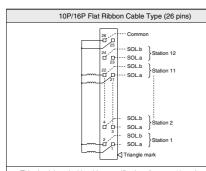


- . This circuit has double wiring specifications for up to 12 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ , etc.
- Stations are counted from D side (connector side) as the 1st one
- . Since terminal numbers are not indicated on the flat cable, use the triangle mark as a reference for wiring.

  • Since solenoid valves do not have polarity, either the +COM or -COM can
- he used

### Hankin No. of Calamaida

Usable No. of Solenolds												
Model	Max. no. of solenoids											
Tie-rod base type 10	SV1000 to SV4000	24										
Cassette base type 16	SV1000 SV2000	18										
	3 7 2 0 0 0											

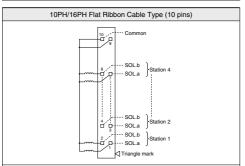

- . This circuit has double wiring specifications for up to 4 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ , etc.
  • Stations are counted from D side (connector side) as the 1st one.
- · Since terminal numbers are not indicated on the flat cable, use the triangle
- mark as a reference for wiring.


   Since solenoid valves do not have polarity, either the +COM or -COM can

### Usable No. of Solenoids

Model	Max. no. of solenoids										
	SV1000										
Tie-rod base type 10	to										
	SV4000	8									
Cassette base type 16	SV1000	1									
Casselle base type 10	SV2000										

### Common SOL.b Station 9

10PG/16PG Flat Ribbon Cable Type (20 pins)

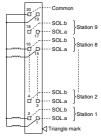

- This circuit has double wiring specifications for up to 9 stations. Since the usable number of solenoids differs depending on the manifold type, refer to the table below. In the case of single solenoids, connect to SOL. A. Furthermore, when wiring is specified on a manifold specification sheet, connections are made without skipping any connectors, and connections are made without skipping any connectors, and signals A for single and A, B for double are in order  $1 \rightarrow 2 \rightarrow 3 \rightarrow 4$ , etc.
- Stations are counted from D side (connector side) as the 1st one.
- . Since terminal numbers are not indicated on the flat cable, use the triangle
- mark as a reference for wiring.


   Since solenoid valves do not have polarity, either the +COM or -COM can

### he used

Usable No. of Solenoids											
Model		Max. no. of solenoids									
	SV1000										
Tie-rod base type 10	to										
	SV4000	18									
Cassette base type 16	SV1000										
Casselle base type 10	SYZOOO	7									

### **Dimensions: SV1000 Series for Flat Ribbon Cable**

- Cassette base manifold : SS5V1-16 PG D1-Stations C(S, R, RS)-C3, NT
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

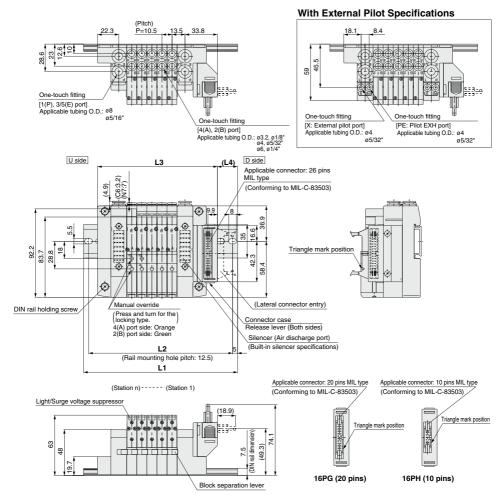

Refer to page 93 (compliant for D-sub connector) for dimensions with interface regulator and individual SUP/EXH spacer.

L Di	L Dimension n : Statio															Stations	
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298
L2	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5
L3	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5	251	261.5
L4	24.5	19	20	21	22	23	24	19	20	21	22	23	24	18.5	19.5	20.5	21.5


### SV Series


### **Dimensions: SV2000 Series for Flat Ribbon Cable**


- ullet Cassette base manifold : SS5V2-16 $^{p_G}_{p_H}D^1_2$ - $\underline{\text{Stations}}^{\text{U}}_{p}(\text{S},\,\text{R},\,\text{RS})$ - $^{\text{C4},\,\text{N3}}_{\text{C8},\,\text{Nq}}$ 
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

# One-touch fitting [1(P), 3/5(E) port] Applicable tubing O.D.: e10 e3/8\* One-touch fitting [4(A), 2(B) port] Applicable tubing O.D.: e4, e5/32\* e8, e5/16\* e8, e5/16\*

# With External Pilot Specifications 18.8 9.5 One-louch fitting [PE: Pilot EXH port] Applicable tubing O.D. e4 e5/32\*

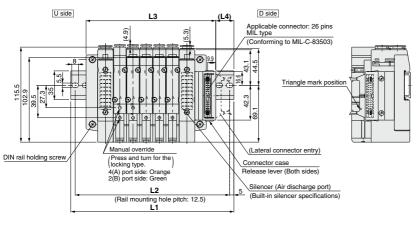

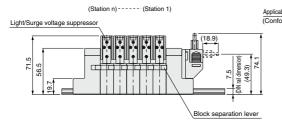

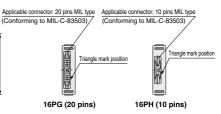

Refer to page 93 (compliant for D-sub connector) for dimensions with interface regulator and individual SUP/EXH spacer.

n . Ctations


### L Dimension


	- Differision															Stations			
<u></u>	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5	398	423	435.5
L2	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375	387.5	412.5	425
L3	109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5	285.5	301.5	317.5	333.5	349.5	365.5	381.5	397.5
L4	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	24	22.5


### **Dimensions: SV1000 Series for Flat Ribbon Cable**


### ● Tie-rod base manifold : SS5V1-10 PG D2-Stations CS, R, RS)-C3, NT (-D)

- When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
- External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

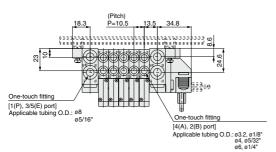

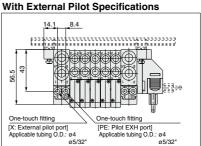

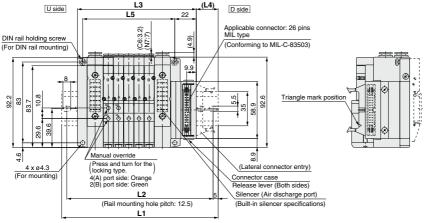

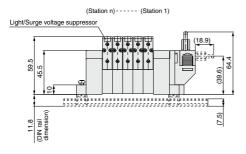

Applicable connector: 10 pins MIL type (Conforming to MIL-C-83503)

Triangle mark position

10PG (20 pins)

Applicable connector: 10 pins MIL type (Conforming to MIL-C-83503)

Triangle mark position


Refer to page 93 (compliant for D-sub connector) for dimensions with interface regulator and individual SUP/EXH spacer.


L DI	_ Dimension n : Station															Stations			
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	248	260.5	273	285.5	298	310.5	310.5
L2	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	237.5	250	262.5	275	287.5	300	300
L3	90.5	101	111.5	122	132.5	143	153.5	164	174.5	185	195.5	206	216.5	227	237.5	248	258.5	269	279.5
L4	19.5	20.5	21.5	22.5	23.5	18.5	19.5	20.5	21.5	22.5	23.5	24.5	19	20	21	22	23	24	19
L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252


### SV Series


### **Dimensions: SV2000 Series for Flat Ribbon Cable**

- Tie-rod base manifold : SS5V2-10 $_{pq}^{PG}$  D<sub>2</sub><sup>1</sup>-Stations</sup>  $_{p}^{U}$  (S, R, RS)- $_{C6,N9}^{C4,N3}$  (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

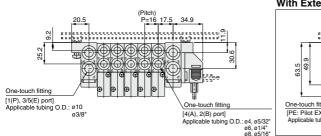

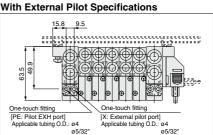

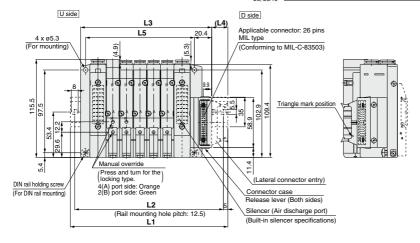

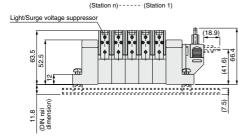

Applicable connector: 20 pins MIL type
(Conforming to MIL-C-83503)

Triangle mark position

10PG (20 pins)

Applicable connector: 10 pins MIL type
(Conforming to MIL-C-83503)


Triangle mark position

Refer to page 96 (compliant for D-sub connector) for dimensions with interface regulator and individual SUP/EXH spacer.

L DI	L Dimension n : Station															Stations			
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5
L2	137.5	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425
L3	106.4	122.4	138.4	154.4	170.4	186.4	202.4	218.4	234.4	250.4	266.4	282.4	298.4	314.4	330.4	346.4	362.4	378.4	394.4
L4	24	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22	20	18.5	23	21	19.5	24
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

### **Dimensions: SV3000 Series for Flat Ribbon Cable**


- Tie-rod base manifold: SS5V3-10 PG D12-Stations PG (S, R, RS)-C6, NO (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
  - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

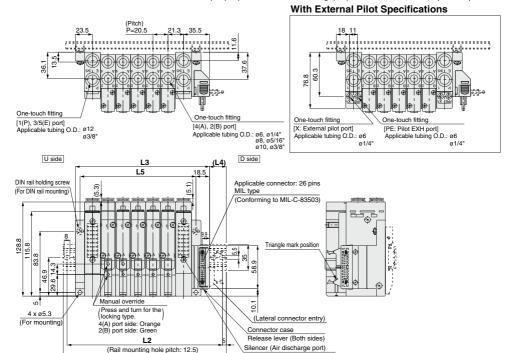


(Built-in silencer specifications)



L1

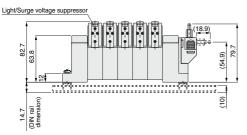

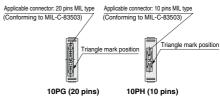


Refer to page 97 (compliant for D-sub connector) for dimensions with interface regulator and individual SUP/EXH spacer.

L Di	L Dimension n : Stations																		
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	160.5	173	198	223	235.5	260.5	285.5	298	323	348	360.5	385.5	398	423	448	460.5	485.5	510.5	523
L2	150	162.5	187.5	212.5	225	250	275	287.5	312.5	337.5	350	375	387.5	412.5	437.5	450	475	500	512.5
L3	122	142.5	163	183.5	204	224.5	245	265.5	286	306.5	327	347.5	368	388.5	409	429.5	450	470.5	491
L4	22.5	18.5	21	23	19	21.5	23.5	19.5	22	24	20	22.5	18.5	20.5	23	19	21	23.5	19.5
L5	97	117.5	138	158.5	179	199.5	220	240.5	261	281.5	302	322.5	343	363.5	384	404.5	425	445.5	466

### SV Series


### **Dimensions: SV4000 Series for Flat Ribbon Cable**


- Tie-rod base manifold : SS5V4-10 $_{pq}^{P_0}$   $D_2^1$   $\underline{Stations}_{B}^{U}$  (S, R, RS)- $\frac{02}{03}$   $\frac{CB_0}{C112}$  N11 (-D)
  - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
     External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

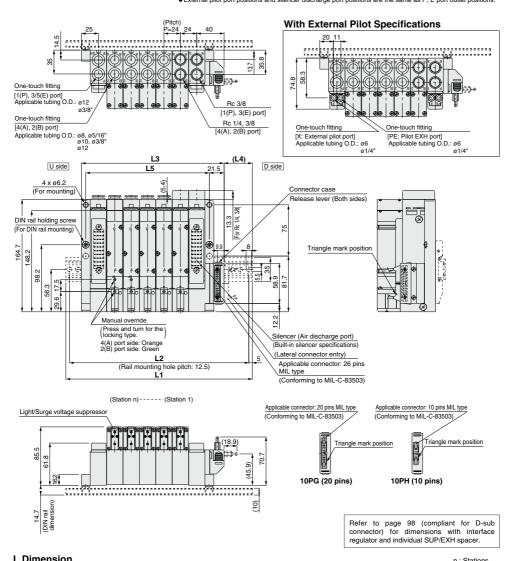

	n : Stations																		
	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	185.5	210.5	235.5	260.5	285.5	310.5	335.5	348	373	398	423	448	473	498	523	548	573	598	623
L2	175	200	225	250	275	300	325	337.5	362.5	387.5	412.5	437.5	462.5	487.5	512.5	537.5	562.5	587.5	612.5
L3	137	161	185	209	233	257	281	305	329	353	377	401	425	449	473	497	521	545	569
L4	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5	31.5
L5	109	133	157	181	205	229	253	277	301	325	349	373	397	421	445	469	493	517	541


Type 16: Cassette Base Manifold Exploded View

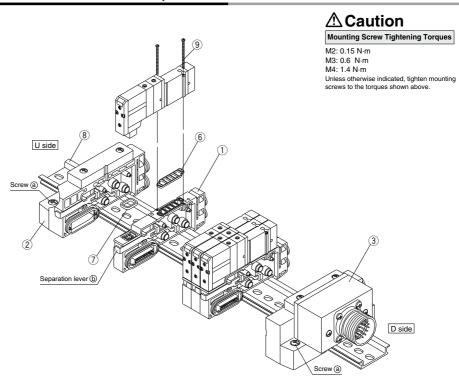

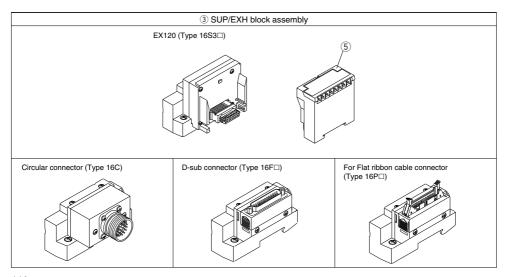

### 1) Manifold Block Assembly Part No.

	<b>-</b>								
Series	Wiring specifications	Manifold block assembly part no.	Note						
SV1000	Single	SV1000-50-3A-□□	C3: With One-touch fitting for ø3.2 N1: One-touch fitting for ø1/8" C4: With One-touch fitting for ø4 N3: One-touch fitting for ø5/32"						
	Double	SV1000-50-4A-□□	C6: With One-touch fitting for ø6 N7: One-touch fitting for ø1/4" (Gaskets ⑥ and ⑦ are included.)						
SV2000	Single	SV2000-50-3A-□□	C4: With One-touch fitting for ø4 N3: One-touch fitting for ø5/32" C6: With One-touch fitting for ø6 N7: One-touch fitting for ø1/4" C8: With One-touch fitting for ø8 N9: One-touch fitting for ø5/16" (Gaskets ⑥ and ⑦ are included.)						
SV2000	Double	SV2000-50-4A-□□							

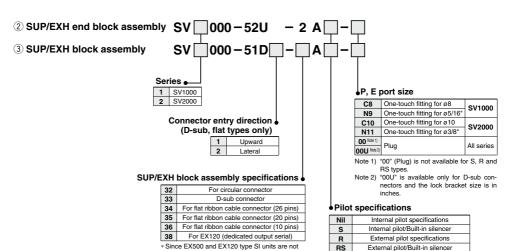

No.	Description	Par	t no.	Note	
INO.	Description	SV1000	SV2000		
(5)	EX120 series SI unit	Refer to	page 70.		
6	Gasket	SX3000-57-4	SX5000-57-6		
7	Connector gasket	SX3000	0-146-2		
(8)	DIN rail	VZ1000-11-1-□		Refer to DIN rail dimension tables on page 123.	
9	Round head combination screw	SX3000-22-2 (M2 x 24) Tightening torque: 0.16 N·m	SV2000-21-1 (M3 x 30) Tightening torque: 0.8 N·m		


included, order them separately.

**SMC** 

### Type 16: Cassette Base Manifold

### How to increase manifold bases (Type 16)

- (1) Loosen the screws (a) (2 pcs. on one side) that hold the manifold base onto the DIN rail. (When removing the manifold base from the DIN rail, loosen the holding screws at four locations.)
- (2) Using a flat head screwdriver, etc., pull the lever (b) forward on the manifold block assembly where a station is to be added, and disconnect the manifold block assemblies.
- (3) Attach the manifold block assembly to be added to the DIN rail as shown in the figure.

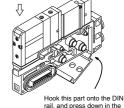

direction of the arrow.

Figure. Block mounting procedure

- (4) Connect the block assemblies by pressing them together, and push the lever (b) in firmly until it stops.
  - Then secure them to the DIN rail by tightening the screws (a).

**△ Caution** (Tightening torque: 1.4 N·m)

### **⚠** Caution

### Fitting assembly replacement

By replacing manifold fitting assemblies, it is possible to change the size of the A, B ports and P, E ports. To replace them, Remove the clip with a flat head screwdriver, etc., and pull out the fitting assembly. Mount the new fitting assembly by inserting it and then replacing the clip to list fully inserted position.


### Fitting Assembly Part No.

	Port size	SV1000	SV2000	
	One-touch fitting for ø3.2	VVQ1000-50A-C3	_	
	One-touch fitting for ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	
L	One-touch fitting for ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	
Port	One-touch fitting for ø8	_	VVQ1000-51A-C8	
m,	One-touch fitting for ø1/8"	VVQ1000-50A-N1	_	
Ą	One-touch fitting for ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	
	One-touch fitting for ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	
	One-touch fitting fo ø5/16"	_	VVQ1000-51A-N9	
t	One-touch fitting for ø8	VVQ1000-51A-C8	_	
Port	One-touch fitting for ø10	_	VVQ2000-51A-C10	
Р, П	One-touch fitting for ø5/16"	VVQ1000-51A-N9	_	
	One-touch fitting for ø3/8"	_	VVQ2000-51A-N11	



Note 2) When removing a fitting assembly from a valve, after removing the clip, attach tubing or a plug (KQ2P-□□) to the One-touch fitting, and pull it out while holding the tubing (or plug). If it is pulled out while holding the release button of the fitting assembly (resin part), the release button may be damaged.


Note 3) Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any

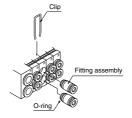

### ■ How to order cassette base type 16 solenoid valves with manifold block

### [SV1000/SV2000 Series]

• Type with manifold block is used when adding stations, etc.

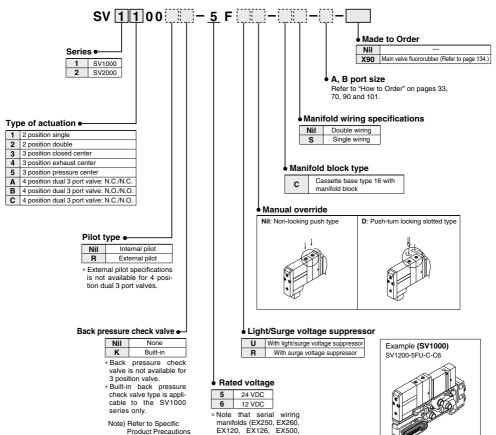



EX600) and PC wiring are

only available with 24 VDC.

2 on page 136.


Type 10: Tie-rod Base Manifold Exploded View

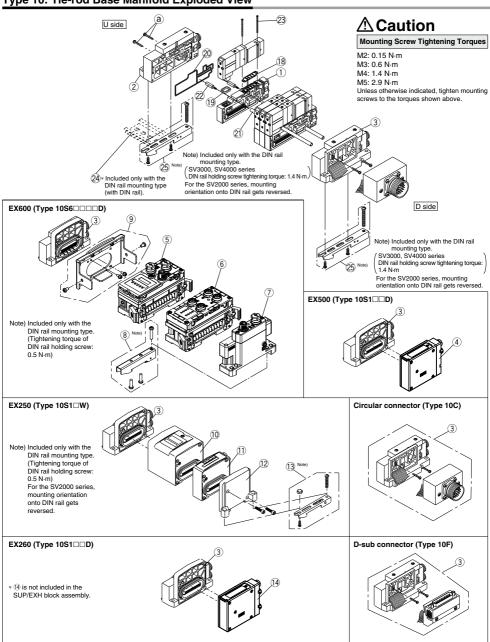

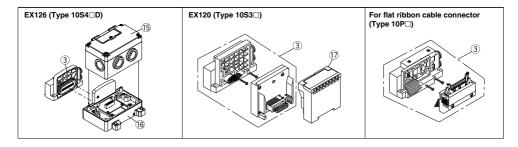

1 Manifold Block Assembly Part No.

Series	Wiring specifications	Manifold block assembly part no.	Note					
	Single	SV1000-50-1A-□□	C3: With ø3.2 One-touch fitting N1: ø1/8" One-touch fitting C4: With ø4 One-touch fitting N3: ø5/32" One-touch fitting					
SV1000	Double	SV1000-50-2A-□□	C6: With ø6 One-touch fitting N7: ø1/4" One-touch fitting (Tie-rod for station additions @ and gaskets (3), (9), and (2) are included.)					
SV2000	Single	SV2000-50-1A-□□	C4: With ø4 One-touch fitting N3: ø5/32" One-touch fitting C6: With ø6 One-touch fitting N7: ø1/4" One-touch fitting					
	Double	SV2000-50-2A-□□	C8: With ø8 One-touch fitting N9: ø5/16" One-touch fitting (Tie-rod for station additions ② and gaskets ③, ④, and ② are included.)					
SV3000	Single SV3000-50-1A-□□		C6: With ø6 One-touch fitting N7: ø1/4" One-touch fitting C8: With ø8 One-touch fitting N9: ø5/16" One-touch fitting					
3 7 3000	Double	SV3000-50-2A-□□	C10: With ø10 One-touch fitting N11: ø3/8" One-touch fitting (Tie-rod for station additions ② and gaskets ③, ④, and ② are included.)					
SV4000	Single SV4000-50-1A-□□		C8: With ø8 One-touch fitting N9: ø5/16" One-touch fitting C10: With ø10 One-touch fitting N11: ø3/8" One-touch fitting C12: With ø12 One-touch fitting O2: Rc 1/4 O2N: NPT 1/4					
	Double	SV4000-50-2A-□□	03: Rc 3/8 03N: NPT 3/8 02F: G1/4 02T: NPTF1/4 03F: G3/8 03T: NPTF 3/8 (Tie-rod for station additions ② and gaskets ③, ④, and ② are included.					

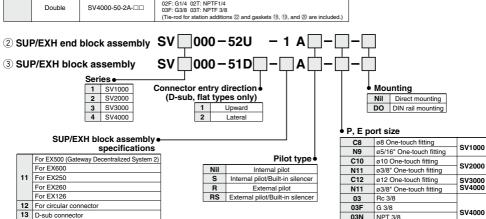

18 For EX120 (dedicated output serial) Since EX500, EX600, EX250, EX260, EX126 and EX120 type SI units are not included, order them separately

14 For flat ribbon cable connector (26 pins)

15 For flat ribbon cable connector (20 pins)

16 For flat ribbon cable connector (10 pins)

00U Note 2) Note 1) "00" (Plug) is not available for S, R and RS types. Note 2) "00U" is available only for D-sub connectors and the lock bracket size is in inches.

03N

03T

00 Note 1) Plug

NPT 3/8

NPTF 3/8



### **SV** Series

Type 10: Tie-rod Base Manifold Exploded View

о.	Description	SV1000		t no. SV3000	SV4000	Note
	500 series SI unit	SV1000	SV2000	SV3000	SV4000	
· EA	500 series 51 unit		Refer to page 28. EX600-SDN1A			Gateway Decentralized System 2 (128 poil DeviceNet® PNP (Negative common)
						DeviceNet® PINP (Negative common)
			EX600-SDN2A			DeviceNet® NPN (Positive common)
			EX600-SMJ1			CC-Link PNP (Negative common)
			EX600-SMJ2		_	CC-Link NPN (Positive common)
			EX600-SPR1A		_	PROFIBUS DP PNP (Negative common)
			EX600-SPR2A		_	PROFIBUS DP NPN (Positive common)
			EX600-SEN3		_	EtherNet/IP™ (2 port) PNP (Negative comm
EX	600 series SI unit		EX600-SEN4		_	EtherNet/IP™ (2 port) NPN (Positive comm
-/"	000 001100 01 01111		EX600-SPN1		_	PROFINET PNP (Negative common)
			EX600-SPN2		_	PROFINET NPN (Positive common)
		l l	X600-WEN1 Note 2	2)	_	Wireless base module EtherNet/IP™ PNP (Negative comr
			X600-WEN2 Note 2	2)	_	Wireless base module EtherNet/IP™ NPN (Positive comr
			EX600-WPN1 Note 2	2)	_	Wireless base module PROFINET PNP (Negative com
			EX600-WPN2 Note 2	2)	_	Wireless base module PROFINET NPN (Positive comi
			EX600-WSV1 Note 2	2)	_	Wireless remote module PNP (Negative comn
			EX600-WSV2 Note 2	2)	_	Wireless remote module NPN (Positive comm
+-			EX600-DXNB	-		NPN input M12 connector 5 pins (4 pcs.) 8 in
			EX600-DXNB			PNP input M12 connector 5 pins (4 pcs.) 8 in
				-		
			EX600-DXNC			NPN input M8 connector 3 pins (8 pcs.) 8 inp
			EX600-DXNC1			NPN input M8 connector 3 pins (8 pcs.) 8 inputs, with open circuit det
1			EX600-DXPC			PNP input M8 connector 3 pins (8 pcs.) 8 in
	X600 series digital input EX600-DXPC1				_	PNP input M8 connector 3 pins (8 pcs.) 8 inputs, with open circuit det
uni	it		EX600-DXND		_	NPN input M12 connector 5 pins (8 pcs.) 16 in
			EX600-DXPD		_	PNP input M12 connector 5 pins (8 pcs.) 16 in
	İ		EX600-DXNE		_	NPN input D-sub connector 25 pins 16 in
1			EX600-DXPE		_	PNP input D-sub connector 25 pins 16 in
			EX600-DXNF		_	NPN input spring type terminal block 32 pins 16 in
			EX600-DXPF		_	PNP input spring type terminal block 32 pins 16 in
		EX600-DYNB			_	NPN output M12 connector 5 pins (4 pcs.) 8 out
			EX600-DYPB			
EV	COO comico dimital customest					PNP output M12 connector 5 pins (4 pcs.) 8 out
	600 series digital output		EX600-DYNE			NPN output D-sub connector 25 pins 16 out
uni	it	EX600-DYPE			_	PNP output D-sub connector 25 pins 16 out
			EX600-DYNF		_	NPN output spring type terminal block 32 pins 16 ou
			EX600-DYPE		_	PNP output spring type terminal block 32 pins 16 out
			EX600-DMNE		_	NPN input/output D-sub connector 25 pins 8 inputs/ou
EX	600 series digital input/	EX600-DMPE			_	PNP input/output D-sub connector 25 pins 8 inputs/out
	tput unit	EX600-DMNF			_	NPN input/output spring type terminal block 32 pins 8 inputs/or
	-	EX600-DMPF			_	PNP input/output spring type terminal block 32 pins 8 inputs/ou
EX	600 series analog input unit		EX600-AXA		_	M12 connector 5 pins (2 pcs.), 2-channel in
	600 series analog output unit		EX600-AYA		_	M12 connector 5 pins (2 pcs.), 2-channel ou
	00 series analog input/output unit		EX600-AMB		_	M12 connector 5 pins (4 pcs.), 2-channel input/or
	oo oonoo analog inpatioalpat anii		EX600-ED2		_	M12 power supply connector, B-coded
			EX600-ED2-2		_	M12 power supply connector, B-coded, with DIN rail mounting by
			EX600-ED3			
					_	7/8 inch power supply connector
End	d plate for EX600 series		EX600-ED3-2			7/8 inch power supply connector, with DIN rail mounting br
			EX600-ED4		_	M12 power supply connector IN/OUT, A-coded, Pin arrangen
			EX600-ED4-2		_	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1, with DIN rail mounting
			EX600-ED5		_	M12 power supply connector IN/OUT, A-coded, Pin arrangen
			EX600-ED5-2		_	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2, with DIN rail mounting
	amp assembly for EX600		EX600-ZMA2			With mounting screws (M4 x 20 1 pc., M4 x 12 2)
Val	ive plate for EX600		EX600-ZMV1			Enclosed parts: round head screws (M4 x 6) 2 pcs., round head screws (M3 x 8
	250 series SI unit		Refer to page 42.		_	M12, 2 inputs
			EX250-IE1		_	M12, 4 inputs
EX	250 series input block		EX250-IE2		_	M8, 4 inputs (3 pins)
			EX250-IE3		_	With mounting screws (M3 x 10, 2 pcs.)
EX2	250 series end plate assembly		EX250-EA1			Trial modifing screws (Wo x 10, 2 pos.)
	r EX250 clamp assembly		SV1000-78A		<del>-</del>	
	260 series SI unit					
			Refer to page 58.			
	126 series SI unit		Refer to page 64.			F
	rminal block plate		VVQC1000-74A-2			For mounting EX126 SI unit
EX1	120 series SI unit		Heter to	page 70.	1	
	sket	SX3000-57-4	SX5000-57-6	SX7000-57-5	SY9000-11-2	
	nnector gasket	SX3000-146-2	SX3000-146-2	SX3000-146-2	SX3000-146-2	
	nifold block gasket	SX3000-181-1	SX5000-138-1	SV3000-65-1	SV4000-65-2	
	-rod	SV1000-55-1-	SV2000-55-1-	SV3000-55-1-	SV4000-55-1-	□□: Manifold stations
	-rod for station addition	SV1000-55-2-1	SV2000-55-2A	SV3000-55-2A	SV4000-55-2A	
Pou	und head combination screw			SV3000-21-1 (M4 x 35)		
	lve mounting screw)			Tightening torque: 1.4 N-m		
	V rail	VZ1000-11-1-□		VZ1000-11-4-□		Refer to DIN rail dimension tables on page 1
		v∠1000-11-1-□	VZ1000-11-1-	v∠1000-11-4-⊔		nelei to Din raii dimension tables on page 1
- Cla	amp assembly amp assembly for EX600	SV1000-69A	SV1000-69A SV2000-75A	SV3000-69A	SV3000-69A	
Ola						

Note 1) Two pieces of 👰 and 🖄 (tie-rod) are required for the SV1000 series, and three pieces are required for the SV2000, 3000 and 4000 series. Two pieces of 🖄 (valve mounting screw) are required for the SV1000, 2000 and 3000 series, and three pieces are required for the SV4000 series. Note 2) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

### Type 10: Tie-rod Base Manifold

### How to increase manifold bases (Type 10)

(1) Loosen the U side screws (a), and remove the SUP/EXH end block assembly (2).

(2) Screw in the tie-rods (14) for station addition.

(Screw them in until there is no gap between the tie-rods.)

Tie-rod for station addition

(3) Connect the manifold assembly ① and supply/exhaust end block assembly ② to be added and tighten the screws ③.

**▲ Caution** Tightening torques ⓐ

SV1000, SV2000 0.6 N·m SV3000 1.4 N·m SV4000 2.9 N·m

Note) When eliminating manifold stations, the appropriate tie-rods (3) for the desired change should be ordered separately. (When equipped with a DIN rail, be sure to tighten the DIN rail holding screws after tightening the tension bolts.)

### 

### **Fitting Assembly Replacement**

By replacing manifold fitting assemblies, it is possible to change the size of the A, B ports and P, E ports. To replace them, remove the clip with a flat head screwdriver, etc., and pull out the fitting assembly.

Mount the new fitting assembly by inserting it and then replacing the clip to its fully inserted position.

### Fitting Assembly Part No.

Port size		SV1000	SV2000	SV3000	SV4000	
	One-touch fitting for ø3.2	VVQ1000-50A-C3		_	_	
	One-touch fitting for ø4	VVQ1000-50A-C4	VVQ1000-51A-C4	_	_	
	One-touch fitting for ø6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6	_	
	One-touch fitting for ø8	_	VVQ1000-51A-C8	VVQ2000-51A-C8	VVQ4000-50B-C8	
l [	One-touch fitting for ø10	_	-	VVQ2000-51A-C10	VVQ4000-50B-C10	
Port	One-touch fitting for ø12	_	_	_	VVQ4000-50B-C12	
B	One-touch fitting for ø1/8"	VVQ1000-50A-N1		_	_	
∢	One-touch fitting for ø5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	_	_	
	One-touch fitting for ø1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7	_	
	One-touch fitting for ø5/16"	_	VVQ1000-51A-N9	VVQ2000-51A-N9	VVQ4000-50B-N9	
	One-touch fitting for ø3/8"	_	ı	VVQ2000-51A-N11	VVQ4000-50B-N11	
	1/4 threaded type port block assembly	_	-	_	SY9000-58A-02□	
	3/8 threaded type port block assembly	_		_	SY9000-58A-03□	
	One-touch fitting for ø8	VVQ1000-51A-C8	ı	_	_	
h l	One-touch fitting for ø10	_	VVQ2000-51A-C10	_	_	
	One-touch fitting for ø12	_		VVQ4000-50B-C12	VVQ4000-50B-C12	
т,	One-touch fitting for ø5/16"	VVQ1000-51A-N9	1	_	_	
- [	One-touch fitting for ø3/8"	_	VVQ2000-51A-N11	VVQ4000-50B-N11	VVQ4000-50B-N11	
	3/8 threaded type port block assembly	_	_	_	SY9000-58B-03□	

### ■ 1/4, 3/8 thread type port block assembly

For A, B port

 $SY9000 - 58A - \frac{02}{03}$ For P, E port SY9000-58B-03

Thread type Nil Rc F G




Note 1) Be careful to avoid damage or contamination of O-rings, as this can cause air leakage.

N NPT Т NPTF

Note 2) When removing a fitting assembly from a valve, after removing the clip, attach tubing or a plug (KQP-□□) to the One-touch fitting, and pull it out while holding the tubing (or plug). If it is pulled out while holding the release button of the fitting assembly (resin part), the release button may be damaged. However, 02 and 03 port block assemblies should be pulled out as they are.


Note 3) Be sure to shut off the power and air supplies before disassembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any

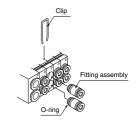

### ■ How to order tie-rod type 10 solenoid valves with manifold block

[SV1000 to SV4000 series]

• Type with manifold block is used when adding stations, etc.

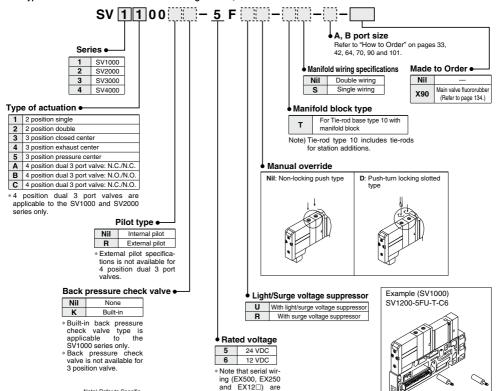

Note) Refer to Specific Product Precautions 2 on page 136.




24 VDC

### **SV** Series

# Manifold Options (Common for Type 16 and 10)

### ■ Relay output module

By adding a relay output module to a SV series manifold, devices up to 110 VAC, 3 A (large type solenoid valves, etc.) can be controlled together with the SV series valves.

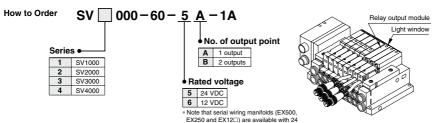

### **Relay Output Module Specifications**

Item		Specifica	ations		
No. of output points	1 output [connector w	vith lead wire (M12)]	2 outputs [connector with lead wire (M12)]		
Output type	Contact type (*	-O2 -O4 'a" contact)	Contact type	O1	
Load voltage	110 VAC	30 VDC	110 VAC	30 VDC	
Load current	3 A	3 A	0.3 A	1 A	
Indicator light	Rec	i	A side: Red B side: Green		
Enclosure		Based on IP67	(IEC60529)		
Current consumption		20 mA o	r less		
Polarity		Non-po	olar		
weight (g)		48			


### Connection Destination (Female Side) Connector Cable

Connector size	pin	Manufacturer	Applicable series	
		Correns Corp.	VA-4D	
		OMRON Corp.	XS2	
M12	4	Azbil Corp.	PA5-41	
		HIROSE ELECTRIC CO., LTD.	HR24	
		DDK Ltd.	CM01-8DP4S	

<sup>\*</sup> This connector is a female connector for ① relay output module and ② single unit/sub-plate.

### ■ Blanking plate assembly

Used in situations where valves will be added in the future or for maintenance.

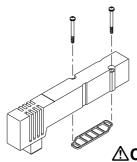

Series	Blanking plate assembly part no.
SV1000	SV1000-67-1A
SV2000	SV2000-67-1A
SV3000	SV3000-67-1A
SV4000	SV4000-67-1A

Mounting screw

M2: 0.16 N·m M3: 0.8 N·m M4: 1.4 N·m

### tightening torques

### ■ SUP/EXH block disk

### [SUP block disk]

By placing a SUP block disk in a manifold valve's pressure supply passage, two different high and low pressures can be supplied to one manifold

### [EXH block disk]

By installing an EXH block disk in a manifold valve's exhaust passage, the valve's exhaust can be separated so that it will not affect other valves. It can also be used on a manifold with mixed positive pressure and vacuum.

Two pieces are required to block EXH on both sides. However, the SV1000 and 2000 series type 10 manifolds require only one piece.)





Cassette base type 16

Tie-rod base type 10

Series	Manifold Model	SUP block disk	EXH block disk
SV1000	10	SV1000-59-1A	SV1000-59-2A
341000	16	SX3000-77-1A	SX3000-77-1A
SV2000	10	SV2000-59-1A	SV2000-59-2A
3V2000	16	SV2000-59-3A	SV2000-59-3A
SV3000	10	SV3000-59-1A	SV3000-59-1A
SV4000	10	SY9000-57-1A	SY9000-57-1A

### ■ Label for block disk

These labels are attached to manifolds in which SUP and EXH block disks have been installed, in order to identify the installed locations. (Three sheets each included.)


### SV1000 -74 -1A

Label for SUP block disk PP

Label for EXH block disk ſΕ

Label for SUP/EXH block disk P

\* When a block disk is concurrently ordered by specifying on the manifold specification sheet, etc., a label will be stuck on the position where block disk is mounted

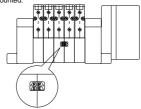


### ■ Silencer (Compact resin type/One-touch fitting connection)



(mm) Dimensions С Model Α В ød SV1000 (For Ø8) AN15-C08 45 13 20 ø8 SV2000 (For ø10) AN20-C10 57.5 16.5 30.5 ø10 SV3000, SV4000 (For Ø12) AN30-C12 71.5 43.5 ø12

#### ■ Plua

These are inserted in unused cylinder ports and P, E ports.

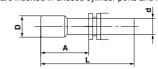


Applicable fitting size d	Model	Α	L	D
ø4	KQ2P-04	16	32	ø6
ø6	KQ2P-06	18	35	ø8
ø8	KQ2P-08	20.5	39	ø10
ø10	KQ2P-10	22	43	ø12
ø12	KQ2P-12	24	44.5	ø14
ø1/8"	KQ2P-01	16	31.5	ø5
ø5/32"	KQ2P-03	16	32	ø6
ø1/4"	KQ2P-07	18	35	ø8.5
ø5/16"	KQ2P-09	20.5	39	ø10
ø3/8"	KQ2P-11	22	43	ø11.5

### ■ Circular connector/Cable assembly (26 pins)

### AXT100 - MC26 -

### Lead Wire Length

Part no.	L dimension
AXT100-MC26-015	1.5 m
AXT100-MC26-030	3 m
AXT100-MC26-050	5 m

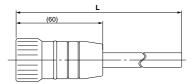

Plug terminal no. (arrangement as seen from lead wire side)



### Circular Connector Cable Assembly Terminal No.

	Lead wire color	Dot marking			
1	Black	None			
2	Brown	None			
3	Red	None			
4	Orange	None			
(5)	Yellow	None			
6	Pink	None			
7	Blue	None			
8	Purple	White			
9	Gray	Black			
10	White	Black			
(1)	White	Red			
(12)	Yellow	Red			
(13)	Orange	Red			
(14)	Yellow	Black			
(15)	Pink	Black			
(16)	Blue	White			
17)	Purple	None			
(18)	Gray	None			
(19)	Orange	Black			
20	Red	White			
21)	Brown	White			
22	Pink	Red			
23	Gray	Red			
24)	Black	White			
25	White	None			
26	White	None			

Note) Terminal no.26 is connected to 25 inside the connector.


### ■ D-sub connector/Cable assembly (25 pins)

### AXT100 - DS25 - □

### Lead Wire Length

Part no.	L dimension
AXT100-DS25-015	1.5 m
AXT100-DS25-030	3 m
AXT100-DS25-050	5 m

When a commercially available connector is required, use a 25 pin female connector conforming to MIL-C24308.

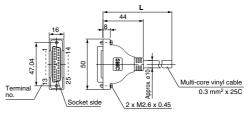

### D-sub Connector Cable Assembly Terminal No.

Terminal no.	Lead wire color	Dot marking	
1)	Black	None	
2	Brown	None	
3	Red	None	
4	Orange	None	
(5)	Yellow	None	
6	Pink	None	
7	Blue	None	
8	Purple	White	
9	Gray	Black	
10	White	Black	
11)	White	Red	
12	Yellow	Red	
13	Orange	Red	
(14)	Yellow	Black	
15	Pink	Black	
16	Blue	White	
17	Purple	None	
18	Gray	None	
19	Orange	Black	
20	Red	White	
21)	Brown	White	
22	Pink	Red	
23	Gray	Red	
24	Black	White	
25	White	None	

## Circular Connector, D-sub Connector Cable Assembly Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Withstand voltage VAC, 1 min.	1000
Insulation resistance, MΩkm, 20°C	5 or less

Note) The minimum inside bending radius for each cable is 20 mm.


### ■ Flat ribbon cable/Cable assembly

AXT100-FC 20

### Flat ribbon cable connector

Cable	Assembly part no.									
length (L)	26 pins	20 pins	10 pins							
1.5 m	AXT100-FC26-1	AXT100-FC20-1	AXT100-FC10-1							
3 m	AXT100-FC26-2	AXT100-FC20-2	AXT100-FC10-2							
5 m	AXT100-FC26-3	AXT100-FC20-3	AXT100-FC10-3							

- \* When using a standard commercial connector, use a 26-pin, 20-pin, or 10-pin type connector conforming to MIL-C-83503 with strain relief.
- \* Cannot be used for movable wiring
- $\ast\,$  Lengths other than the above are also available. Please contact SMC for details.

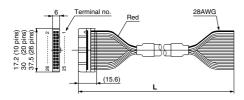

Connector Manufacturers' Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited

L dimension 885.5

898 910.5

- Japan Aviation Electronics Industry, Limited
- . J.S.T. Mfg. Co., Ltd.
- · Oki Electric Cable Co., Ltd.


### ■ Connector cable for M12 waterproof connector (Female side)

Connector manufacturers' example Correns Corp. OMRON Corp. Azbil Corp. HIROSE ELECTRIC CO., LTD. DDK Ltd.

### ■ SV1000/2000 and the EX500 series input unit DIN rail dimensions and mass

VZ1000 - 11 - 1 -

\* As for \( \subseteq \), enter the number from the DIN rail dimensions table.

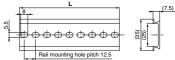


No.	0	1	2	3	4	5	6	7	8	9
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5
Mass (g)	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9
No.	10	-11	12	13	14	15	16	17	18	19
L dimension	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5
Mass (g)	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1	60.4
No.	20	21	22	23	24	25	26	27	28	29
L dimension	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5
Mass (g)	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9
No.	30	31	32	33	34	35	36	37	38	39
L dimension	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5
Mass (g)	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9	103.1	105.4
No.	40	41	42	43	44	45	46	47	48	49
L dimension	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5
Mass (g)	107.6	109.9	112.1	114.4	116.6	118.9	121.1	123.4	125.6	127.9
No.	50	51	52	53	54	55	56	57	58	59
L dimension	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5
Mass (g)	130.1	132.4	134.6	136.9	139.1	141.4	143.6	145.9	148.1	150.4
No.	60	61	62	63	64	65	66	67	68	69
L dimension	848	860.5	873	885.5	898	910.5	923	935.5	948	960.5
Mass (g)	152.6	154.9	157.1	159.4	161.6	163.9	166.1	168.4	170.6	172.9
No.	70	71								

L dimension 973 985.5 Mass (g) 175.1 177.4

### ■ SV3000 and 4000 DIN rail dimensions and mass

VZ1000-11-4-

\* As for  $\square$ , enter the number from the DIN rail dimensions table.

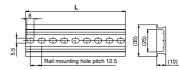


No.	0	-1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	233.5	248	260.5	273	285.5	298	310.5	323	335.5	348
Mass (g)	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7	84.9	88
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41
L dimension	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5	573	585.5	598	610.5
Mass (g)	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8	145	148.1	151.3	154.5
No.	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62
L dimension	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798	810.5	823	835.5	848	860.5	873
Mass (g)	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9	205.1	208.2	211.4	214.5	217.7	220.9
No.	63	64	65	66	67	68	69	70	71												

**ØSMC** 


948 960.5 973 985.5



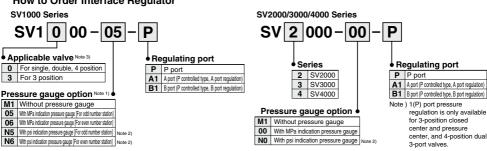

Note 1) In the case of the SV1000 series with a pressure gauge when mounting on the manifold, use caution that the part numbers are different between the odd no. stations and the even no. stations to avoid pressure gauges from interfering from each others.

Note 2) The units with the psi indication are sold only overseas according to the new measurement law in Japan. Note 3) Use caution that the part numbers will differ depending on the one for single/double and 4and 3-position due to the different length of solenoid valves. Also, if the one for 3 position is included in the same manifold, use all the ones for 3-position.

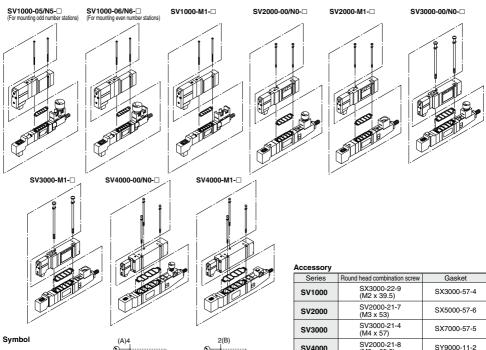

#### (A)4 2(B) 2(B) (EA)5 3(EB) (EA)5 3(EB) (EA)5 3(EB) (P) (P)


### SV2000-21-8 SV4000 (M3 x 69.5)

### Caution **Mounting Screw Tightening Torques**


M2: 0.16 N·m M3: 0.8 N·m M4: 1.4 N·m

124



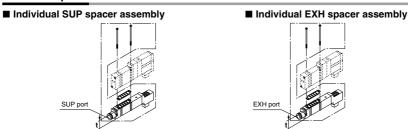

### How to order individual SUP/EXH spacer assembly

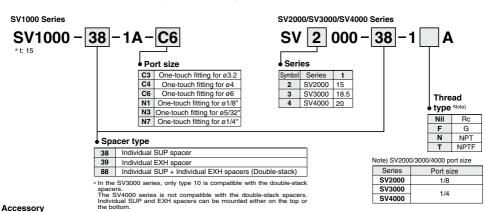

Series	Round head combination screw	Gasket
SV1000	SX3000-22-9	SX3000-57-4
3 1 1 1 1 1 1	(M2 x 39.5)	5A3000-57-4
SV2000	SV2000-21-6	SY5000-11-15
5 V 2 U U U	(M3 x 46)	515000-11-15
SV3000	SV3000-21-3	SY7000-11-11
3 4 3 0 0 0	(M4 x 53)	317000-11-11


SV2000-21-5

(M3 x 60)

SV4000

■ Individual SUP/EXH spacer assembly (Double-stack)


SY9000-11-2

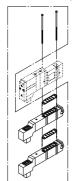

## Single Valve/Sub-plate Type IP67 Compliant

# SV1000/2000/3000/4000 Series

### **How to Order**

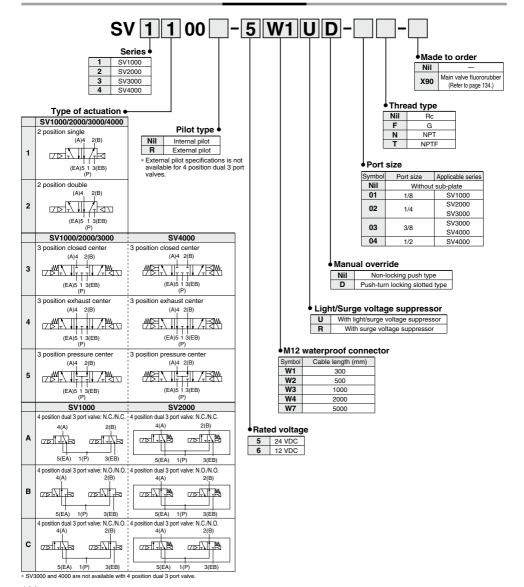

### **SV Series Solenoid Valve Specifications**



Fluid			Air			
Internal pilot	2 positi	on single	0.45 0.7			
operating pressure range (MPa)  External pilot	4 positio	n dual 3 port valve	0.15 to 0.7			
	2 positi	on double	0.1 to 0.7			
	3 positi	on	0.2 to 0.7			
	Operatir	ng pressure range	-100 kPa to 0.7			
operating pressure range (MPa)	2 positi 3 positi	on single, double on	0.25 to 0.7			
Ambient and	l fluid te	mperature (°C)	-10 to 50 (No freezing)			
Max. operating		on single, double	5			
frequency		n dual 3 port valve				
(Hz)	3 positi	on	3			
Manual over	Manual override		Non-locking push type			
wanda over	iiuc		Push-turn locking slotted type			
Pilot exhaust	mothod	Internal pilot	Common exhaust type for main and pilot valve			
r iiot exilaust	memou	External pilot	Pilot valve individual exhaust			
Lubrication			Not required			
Mounting or	ientation	ı	Unrestricted			
Impact/Vibra	tion res	stance (ms <sup>2</sup> )	150/30 (8.3 to 2000 Hz)			
Enclosure			IP67 (Based on IEC60529)			
Electrical en	try		M12 waterproof connector			
Coil rated vo	ltage		24 VDC, 12 VDC			
Allowable voltage fluctuation		ctuation	±10% of rated voltage			
Power consumption (W)			0.6 (With indicator light: 0.65)			
Surge voltag	je suppr	essor	Zener diode			
Indicator ligi	nt		LED			
Aloto\ Impost ros	iotopoo, N	a malfunation agains	ad when it is tested with a drep tester in the axial direction and a			

Note) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz.


Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

### Response Time

Type of actuation	Response time (ms) (at the pressure of 0.5 MPa)								
Type of actuation	SV1000	SV2000	SV3000	SV4000					
2 position single	11 or less	25 or less	28 or less	40 or less					
2 position double	10 or less	17 or less	26 or less	40 or less					
3 position	18 or less	29 or less	32 or less	82 or less					
4 position dual 3 port valve	15 or less	33 or less	_	_					

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)

### **M12 Waterproof Connector Wiring Specifications**

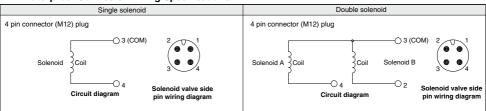

Note) Solenoid valves have no polarity.

### Connection Destination (Female Side) Connector Cable

		_ `	
Connector size	pin	Manufacturer	Applicable series
		Correns Corp.	VA-4D
		OMRON Corp.	XS2
M12	4	Azbil Corp.	PA5-41
		HIROSE ELECTRIC CO., LTD.	HR24
		DDK Ltd.	CM01-8DP4S

 $<sup>* \</sup> This\ connector\ is\ a\ female\ connector\ for\ \textcircled{1}\ relay\ output\ module\ and\ \textcircled{2}\ single\ unit/sub-plate.$ 



### Flow Rate Characteristics/Weight

### SV1000 Series

011000 001				Flow rate characteristics (1)						Weight (g) (2)
Valve model	Valve model Type of actuation		Port size	te 1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
				C [dm³/(s-bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	(Cable length 300 mm)
	2 position	Single		1.0	0.30	0.24	1.1	0.30	0.26	123 (88)
	2 position	Double			0.50	0.24				128 (93)
	3 position	Closed center		0.77	0.28	0.18	0.85	0.30	0.19	
SV1□00-□-01		Exhaust center	Rc 1/8	0.73	0.31	0.18	1.1 [0.55]	0.26 [0.52]	0.24 [0.16]	130 (95)
		Pressure center		1.2 [0.51]	0.24 [0.45]	0.29 [0.14]	0.89	0.47	0.24	
	4 position dual	N.C./N.C.		0.68	0.35	0.18	1.1	0.39	0.29	128 (93)
		N.O./N.O.		0.87	0.31	0.23	0.77	0.44	0.21	1 120 (93)

Note 1) [ ]: Denotes the normal position.

Note 2) ( ): Denotes without sub-plate.

### SV2000 Series

	Valve model Type of actuation			Flow rate characteristics (1)						
Valve model			Port size	ort size 1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			M12 waterproof connector
				C [dm3/(s-bar)]	b	Cv	C [dm3/(s-bar)]	b	Cv	(Cable length 300 mm)
	2 position	Single		2.4	0.41	0.64	4 2.8	0.29	0.66	159 (96)
	2 position	Double		2.4	0.41	0.04		0.23		163 (100)
	3 position	Closed center	Rc 1/4	1.8	0.47	0.50	1.8	0.40	0.47	
SV2□00-□-02		Exhaust center		1.4	0.55	0.44	3.0 [1.2]	0.33 [0.48]	0.72 [0.37]	168 (105)
		Pressure center		3.3 [0.84]	0.36 [0.60]	0.85 [0.28]	1.8	0.40	0.48	
	4 position dual	N.C./N.C.		2.2	0.40	0.55	2.6	0.31	0.60	163 (100)
	4 position dual	N.O./N.O.	]	2.7	0.24	0.57	2.3	0.36	0.54	163 (100)

Note 1) [ ]: Denotes the normal position. Note 2) ( ): Denotes without sub-plate.

### SV3000 Series

						Weight (g) (2)				
Valve model	Type of actuation		Port size	1 -	1 → 4/2 (P → A/B)			5/3 (A/B →	M12 waterproof connector	
				C [dm3/(s-bar)]	b	Cv	C [dm³/(s-bar)]	b	Cv	(Cable length 300 mm)
	2 position	Single		4.1	0.41	1.1	4.1	0.29	1.0	250 (121)
	2 position	Double		4.1	0.41	1.1	4.1	0.23	1.0	253 (124)
SV3□00-□-02	3 position	Closed center	Rc 1/4	3.0	0.43	0.80	2.6	0.41	0.72	26 (132)
		Exhaust center		2.6	0.42	0.71	4.7 [1.7]	0.35 [0.48]	1.1 [0.49]	
		Pressure center		5.3 [2.3]	0.39 [0.49]	1.3 [0.65]	2.2	0.49	0.63	
	2 position	Single		4.9	0.29	1.2	4.5	0.27	1.1	235
	z position	Double		4.5	0.23	1.2	4.5	0.27	1.1	238
SV3□00-□-03	3 position	Closed center	Rc 3/8	3.0	0.40	0.80	2.6	0.45	0.73	
		Exhaust center		2.6	0.42	0.71	4.8 [1.7]	0.35 [0.48]	1.1 [0.34]	246
		Pressure center		5.3 [2.3]	0.31 [0.51]	1.3 [0.64]	2.3	0.45	0.66	

Note 1) [ ]: Denotes the normal position. Note 2) ( ): Denotes without sub-plate.

### SV4000 Series

	374000 Genes										
					Flow rate characteristics (1)						
Valve model	Type of actuation		Port size	1 -	→ 4/2 (P → A	A/B)	4/2 →	5/3 (A/B →	EA/EB)	M12 waterproof connector	
				C [dm3/(s-bar)]	b	Cv	C [dm3/(s-bar)]	b	Cv	(Cable length 300 mm)	
	Opposition	Single		7.9	0.34	2.0	9.6	0.43	2.5	505 (208)	
	2 position Double		7.9	0.54	2.0	9.0	0.43	2.5	509 (212)		
SV4□00-□-03	3 position	Closed center	Rc 3/8	7.5	0.33	1.8	7.3	0.30	1.7	530 (233)	
		Exhaust center		7.2	0.34	1.7	13 [4.0]	0.23 [0.41]	2.8 [0.95]		
		Pressure center		12 [3.3]	0.26 [0.41]	2.8 [0.84]	6.7	0.40	1.9		
	Opposition	Single		8.0	0.48	2.2	10	0.29	2.5	484	
	2 position	Double		0.0	0.40	2.2	10	0.23	2.5	488	
SV4□00-□-04	3 position	Closed center	Rc 1/2	7.6	0.32	1.8	7.3	0.32	1.8		
		Exhaust center		7.3	0.42	2.0	13 [4.7]	0.32 [0.54]	3.6 [1.5]	509	
		Pressure center		12 [3.3]	0.33 [0.51]	3.3 [0.94]	7.4	0.33	1.9		

Note 1) [ ]: Denotes the normal position. Note 2) ( ): Denotes without sub-plate.

### Construction: SV1000/2000/3000/4000 Single Valve/Sub-plate Type




# 2 position single 7 3 4 2 1 6 5 9 4 P 6 6 8


2 position double


(A)4 2(B)


(EA)5 1 3(EB)

(P)

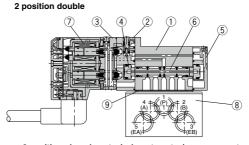

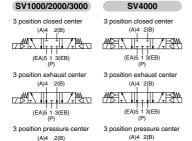

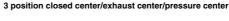

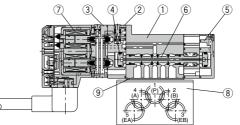

# (EA)5 1 3(EB) (P) Component Parts

No.	Description	Material	Note
(1)	Body	Aluminum die-casted	White
(1)	Бойу	(SV1000 is zinc die-casted)	write
2	Adapter plate	Resin	White
3	Pilot body	Resin	White
4	Piston	Resin	_
(5)	End plate	Resin	White
6	Spool valve assembly	Aluminum/HNBR	_
7	Molded coil	_	Gray

(EA)5 1 3(EB)



Mounting screw tightening torques

M2: 0.16 N·m M3: 0.8 N·m M4: 1.4 N·m

### **Replacement Parts**

No.	Description		Part no.					
INO.	Description	SV1□00	SV2□00	SV3□00	SV4□00	Note		
	0	SY3000-27-1□	SY5000-27-1□	1/4: SY7000-27-1	3/8: SY9000-27-1	Aluminum die-casted		
(8)	8 Sub-plate	SY3000-27-1	515000-27-1	3/8: SY7000-27-2	1/2: SY9000-27-2	Refer to thread types on page 126 for □.		
9	Gasket	SY3000-11-25	SY5000-11-18	SY7000-11-14	SY9000-11-2			
_	Round head combination screw	SX3000-22-2 (M2 x 24)	SV2000-21-1 (M3 x 30)	SV3000-21-1 (M4 x 35)	SV2000-21-2 (M3 x 40)	For valve mounting (Matt nickel plated)		


Note) Round head combination screw requires 2 pcs. per one valve for the SV1000, SV2000 and SV3000 series. For the SV4000 series, it requires 3 pcs.




### SV Series

### **Dimensions: SV1000 Series**

## 2 position single/double, 4 position dual 3 port [M12 waterproof connector type] SV1 $\square$ 00(R)- $\square$ W $\square$ -01 $\square$

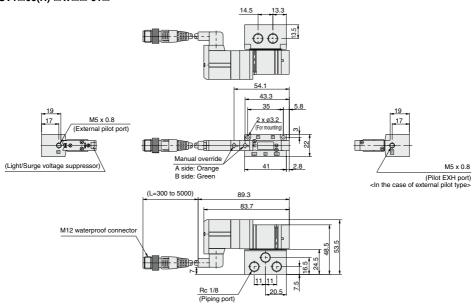

### 3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

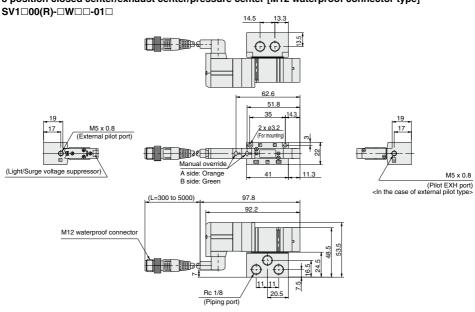


**SMC** 


### **Dimensions: SV2000 Series**

### 2 position single/double, 4 position dual 3 port [M12 waterproof connector type]

SV2□00(R)-□W□□-02□

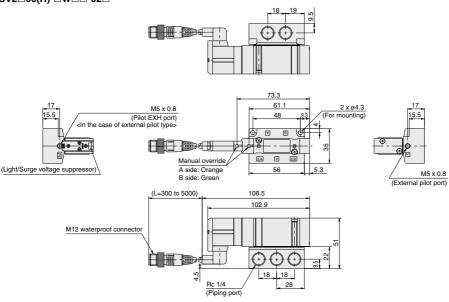


### 3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

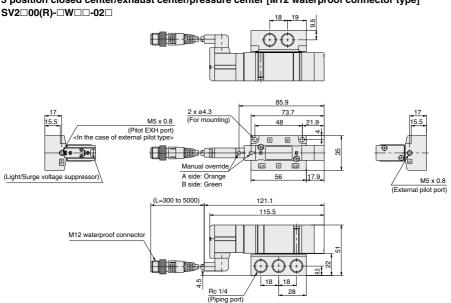


### SV Series

### **Dimensions: SV3000 Series**

### 2 position single/double [M12 waterproof connector type]

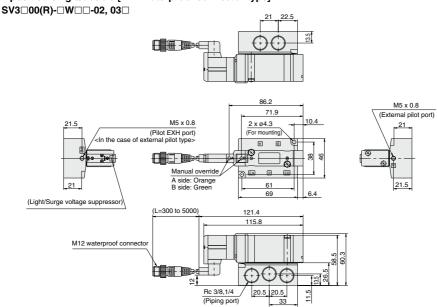


### 3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

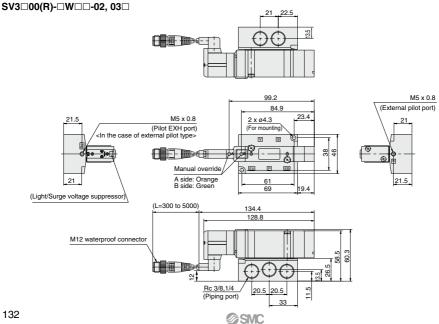


### **Dimensions: SV4000 Series**

### 2 position single/double [M12 waterproof connector type]

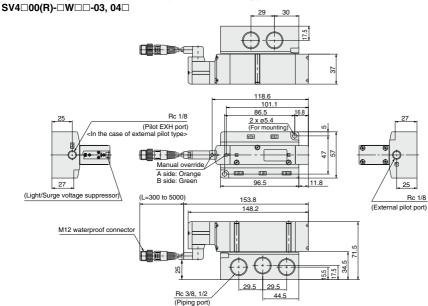

### 3 position closed center/exhaust center/pressure center [M12 waterproof connector type]

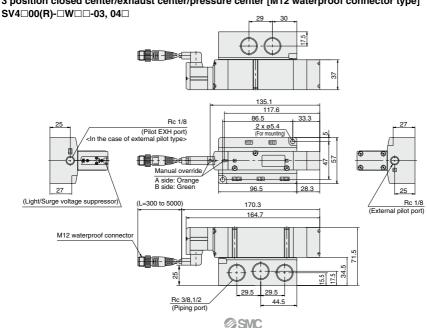

# SV Series Made to Order Specifications




Please contact SMC for detailed dimensions, specifications and lead times.

### 1 Main Valve Fluororubber Specifications

Symbol -X90

Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.

- 1. When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.
- 2. When ozone enters or is generated in the air supply.

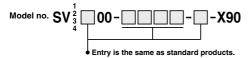

Note) Because in the -X90 series fluororubber is used for only main valve, the rubber parts of the application/usage in conditions requiring heat resistance should be avoided.



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### Environment


### 

- 1.Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water, steam, or where there is direct contact with any of these.
- Products compliant with IP65 and IP67 enclosures (Based on IEC60529) are protected against dust and water, however, these products cannot be used in water.
- Products compliant with IP65 and IP67 enclosures satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.
- 4. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids. Liquid filtration through the exhaust port of the silencer can cause damage to the valve.

### **Manual Override Operation**


### **∆**Warning

Handle carefully, as connected equipment can be actuated through manual override operation.

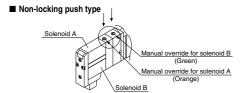

### ■ Push-turn locking slotted type

After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking type.  $\parallel$ 

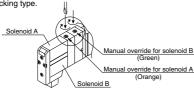

### 

When locking the manual override with the push-turn locking slotted type, be sure to push it down before turning.

Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

### **Exhaust Restriction**

### **∧** Caution

Since Series SV is a type in which the pilot valve exhaust joins the main valve exhaust inside the valve, use caution, so that the piping from the exhaust port is not restricted.

### SV Series Used as a 3 Port Valve

### **∧** Caution

### In the case of using a 5 port valve (as a 3 port valve)

The SV series can be used as normally closed (N.C.) or normally open (N.O.) 3 port valves by closing one of the cylinder ports (A or B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3 port valve is required.

Plug	position	B port	A port
Actu	uation	N.C.	N.O.
solenoids	Single	(A)4 2(B) (EA)5 1 3(EB)	(A)d 2(B) (EA)S 1 2(EB)
Number of solenoids	Double	(A)4 2(B) (EA)5 1 3(EB)	(A)4 2(B) (EA)5 1 3(EB)

### Light/Surge Voltage Suppressor

### 

Solenoid valves have no polarity. Light/Surge voltage suppressor

Single solenoid



Double solenoid, 3 position type



### Surge voltage suppressor

Single solenoid




Double solenoid, 3 position type



### **Light Indication**

### **⚠** Caution

When equipped with indicator light and surge voltage suppressor, the light window turns red when solenoid A is energized, and it turns green when solenoid B is energized.

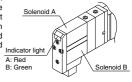




Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### **Connector Entry Directions**

### ∕!∖ Caution

Connector entry directions for D-sub connectors and flat ribbon cables can be changed. To change the connector's entry direction, press the levers on both sides of the connector, take it off, and change the direction as shown in the drawing. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

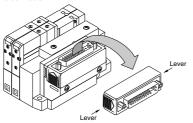

### Manifold Mounting

### ∕.\ Caution

There will be slight variations in the width of manifold blocks due to tolerance for the stacking manifold type.

As the manifold is made up of a combination of manifold blocks, there will be an error due to accumulated tolerance between the actual pitch dimensions of the mounting holes used to secure the manifold and the values stated in the catalog. Keep this in mind when increasing the number of stations.

### Manifold Block Width Tolerance Chart


Series	Block width tolerance
SS5V1-(W)10□ series	±0.15 mm
SS5V2-(W)10□ series	±0.2 mm
SS5V3-(W)10□ series	±0.15 mm
SS5V4-(W)10□ series	±0.15 mm

### How to Order Manifold

### **∕** Caution

The letter "S" or "D" is indicated on manifold blocks for the SV series as shown below. This indication refers to the type of substrate assembly (single wiring or double wiring) inside the manifold blocks.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification (D). In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification (S) and double wiring specification (D) on a manifold specification sheet. (Note that double, 3 or 4 position valves cannot be used for manifolds blocks with single wiring specification (S).)

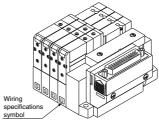

### **Substrate Assemblies inside Manifolds**

### **∕**∆Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

### **One-touch Fittings**

### **∧** Caution

### 1. Tube attachment/detachment for One-touch fittings

### 1) Attaching of tube

- (1) Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, there is the danger that the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Also allow some extra length in the tube.
- (2) Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- (3) After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

### 2) Detaching of tube

- (1) Push in the release button sufficiently, and push the collar evenly at the same time.
- (2) Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- (3) When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### Other Tubing Brands

### **⚠** Caution

- When using tube other than SMC brand, confirm that the following specifications are satisfied with respect to the outside diameter tolerance of the tube.
  - 1) Nylon tubing within ±0.1 mm
  - 2) Soft nylon tubing within ±0.1 mm
  - 3) Polyurethane tubing within +0.15 mm

within -0.2 mm

Do not use tubing which does not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube pulling out after connection.

### Back Pressure Check Valve Built-in Type

### **⚠** Caution

- 1. Valves with built-in back pressure check valve is to protect the back pressure inside a valve. For this reason, use caution the valves with external pilot specification cannot be pressurized from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. For details, please contact SMC.
- 2. Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. The back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

### **Continuous Duty**

### **∕** Caution

If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. In particular, if three or more adjacent stations on the manifold are energized simultaneously for extended periods of time or if the valves on A side and B side are energized simultaneously for long periods of time, take special care as the temperature rise will be greater. In such cases, if it is possible to select a valve with a power-saving circuit, be sure to do so.

### **UL Approved Product**

### **⚠** Caution

When conformity to UL is required, the product should be used with a UL1310 Class 2 power supply.

The product is a UL approved product only if it has a cause mark on the body.





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### Interface Regulator

### **⚠** Caution

**Specifications** 


- II	nterface regulator	SV1□00-□-□	SV2000-□-□	SV3000-□-□	SV4000-□-□				
	Applicable model	SV1000	SV2000	SV3000	SV4000				
Regul	ating port		Р, л	4, В					
Set pr	essure range		0.1 to 0	0.7 MPa					
Maxim	um operating pressure	0.7 MPa							
Fluid		Air							
Ambie	ent and fluid temp.		Maximum at 50°C						
Weight	With pressure gauge	38.4 g (43.4 g)	86.5 g	103.8 g	178.2 g				
weight	Without pressure gauge	32 g (37 g)	80.3 g	97.6 g	171.8 g				


Note 1) Apply pressure from P port in the base for interface regulator.

Note 3) Gasket and mounting screws are included in the weight.


### Flow Rate Characteristics




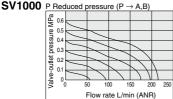


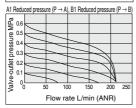


### SV2000 P Reduced pressure (P → A,B)

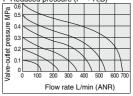

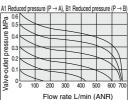

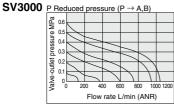

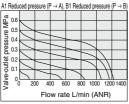

### How to Calculate the Flow Rate

For obtaining the flow rate, refer to the Web Catalog

Note 4) ( ): Denotes the values of SV1300.

Note 2) P port pressure regulation is only available for closed center, pressure center and 4-position dual 3-port valve.



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### Serial Wiring EX500/EX250/EX260/EX120 Precautions

### **⚠** Warning

 These products are intended for use in general factory automation equipment.

Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.

2. Do not use in an explosive atmosphere, environment with inflammable gases, or corrosive atmosphere.

This can cause injury or fire, etc.

Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by personnel with specialized knowledge.

There is a danger of electrocution, injury or fire, etc.

- Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.
- Do not remodel these products, as there is a danger of injury and damage.
- 6. Do not wipe the product with chemicals, etc.

### 

- Read the operation manual carefully, strictly observe the precautions and operate within the range of the specifications.
- Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction, etc.
- In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause malfunction, damage to the unit, electrocution or fire, etc.
- 4. Do not touch connector terminals or internal substrates when current is being supplied. There is a danger of malfunction, damage to the unit or electrocution if connector terminals or internal substrates are touched when current is being supplied.

Be sure that the power supply is OFF when adding or removing manifold valves or input blocks, etc., or when connecting or disconnecting connectors.

- Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.
- Keep wire scraps and other extraneous material from getting inside these products. This can cause fire, failure or malfunction, etc.
- 7. Give consideration to the operating environment depending on the type of enclosure being used.

To achieve IP65 or IP67 protection, provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of input units, input bolcks, SI units and manifold valves, etc. Provide a cover or other protection for applications in which there is constant exposure to water.

8. Obey the proper tightening torque.

There is a possibility of damaging threads if tightening exceeds the tightening torque range.

- Provide adequate protection when operating in locations such as the following:
  - · Where noise is generated by static electricity, etc.
  - . Where there is a strong electric field
  - · Where there is a danger of exposure to radiation
  - . When in close proximity to power supply lines

### **⚠** Caution

- When these products are installed in equipment, provide adequate protection against noise by using noise filters,
- 11. Since these products are components that are used after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.
- 12. Do not remove the name plate.
- 13. Perform periodic inspections and confirm normal operation. It may otherwise be impossible to guarantee safety due to unexpected malfunction or erroneous operation.
- Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the inside the product is likely to be adversely effected.

- 15. Do not use in direct sunlight.
  - Do not use in direct sunlight. It may cause malfunction or damage.
- 16. Do not use in places where there is radiated heat around it. Such a place is likely to cause malfunction.

### **Power Supply Safety Instructions**

### **∧** Caution

- Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for input and control units).
- Use the following UL approved products for DC power supply combinations.
  - Controlled voltage current circuit conforming to UL508
     Circuit uses the secondary coil of an isolated transformer as the power supply, satisfying the following conditions.
    - Max. voltage (with no load): 30 Vrms (42.4 V peak) or less
    - Max. current: (1) 8 A or less (including shorts), and

(2) When controlled by a circuit protector (fuse, etc.) with the following rating

No-load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Over 20 [V] to 30 [V]	100
Over 20 [v] to 30 [v]	Peak voltage value

2) A circuit (class 2 circuit) with maximum 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit confirming to UL1310, or a class 2 transformer confirming to UL1585

### Safety Instructions for Cable

### **∧** Caution

- 1. Be careful of mis-wiring. This can cause malfunction, damage and fire in the unit.
- 2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high voltage lines. Otherwise, this can cause malfunction.
- Check wiring insulation, as defective insulation can cause damage to the unit due to excessive voltage or current.
- 4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### **EX600 Precautions**

### Design/Selection

### **⚠** Warning

1. Use this product within the specification range.

Using beyond the specified specifications range can cause fire, malfunction, or damage to the system.


Confirm the specifications when operating.

- 2. When using for an interlock circuit:
  - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
  - Perform an inspection to check that it is working properly.

This may cause possible injury due to malfunction.

### 

- When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.
- 2. Use this product within the specified voltage range.
  Using beyond the specified voltage range is likely to cause the units and connecting devices to be damaged or to malfunction.
- The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.

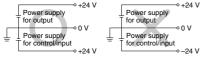

 Do not install a unit in a place where it can be used as a foothold.

Applying any excessive load such as stepping on the unit by mistake or placing a foot on it, will cause it to break.

5. Keep the surrounding space free for maintenance.

When designing a system, take into consideration the amount of free space needed for performing maintenance.

6. Do not remove the name plate.

Improper maintenance or incorrect use of operation manual can cause failure and malfunction. Also, there is a risk of losing conformity with safety standards.

7. Beware of inrush current when the power supply is turned on.

Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the unit to malfunction.

### Mounting

### **∧** Caution

- 1. When handling and assembling units:
  - Do not touch the sharp metal parts of the connector or plug.
  - Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with seals.

 When joining units, take care not to get fingers caught between units.

### Mounting

### **∧** Caution

2. Do not drop, bump, or apply excessive impact.

Otherwise, the unit can become damaged, malfunction, or fail to function

3. Observe the tightening torque range.

Tightening outside of the allowable torque range will likely damage the screw.

IP67 cannot be guaranteed if the screws are not tightened to the specified torque.

When lifting a large size manifold solenoid valve unit, take care to avoid causing stress to the valve connection joint.

The connection parts of the unit may be damaged.

Because the unit may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.

5. When placing a manifold, mount it on a flat surface.

Torsion in the whole manifold can lead to trouble such as air leakage or defective insulation.

### Wiring

### **∧** Caution

 Confirm grounding to maintain the safety of the reduced wiring system and for anti-noise performance.

Provide a specific grounding as close to the unit as possible to minimize the distance to grounding.

2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.

Wiring applying repeated bending and tensile stress to the cable can break the circuit.

3. Avoid miswiring.

If miswired, there is a danger of malfunction or damage to the reduced wiring system.

Do not wire while energizing the product.

There is a danger of malfunction or damage to the reduced wiring system or input/output equipment.

Avoid wiring the power line and high pressure line in parallel.

Noise or surge produced by signal line resulting from the power line or high pressure line could cause malfunction. Wiring of the reduced wiring system or input/output device and the power line or high pressure line should be separated from each other.

6. Confirm the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.



SMC



Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### **EX600 Precautions**

### Wiring

### **∕** Caution

7. When a reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause malfunction.

8. When connecting wires of input/output device or Handheld Terminal, prevent water, solvent or oil from entering inside from the connecter section.

This can cause damage, equipment failure or malfunction.

9. Avoid wiring patterns in which excessive stress is applied to the connector.

This may cause malfunction or damage to the unit due to contact failure.

### Operating Environment

### **⚠** Warning

1. Do not use in an atmosphere containing an inflammable gas or explosive gas.

Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

### ∕**.**∖ Caution

1. Select the proper type of enclosure according to the environment of operation.

IP65/67 is achieved when the following conditions are met.

- 1) Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors
- 2) Suitable mounting of each unit and manifold valve.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to EX600-D□□E or EX600-D□□F, manifold enclosure is IP40.

Also, the Handheld Terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

2. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause damage or malfunction. The effect of countermeasures should be checked in

1) Where noise is generated by static electricity, etc.

- individual equipment and machine. 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation
- 4) When in close proximity to power supply lines

### **Operating Environment**

### **∕** Caution

3. Do not use in an environment where oil and chemicals are used.

Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the unit even in a short period of time.

4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.

This may damage the unit and cause it to malfunction.

5. Do not use in locations with sources of surge generation.

Installation of the unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.

6. Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.

When a surge generating load is directly driven, the unit may be damaged.

- 7. The product is CE/UKCA marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.
- 8. Keep dust, wire scraps and other extraneous material from getting inside the product.

This may cause malfunction or damage.

9. Mount the unit in such locations, where no vibration or shock is affected.

This may cause malfunction or damage.

10. Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the internal unit is likely to be adversely effected

11. Do not use in direct sunlight.

Do not use in direct sunlight. It may cause malfunction or

12. Use this product within the specified ambient temperature range.

This may cause malfunction.

13. Do not use in places where there is radiated heat around it.

Such a place is likely to cause malfunction.





Be sure to read this before handling the products. For safety instructions and 3/4/5-port solenoid valve precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

### **EX600 Precautions**

### Adjustment/Operation

### **⚠** Warning

Do not perform operation or setting with wet hands.
 There is a risk of electrical shock.

#### <Handheld Terminal>

2. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

Otherwise, injury or equipment damage could result.

Incorrect setting of parameters can cause malfunction. Be sure to check the settings before use.

This may cause injury or equipment damage.

### **↑** Caution

 Use a watchmaker's screwdriver with thin blade for the setting of each switch of the SI Unit.
 When setting the switch, do not touch other unrelated parts.

This may cause parts damage or malfunction due to a short circuit.

Provide adequate setting for the operating conditions.Failure to do so could result in malfunction.

Refer to the operation manual for setting of the switches.

3. For the details of programming and address setting, refer to the manual from the PLC manufacturer.

The content of programming related to protocol is designed by the manufacturer of the PLC used.

### <Handheld Terminal>


4. Do not press the setting buttons with a sharp pointed object.

This may cause damage or malfunction.

5. Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI Unit, the Valve Plate to connect the manifold and SI Unit is not mounted. Use attached valve fixing screws and mount the Valve Plate.

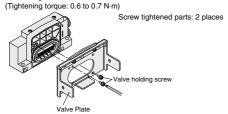

### Maintenance

### **⚠** Warning

 Do not disassemble, modify (including circuit board replacement) or repair this product.

Such actions are likely to cause injuries or breakage.

- 2. When an inspection is performed,
  - . Turn off the power supply.
  - Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.

Unexpected malfunction of system components and injury can result.

### **⚠** Caution

- 1. When handling and replacing the unit:
  - Do not touch the sharp metal parts of the connector or plug.
  - Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with seals.

 When joining units, take care not to get fingers caught between units.
 Injury can result.

2. Perform periodic inspection.

Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

After maintenance, make sure to perform an appropriate functionality inspection.

In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.

4. Do not use benzene and thinner for cleaning units.

Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.

If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

### Other

### **↑** Caution

 Refer to the catalog of each series for Common Precautions and Specific Product Precautions on manifold solenoid valves.

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc. EtherNet/IP® is a registered trademark of ODVA, Inc. CompoNet® is a registered trademark of ODVA, Inc. EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

